

Manual

# Hammer drill


## ROTO-3/8P6

**0.73 Hp**

Power

**3/8"**

Chuck

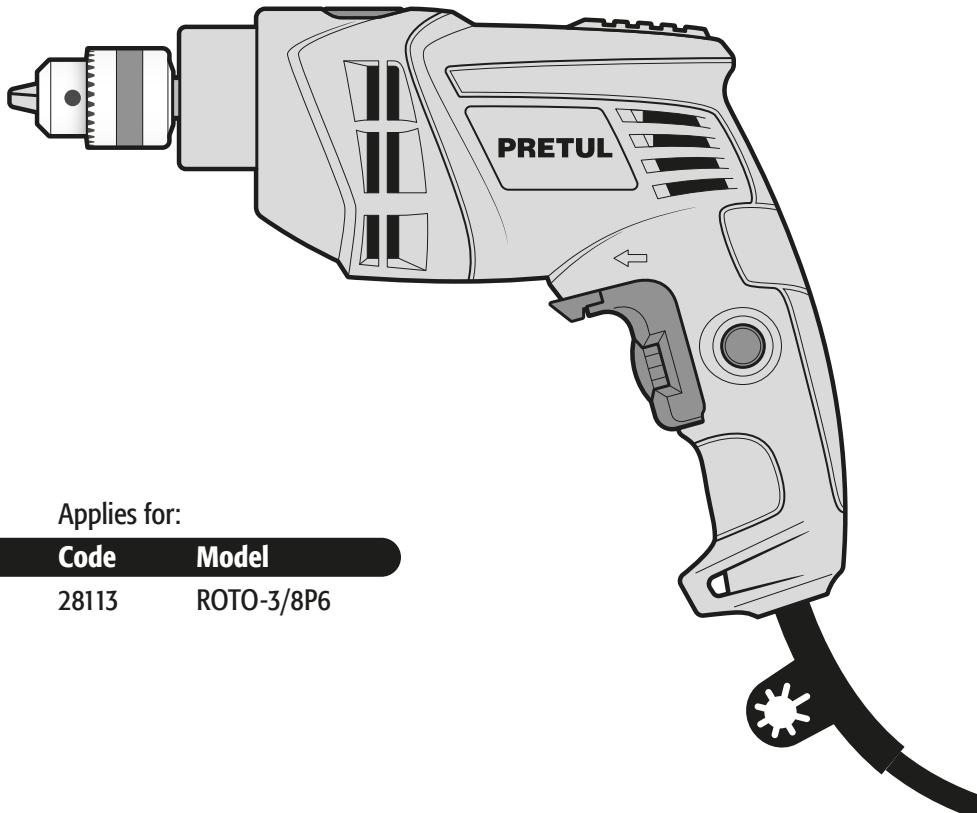

Applies for:

**Code**

**Model**

28113

ROTO-3/8P6

**CAUTION**



Read this manual thoroughly  
before using the tool.




Technical Data .....	3
Power Requirements .....	3
 General power tool safety warnings .....	4
 Safety warnings for drills and hammer drills .....	5
Parts .....	6
Start Up .....	7
Maintenance .....	8
Notes .....	9
Authorized Service Centers .....	11
Warranty Policy .....	12

**CAUTION**

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

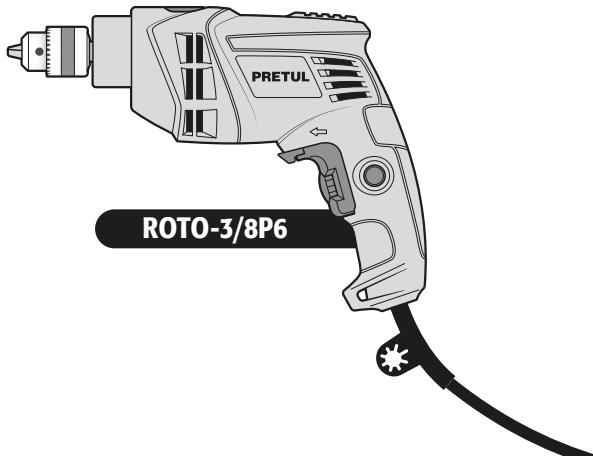

## ROTO-3/8P6

Code •	28113	
Description •	Hammer drill	
Voltage •	127 V~	
Frequency •	60 Hz	
Current •	4.2 A	
Power •	0.73 Hp	
Speed •	0 - 3 000 RPM	Impact • 0 - 48 000 BPM
Chuck •	3/8"	
Drilling Capacity •	Wood 3/4"   Concrete 3/8"   Metal 3/8"	
Conductors •	18 AWG x 2C with insulating temperature of 221 °F	
Insulating •	Class II	IP Grade • IP20
Duty Cycle •	20 minutes work per 10 minutes idle. Maximum 1 hour 30 minutes per day.	

Power Cord Grips used in this product: Type Y.

Tool Build Quality: Reinforced insulation.

Thermal insulation on motor winding: Class B.


**WARNING** Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a  TRUPER® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

**WARNING** Before gaining access to the terminals all power sources should be disconnected.



## Power Requirements

**WARNING** Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminate the need of both a grounded third power cord with three prongs or a grounded power connection.

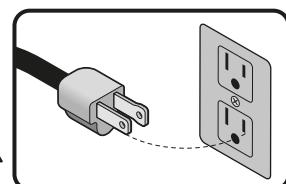

**WARNING** When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension gauge from 5.91' to 49.2'	higher than 49.2'
from 0 A and up to 10 A	3 (one grounded)	18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A		14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

\* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

**WARNING** When operating power tools outdoors, use a  VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



**⚠ WARNING!** Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. Save all warnings and instructions for future references.

**Work area**

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.

**Electrical Safety**

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

**Personal safety**

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

**General power tool  
safety warnings**

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes or long hair may get caught in moving parts.



If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

**Power Tools Use and Care**

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.



Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.



Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

**Service**

Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.



This tool is in compliance with  
the Official Mexican Standard  
(NOM - Norma Oficial Mexicana).

# Safety warnings for drills and hammer drills

**PRETUL®**

## Choose the right bit

- CAUTION** • Choose the right bit for the work piece. It reduces the risk of severe injury and makes the job easier.
- To drill concrete or stone, use bits specifically designed for concrete.
  - To work on metal or plastic, use bits suitable for metal. Sizes encompass a minimum of 0.05" (0.04" for a 0.5" chuck) and up to the chuck maximum capacity.
  - On wood, use regular bits suitable for wood. In any case, to drill 0.25" or smaller orifices, use bits designed to drill on metal.
  - Do not try using bits exceeding the chuck capacity.

## Before using the hammer drill

- Before starting to work with the drill, take a few minutes to assess the job to be done and double-check all the safety caution rules.

**WARNING** • Fit the bit into the chuck. Remove the chuck wrench before drilling. Failure to follow this instruction shoots out the chuck wrench with great speed and cause severe injury.


**DANGER** • Before drilling walls, floors or ceiling, look for any built-in objects, like power cables and conductors or pipes.

**DANGER** • Verify the switch is in the OFF position (See page 7 Operation and control) before connecting the drill. Otherwise, it can unexpectedly start operating and could cause sever injuries.


**CAUTION** • Turn off and disconnect the tool before reversing the chuck's direction as well as fitting or replacing bits.

## While operating the hammer drill

- Use the auxiliary handles, if supplied with the tool. Loss of control may result in personal injury.
- Hold the tool by the isolated parts. The cutting part of bit could come into contact with hidden wiring or with its own power cord. Making contact with a power cord causes the tool metal parts get electrified and may result in electric shock to the user.
- Do not force the tool to excessive workloads.
- CAUTION** • Turn off the hammer drill immediately if the bit gets stuck into de work piece. Then, remove the bit off the work piece. Do not try removing stuck bits turning on and off the tool.
- Do not apply too much force on the tool in order to accelerate the drilling procedure. The bit could get damaged and the tool would loose efficiency and useful life.
- WARNING** • A large diameter bit causes a higher reactive force leading to losing control over the tool. To avoid this possibility, firmly hold the tool with both hands and keep balanced footing. Drill at 90°
- Be prepared to relax the drilling force when the bit goes through the material. Sudden movements could break the bit or damage the hammer drill.
- CAUTION** • Do not touch the bit or the orifices immediately after drilling. Wait until they cool down to handle them. Do not try to cool them down using water or oil.
- Immediately after using do not set the tool where there are particles and / or dust. They can be absorbed into the tool mechanism and cause damage.
- Use earplugs when using the hammer drill. Exposure to noise can cause hearing loss.
- Use dust mask and dust extractor if necessary. Remember that materials such as asbestos, paint with lead, additives, some types of wood, metals or minerals are highly toxic.
- Use safety glasses.

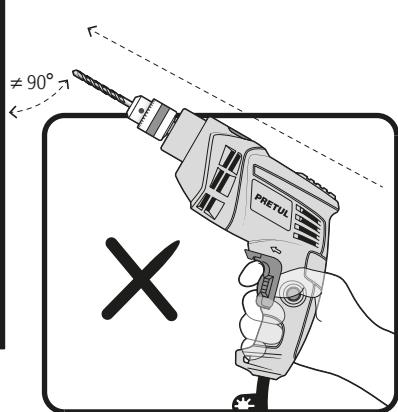


Wrong way to operate the hammer drill.

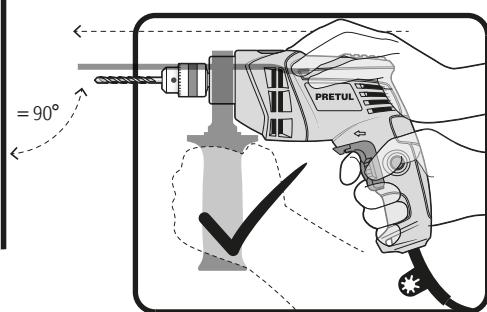

Right way to operate the hammer drill.



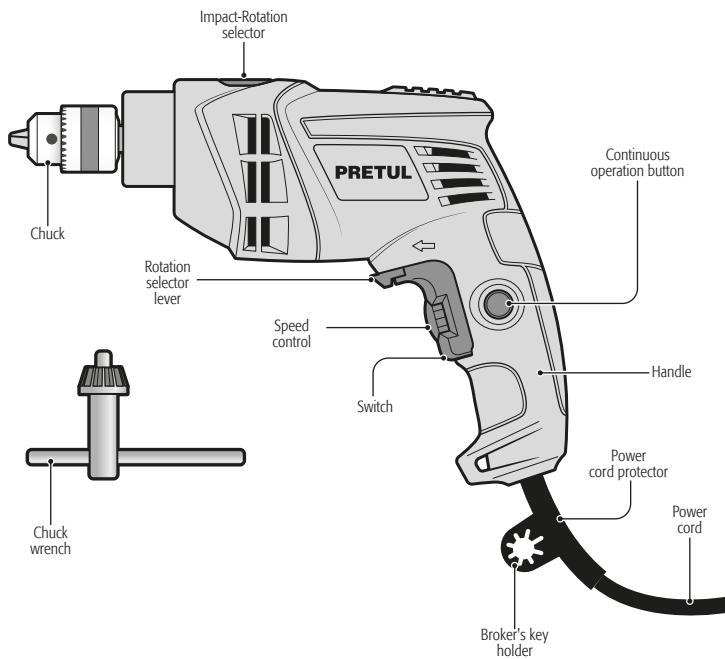


# Start Up

**PRETUL®**

## Bit fitting

- Put the bit into the chuck until it stops. Fasten with the chuck wrench and tighten alternately the chuck into each of the orifices.

**⚠ WARNING** Clean the burrs and any other foreign objects of the drill and the broker, otherwise the drill cannot get tight and cause serious personal injury.

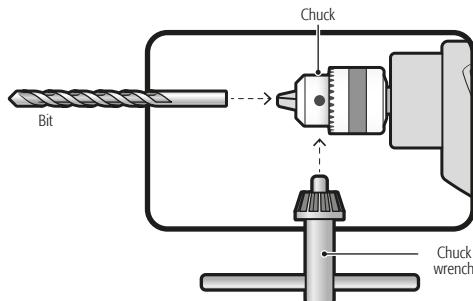


## Turn on and operation control

- Intermittent operation:

Connect the plug into the power inlet.  
Press the switch (A) to start the hammer drill.  
To stop, just release the switch.


- Continuous Operation:

Connect the plug into the power inlet.  
Press the switch (A) and block it pressing the continuous use button (B).  
To stop, press and then, release the switch.

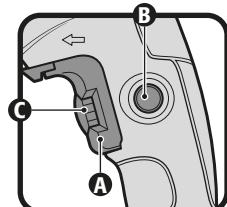

## Speed control


- The tool can run in different speeds. Select by adjusting speed control (C) in the switch.
- Turn speed control clockwise to increase the hammer drill speed and torsion.
- Turn counterclockwise to lessen speed and torsion.

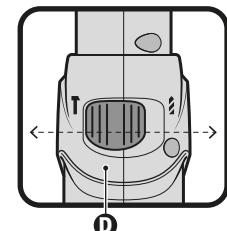

## Changing from hammer drill to drill

- To drill concrete, floor tile or materials of similar hardness, move the impact-rotation selector (D) completely into the IMPACT (➡) position. The bit will simultaneously impact and rotate onto the material.
- To drill metal, wood or plastic, move the impact-rotation selector completely into the ROTATION (↔) position. The bit will rotate onto the material.

**⚠ WARNING** Do not try to drill metal; wood or plastic with the hammer drill into IMPACT (➡) mode setting. Otherwise the tool efficiency will lessen and the bit tip would get damaged.

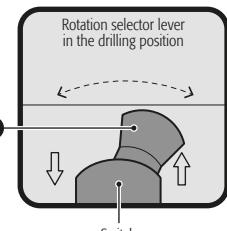


## Rotation direction

- To get the bit to rotate forward and drill, move the rotation selector lever (E) towards the arrow pointing the chuck.
- To get the bit go reverse and use the tool as a screwdriver, move the rotation selector lever towards the arrow pointing the hammer drill handle.

**⚠ WARNING** Never use the tool in reverse when the impact-rotation selector is in the IMPACT (➡) position, otherwise, the impact system will be severely damaged.

## Chuck Replacement

- Remove the auxiliary handle.
- Open the chuck jaws all the way.
- Using a screwdriver remove the left-threaded safety screw with a clockwise movement.
- Fit the long side of an "L" (not included) Allen key in a vise.
- Insert the short side of the "L" (not included) Allen key to the chuck. Close the jaws.
- Move the spin selector lever into the reverse position (page 7). Fasten the drill firmly and activate the drill. The chuck will be released with the turn.
- Set the new chuck turning it into the hammer drill thread until it stops.
- Open the jaws fully and thread the screw in a counterclockwise position. Tighten with a screwdriver.

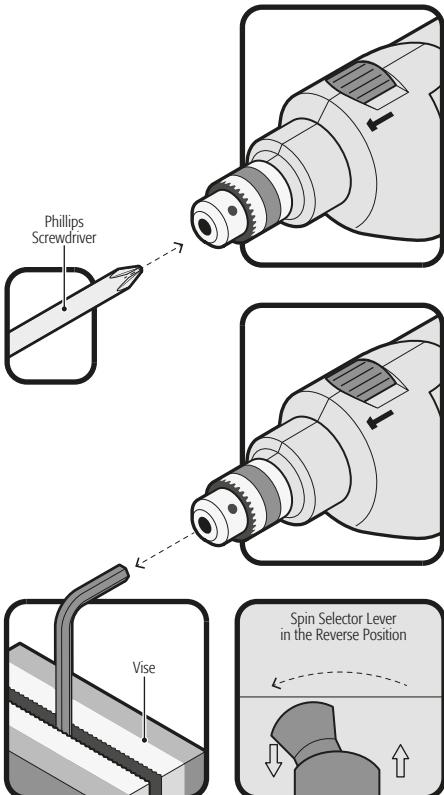

## Cleaning and care

- To guarantee adequate motor cooling, always keep slots clean and free of obstructions.
- Regularly inspect all the mounting screws. Double-check they are properly tighten. If any screw is loose tighten immediately.

## Service


- Service should only be made in a **TRUPER**® Authorized Service Center. Service and maintenance performed by non-qualified people may be dangerous and lead to personal injuries. It also makes the product Warranty void.


## Lubrication

- We recommend lubricating the tool transmission every carbon brush change in a **TRUPER**® Authorized Service Center.

## Carbon brush replacement

- Carbon brushes should be checked periodically.
- When one or both carbon brushes show signs of wear go to a **TRUPER**® Authorized Service center to have both carbon brushes replaced. When replaced, see if the new carbon brushes move freely in the carbon brush housing. Ask to turn on the tool during five minutes to make the contact in the carbon brushes and the commutator even.
- Use only original **TRUPER**® spare carbon brushes, designed specifically with the right strength and electric resistance for each type of motor. Carbon brushes with different specifications may damage the motor.
- When replacing carbon brushes, always change both.

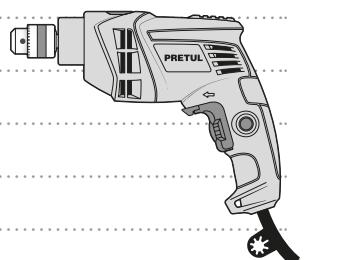

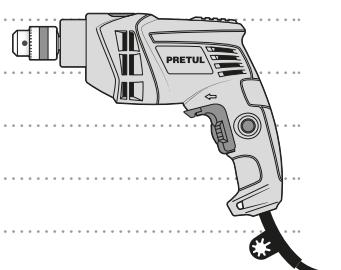

# Authorized Service Centers

**PRETUL®**

In the event of any problem contacting a Truper Authorized Service Center, please see our webpage [WWW.TRUPER.COM](http://WWW.TRUPER.COM) to get an updated list, or call our toll-free numbers 800-690-6990 or 800-018-7873 to get information about the nearest Service Center.

AGUASCALIENTES	<b>DE TODO PARA LA CONSTRUCCIÓN</b> GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537
BAJA CALIFORNIA	<b>SUCRASAL TIJUANA</b> AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100
BAJA CALIFORNIA SUR	<b>FIX FERRETERÍAS</b> FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115
CAMPECHE	<b>TORNILLERÍA Y FERRETERÍA AAA</b> AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808
CHIAPAS	<b>FIX FERRETERÍAS</b> AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083
CHIHUAHUA	<b>SUCRASAL CHIHUAHUA</b> AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052
CIUDAD DE MÉXICO	<b>FIX FERRETERÍAS</b> EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861
COAHUILA	<b>SUCRASAL TORREÓN</b> CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23
COLIMA	<b>BOMBAS Y MOTORES BYMTESA DE MANZANILLO</b> BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 2013
DURANGO	<b>TORNILLOS ÁGUILA, S.A. DE C.V.</b> MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844
ESTADO DE MÉXICO	<b>SUCRASAL CENTRO JILOTEPEC</b> PARQUE INDUSTRIAL #1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102
GUANAJUATO	<b>CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.</b> AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88
GUERRERO	<b>CENTRO DE SERVICIO ECLIPSE</b> CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793
HIDALGO	<b>FERREPRESOS S.A. DE C.V.</b> LIBERTAD ORIENTE #504 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616
JALISCO	<b>SUCRASAL GUADALAJARA</b> AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLALOJMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90
MICHOACÁN	<b>FIX FERRETERÍAS</b> AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858

MORELOS	<b>FIX FERRETERÍAS</b> CAPITAN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL: 735 352 8931
NAYARIT	<b>HERRAMIENTAS DE TEPIC</b> MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL: 311 258 0540
NUEVO LEÓN	<b>SUCRASAL MONTERREY</b> CARRETERA LAREDO #500, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
OAXACA	<b>FIX FERRETERÍAS</b> AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092
PUEBLA	<b>SUCRASAL PUEBLA</b> AV PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLA/CING, PUE. TEL: 222 282 8282 / 84 / 85 / 86
QUERÉTARO	<b>ARU HERRAMIENTAS S.A. DE C.V.</b> AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
QUINTANA ROO	<b>FIX FERRETERÍAS</b> CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL: 984 267 5140
SAN LUIS POTOSÍ	<b>FIX FERRETERÍAS</b> AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4541
SINALOA	<b>SUCRASAL CULIACÁN</b> AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL: 667 173 9139 / 173 8400
SONORA	<b>FIX FERRETERÍAS</b> CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL: 644 413 2392
TABASCO	<b>SUCRASAL VILLAHERMOSA</b> CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL: 993 353 7244
TAMAULIPAS	<b>VM ORINGS Y REFACCIONES</b> CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
TLAXCALA	<b>SERVICIOS Y HERRAMIENTAS INDUSTRIALES</b> PALBO SIDAR #132, COL . BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL: 222 271 7502
VERACRUZ	<b>LA CASA DISTRIBUIDORA TRUPER</b> BLVD. PRIMAVERA. ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 828 8100 / 826 8484
YUCATÁN	<b>SUCRASAL MÉRIDA</b> CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451

**Code**

28113

**Model**

ROTO-3/8P6

**Brand****PRETUL®**

This product is guaranteed for 1 year. To make the warranty valid or purchase parts and components you must present the product in Corregidora 35, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any TRUPER® Service Center listed in the annex to the warranty policy and/or in [WWW.TRUPER.COM](http://WWW.TRUPER.COM). Transportation costs resulting from compliance of this warranty will be covered by  **TRUPER®**

For questions or comments, call 800-690-6990. Made in China. Imported by TRUPER S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257



Stamp of the business. Date of purchase:

AÑO



Sello del establecimiento comercial. Fecho de compra:

Este producto es la garantía otorgada por TRUPER® para hacer válida la garantía o adquirir piezas y componentes debida a establecimiento el producto en Corregidora 35, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 o en el preservar el producto en Corregidora 35, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 o en el establecimiento donde lo compró, o en algún Centro de Servicio TRUPER® de los establecidos en el anexo de la poliza de garantía /o en WWW.TRUPER.COM. Los gastos de transportación que resulten para su cumplimiento serán cubiertos por TRUPER®.

Para dudas o comentarios, llame al 800-690-6990. Hecho en China. Importado por TRUPER S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepéc, Jilotepéc, Edo. de Mex. C.P. 54257

Código	Modelo	Marcas	PRTUL®	ROTO-3/8P6	28113
--------	--------	--------	--------	------------	-------


**Poliza de Garantía**


**PRTUL®**

**PRETUL®**


**Centros de Servicio Autorizados**

WWW.TRUPER.COM donde obtendrá un listado actualizado, o llame al: 800-690-6990 u 800-018-7873 donde le informarán cuál es el Centro de Servicio más cercano.

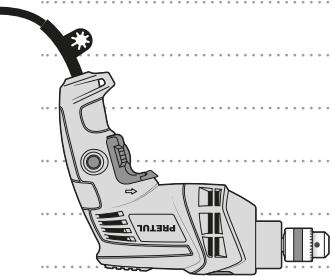


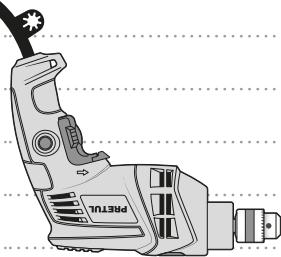



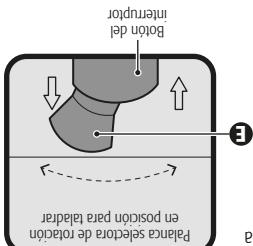


- Para que la broca gire hacia adelante y pueda taladrar, muévala la palanca selectora de rotación hacia la flecha que apunta al manubrio del rotomotor.

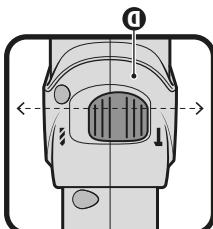

- Para perforar metal, muévala la palanca selectora de rotación totalmente a la posición de metal, rotando a la misma velocidad.
- Para perforar hormigón, piedra basáltica o materiales de dureza similar, muévala el selector de impacto-rotación (D) totalmente a la posición de IMPACTO (▲). La broca dará impactos sobre el metal.

### Cambio de rotomartillo a taladro

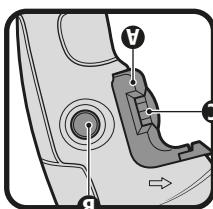


La herramienta puede operarse a distintas velocidades. Suelte el selector de dirección en dirección opuesta a las manecillas del reloj para disminuir la velocidad y la torsión.

### Control de velocidad


- Oprima el interruptor (A) y bloquelo, apretando el botón de uso continuo (B).
- Conecte la clavija a tomacorriente.
- Para interrumpir su uso, simplemente suelte el interruptor.
- Para iniciar el rotomartillo empuje a fundo el interruptor.
- Conecte la clavija a tomacorriente.
- Opración continua:

### Encendido y control de operación

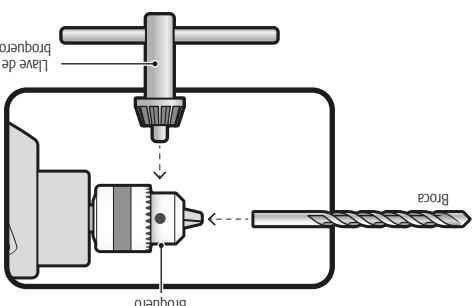


- Introduzca la broca dentro del broqueo hasta que brogueo en cada uno de los orificios alternadamente y apriete la llave de broqueo hasta que la broca quede fija.
- Asegúrela con la llave de broqueo apretando el topo y apriete la llave de broqueo hasta que causar lesiones personales severas.

### Instalación de la broca

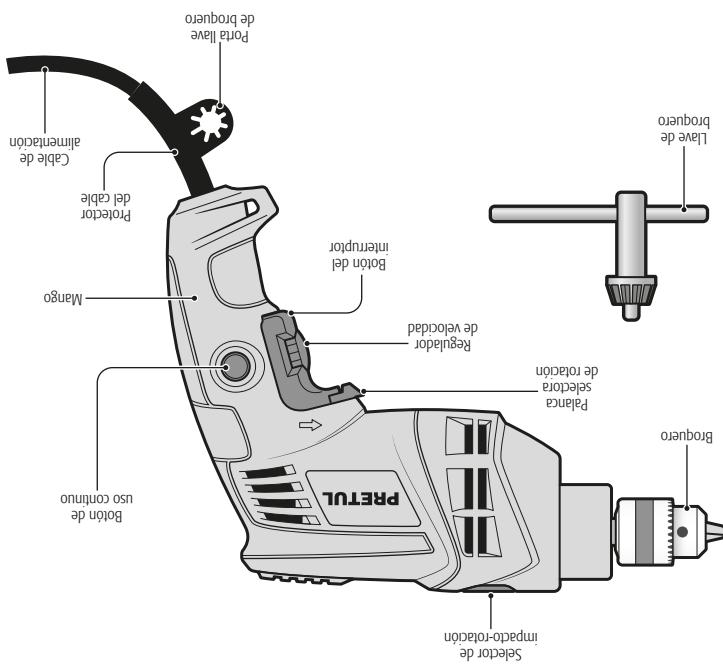


forma correcta de operar el rotomartillo

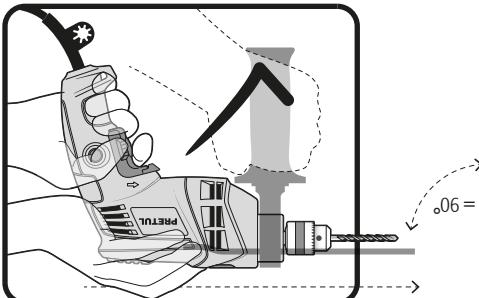

- **A DVERGENCIA** • En cuantos más grande sea el diámetro de la broca, la fuerza reactiva es mayor, lo que puede provocar una pérdida del control de la herramienta. Para evitar esta posibilidad existe el mecanismo de equilibrio que absorbe ambas manos y mantiene una posición horizontal respecto al eje de giro de la herramienta.
  - **ATENCIÓN** • No toque la broca o dedos de cuero que manipulares. No intente arrancarlos con fuerza.
  - Evite colocar la herramienta en un sitio con partículas y/o polvo despedidas de usos, estos pueden ser sorbilladas dentro del mecanismo de la herramienta.
  - Usar protectores para los oídos. La exposición al ruido puede causar daño auditivo.
  - Utilice mascarilla antigripojo y un equipo extractor de polvo para absorber las partículas de la herramienta.
  - Utilice guantes de látex para los dedos. La herramienta tóxica.
  - Utilice guantes de plástico para los dedos. La herramienta tóxica.
  - Utilice guantes de plástico para los dedos. La herramienta tóxica.
  - Utilice guantes de plástico para los dedos. La herramienta tóxica.

forma incorrecta de operar el rotomartillo

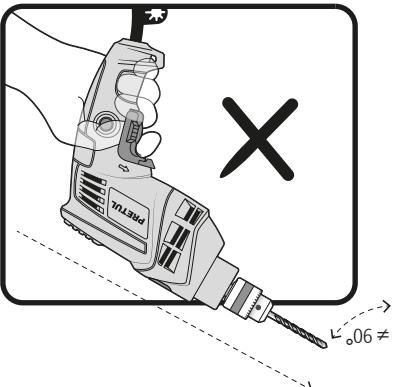

- A ADVERENCIA** • Asegúrese de haber respaldado todos los procedimientos necesarios antes de comenzar a trabajar.

**A PELIGRO** • Antes de perfilar en una pared, sujetela o tala como cables o conductos eléctricos o tuberías, tecto, asegúrese de que no haya objetos empotrados.

**A PELIGRO** • Antes de provocar lesiones graves, gran velocidad de impacto.

**A ATENCIÓN** • Apague y desconecte la herramienta durante el intercambio de brocas, así como antes de invertir el sentido del giro del brocador, así como para mover las piezas graves.

**A INSTRUCCIONES** • Debe instalar o remplazar una broca.

Allies de operai e luto da vida

Melittas opera el rotomarillo

Elija la DROCA apropiada

para uso de taladros y rotomarilllos


**PRETUL**<sup>®</sup>

<p><b>■ ADVERTENCIA!</b> Lea detenidamente todas las advertencias de seguridad y todas las instrucciones que se detallan a continuación. La omisión de alguna de ellas puede dar como resultado un choque eléctrico, incendio y/o daño serio. Consérve las advertencias y las instrucciones para futuras referencias.</p>	<p><b>■ PRECAUCIÓN!</b> Lea detenidamente todas las advertencias de seguridad y todas las instrucciones que se detallan a continuación. La omisión de alguna de ellas puede dar como resultado un choque eléctrico, incendio y/o daño serio. Consérve las advertencias y las instrucciones para futuras referencias.</p>
<p><b>■ ADVERTENCIA!</b> Para la hermafrota la preparación de la herramienta debe ser realizada en un Centro de Servicio Autorizado.</p>	<p><b>■ PRECAUCIÓN!</b> La preparación de la herramienta debe ser realizada en un Centro de Servicio Autorizado.</p>
<p><b>■ ADVERTENCIA!</b> Utilice siempre protección para los ojos.</p>	<p><b>■ PRECAUCIÓN!</b> Utilice siempre protección para los ojos.</p>
<p><b>■ ADVERTENCIA!</b> Mantenga los accesorios de cortes afilados y limpios.</p>	<p><b>■ PRECAUCIÓN!</b> Mantenga los accesorios de cortes afilados y limpios.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con los accesorios de acuerdo a las instrucciones.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con los accesorios de acuerdo a las instrucciones.</p>
<p><b>■ ADVERTENCIA!</b> Almacene las herramientas fuera del alcance de los niños y no permita a los menores de edad usar la herramienta.</p>	<p><b>■ PRECAUCIÓN!</b> Almacene las herramientas fuera del alcance de los niños y no permita a los menores de edad usar la herramienta.</p>
<p><b>■ ADVERTENCIA!</b> Desconecte la herramienta de la red eléctrica antes de limpiarla.</p>	<p><b>■ PRECAUCIÓN!</b> Desconecte la herramienta de la red eléctrica antes de limpiarla.</p>
<p><b>■ ADVERTENCIA!</b> No use la herramienta si el interruptor no funciona.</p>	<p><b>■ PRECAUCIÓN!</b> No use la herramienta si el interruptor no funciona.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>
<p><b>■ ADVERTENCIA!</b> Use la herramienta sólo con un cable para tránsportar.</p>	<p><b>■ PRECAUCIÓN!</b> Use la herramienta sólo con un cable para tránsportar.</p>

**■ ADVERTENCIA!** Para herramientas generales de seguridad.

**PRETUL®**



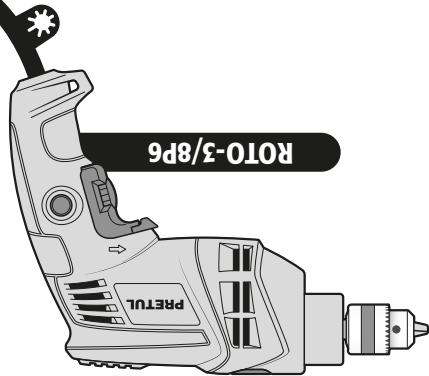

## ROTO-3/8PG

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.

## ATENCIÓN


- |    |                                     |
|----|-------------------------------------|
| 12 | Póliza de Garantía                  |
| 11 | Centros de Servicio Autorizados     |
| 10 | Notas                               |
| 9  | Mantenimiento                       |
| 8  | Pluesta en marcha                   |
| 7  | Partes                              |
| 6  | Advertencias de Seguridad           |
| 5  | Para uso de teléfonos y rodamientos |
| 4  | Advertencias generales de Seguridad |
| 3  | Requisitos técnicos                 |
| 3  | Especificaciones técnicas           |



Lea este instructivo por completo  
antes de usar la herramienta.



! ATENCIÓN

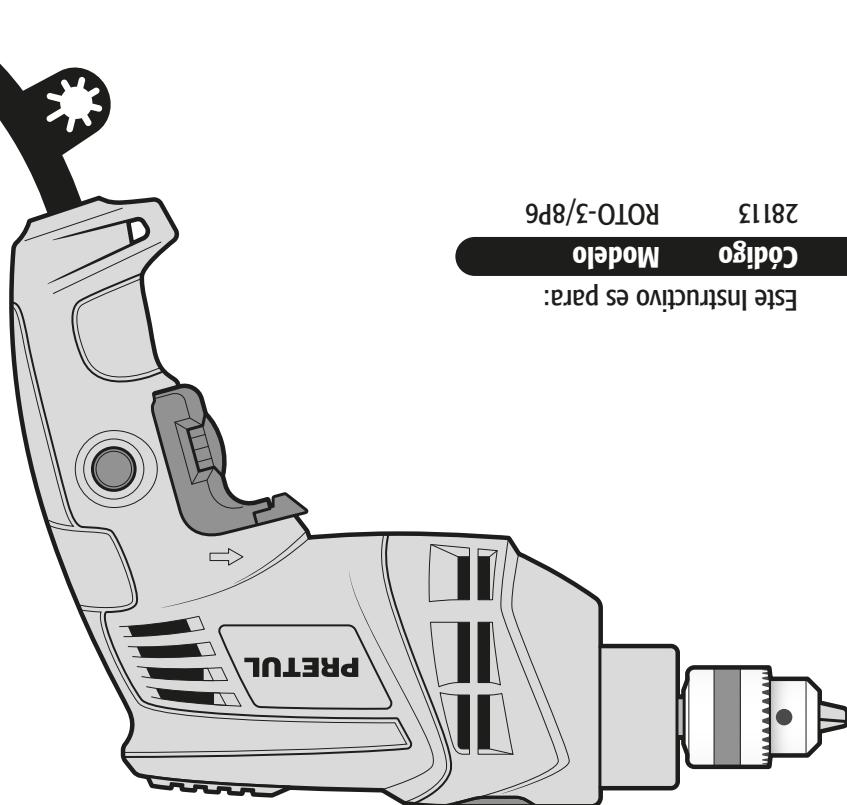

Potencia Broqueño

**3/8"** (9.5 mm)

# ROTO-3/8P6

## Rotomarfillo

Instructivo de

**PRETUL**®

ESPAÑOL  
ENGLISH