


Manual

Cordless impact screwdriver

6.5 mm
20 V == 1/4"
Bit holder

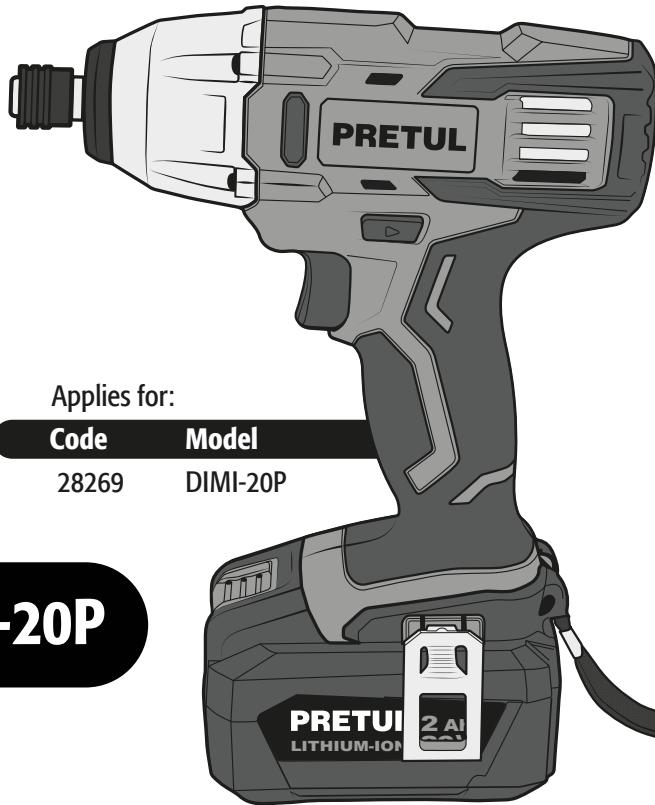

Applies for:

Code	Model
28269	DIMI-20P

DIMI-20P



CAUTION



Read this manual thoroughly
before using the tool.



Technical data	3
Power requirements	3
 General safety warnings for electric tools	4
 Safety warnings for the use of cordless impact screwdrivers	5
Parts	6
Start up	7
Troubleshooting	9
Maintenance	9
Environmental protection	9
Notes	10
Authorized service centers	11
Warranty policy	12

**CAUTION**

To gain the best performance of the tool, extend its lifespan, claim the warranty if necessary, and avoid serious risks or injuries, it is essential to read this manual in its entirety before using the tool.

Keep this manual for future reference.

The illustrations in this manual are for reference only and may vary from the real appearance of the tool.

Recommendations for use and care



Charge the battery only with the included charger or its equivalent recommended by **TRUPER**.



Follow the charging **CONSIDERATIONS** for the battery (pages 6 and 7).



Follow the instructions for operation and functions (page 8).



Keep the vents on the tool and charger clean.




Perform periodic **MAINTENANCE** on your machine (page 9).

DIMI-20P

Code •	28269		
Description •	Cordless impact screwdriver		
Bit holder •	1/4"		
Voltage •	20 V ---		
Variable speed •	0 RPM – 2 200 RPM		
Strokes per minute •	0 beats/min – 3 000 beats/min (BPM)		
Rotation •	forward - reverse		
IP rating •	IP 20		
Maximum torque •	180 Nm (133 lb·ft)		
Battery •	Lithium-ion 20 V --- 2 Ah	Charging time: approximately 55 minutes	
Charger •	Input: Frequency: 60 Hz Current: 0.9 A	Voltage: 127 V ~	Output: Voltage: 21 V --- Current: 2.5 A

The power cable has Y-type cable holders. The tool's construction class is Class III.


The charger's construction class is Reinforced Insulation.

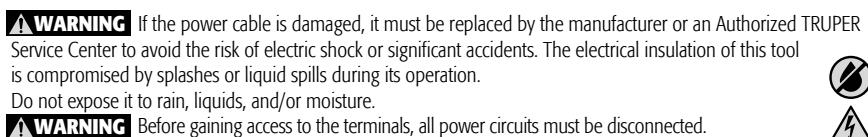

⚠️ WARNING Before gaining access to the terminals, all power circuits must be disconnected.


Power requirements

⚠️ WARNING The double-insulated and reinforced-insulated tools are equipped with a polarized plug (one prong is wider than the other). This plug fits into any polarized outlet and can only be connected in one way. If the plug does not fit into the outlet, turn it over. If it still does not fit, contact a qualified electrician, or install a polarized outlet. Do not alter the plug in any way. Both types of insulation eliminate the need of a three-wire grounded power cord or a grounded electrical system.

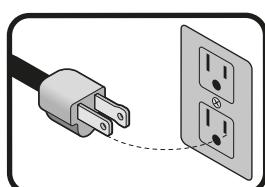⚠️ WARNING When using an extension cord, make sure to use a gauge to carry the current your tool will consume. A lower gauge cable will cause voltage drops in the line, resulting in power loss and motor overheating. The following table shows the correct size to be used depending on the cable length and amperage capacity indicated on the tool's data plate. If in doubt, use the next higher gauge.

Capacity in Amperes	Number of conductors	Extension gauge	
		From 1.8 m to 15 m	Higher than 15 m
From 0 A to 10 A	3 (one to ground)	18 AWG(*)	16 AWG
From 10 A to 13 A		16 AWG	14 AWG
From 13 A to 15 A		14 AWG	12 AWG
From 15 A to 20 A		8 AWG	6 AWG

* It is allowed to use it if the extensions themselves have an overcurrent protection device.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

⚠️ WARNING When operating electric tools outdoors, use a grounded extension cord marked as  'Outdoor Use'. These extensions are specially designed for outdoor use and reduce the risk of electrical shock.


⚠ WARNING. Read all safety warnings and all instructions listed below carefully. Failure to follow any of them may result in electric shock, fire, and/or serious injury. Keep the warnings and instructions for future reference.

Work area**Keep the work area clean and well-lit.**

Cluttered and dim areas can lead to accidents.

**Do not operate the tool in explosive atmospheres, as in the presence of flammable liquids, gas, or dust.**

The electric tools produce sparks that can ignite flammable material.

Keep children and other individuals at a safe distance while using the equipment.

Distractions can cause loss of control and lead to accidents.

Electrical safety**The tool plug must match the outlet.****Never modify the plug in any way.**

Do not use any type of adapter with grounded electrical tools.

Unmodified electrical tools and matching plugs will reduce the risk of electric shock.

Avoid bodily contact with grounded surfaces, such as pipes, radiators, stoves, and refrigerators.

There is an increased risk of electric shock if your body is grounded.

Water entering an electrical tool will increase the risk of electric shock.

The entry of water into an electrical tool will increase the risk of electric shock.

Do not force the cable. Never use the cable for carrying, lifting, or disconnecting the tool. Keep the cable away from heat, oil, sharp edges, or moving parts.

Damaged or tangled cables increase the risk of electric shock.

When operating an electrical tool outdoors, use an extension cord suitable for outdoor use.

The use of a suitable outdoor rated cable reduces the risk of electric shock.

If it is unavoidable to operate the tool in a damp location, use a power source protected by a ground fault circuit interrupter (GFCI).

The use of a GFCI reduces the risk of electric shock.

Personal safety**Stay alert, watch what you are doing, and use common sense when handling a tool. Do not use it if you are tired or under the influence of drugs, alcohol, or medication.**

A moment of distraction while handling the tool can cause personal injury.

Use safety equipment. Always wear eye protection.

The use of safety equipment such as safety glasses, dust mask, slip-resistant shoes, helmet, and ear protection in appropriate conditions significantly reduces the risk of personal injury.

**Avoid accidental starts. Ensure the switch is in the "off" position before connecting to the power source and/or battery or transporting the tool.**

Carrying power tools with your finger on the switch or connecting tools with the switch in the "on" position can cause accidents.

Remove any wrenches or adjusting tool before starting the power tool.

Wrenches or tools left on the rotating parts of the tool can cause personal injury.

Do not exceed your range of motion. Keep both feet firmly planted on the ground and maintain balance.**General security warnings for electric tools**

This allows better control of the tool in unexpected situations.

Dress appropriately. Do not wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts.

Loose clothes, jewelry, or long hair can get caught in moving parts.

If dust extraction and collection devices are available for the tool, check their connections and use them correctly.

The use of these devices reduces risks associated with dust.

Tool use and care**Do not force the tool. Use the appropriate tool for the task at hand.**

The right tool performs better and is safer when used at the intended pace.

Do not use the tool if the switch is not functioning.

Any power tool that cannot be turned on or off is dangerous and must be repaired before operation.

Disconnect the tool from the power source and/or battery before making any adjustments, changing accessories, or storing it.

These measures reduce the risk of an accidental start of the tool.

**Store the tools out of the reach of children and do not allow them to be handled by individuals unfamiliar with the tools or their instructions.**

Power tools are dangerous in untrained hands.

**Maintain the tool. Ensure that the moving parts are not misaligned or jammed, and that there are no broken parts or other conditions that may affect its operation. Repair any damage before using the tool.**

Many accidents are caused by inadequate tool maintenance.

Keep cutting accessories sharp and clean.

Well-maintained cutting accessories are less likely to jam and easier to control.

Use the tool, its components, and accessories in accordance with these instructions and as intended for the type of tool, in appropriate working conditions.

Using the tool for applications other than those for which it is designed could cause a hazardous situation.

Service**Repair the tool at a TRUPER Authorized Service Center using only identical replacements parts.**

This will maintain the safety of the tool.

Use and care of the battery-powered tool**Only recharge with the charger specified by PRETUL®.**

The charger included with the machine may pose a fire hazard if used with another battery.

**Use batteries specifically designed for the tool.**

The use of any other battery may pose a risk of damage and fire.

When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another.

Short-circuiting between battery terminals can cause burns or fire.

In abusive conditions, battery liquid may be expelled; avoid contact. If there is accidental contact, rinse with water. If the liquid meets the eyes, seek medical assistance.

The expelled liquid can cause irritation or burns.



This tool is in compliance with the Official Mexican Standard (NOM - Norma Oficial Mexicana).

Security warnings

⚠ for the use of cordless impact screwdrivers ⚡

PRETUL®

Batteries and charger

- Take your time to assess the task at hand and ensure that all precautions are respected before starting work.

- Adjust the accessory correctly.

⚠ DANGER • Use only batteries designed specifically for the tool. Other batteries may pose risks of injury or fire.

⚠ DANGER • Make sure that the switch is off (OFF position) before placing the battery; otherwise, it may start working unexpectedly, potentially causing serious injuries.

- Connect the charger only to an alternating current (AC) power supply.

⚠ DANGER • Do not use the charger outdoors.

- Respect the "+/-" polarity when charging.

- Never recharge a leaking battery.

- Do not use batteries or the charger for purposes other than those they were designed for.

- Do not modify the battery or charger contacts.

- Do not expose the battery pack to temperatures above 50 °C.

⚠ DANGER • Never expose batteries to fire; they could explode.

⚠ CAUTION • Keep batteries away from any metallic objects such as clips, coins, keys, nails, screws, or any other object that could cause the terminals to make contact; this could lead to a short circuit that may cause burns or fires.

⚠ CAUTION • Under extreme conditions, battery liquid may spill. If this happens, avoid any contact. In case of accidental contact, wash with plenty of water, rinse with lemon juice and vinegar. If the liquid meets the eyes, wash with plenty of water for several minutes and seek immediate medical help. The expelled liquid from the batteries could cause irritation or burns.

⚠ CAUTION • To maximize the battery lifespan, make sure to discharge it fully at least once a month. Avoid keeping the battery without charging for more than three months, and always ensure it reaches its full capacity during charging. Before the initial use of the machine, charge the battery for a minimum of 1 hour and 30 minutes.

- Avoid frequent interruptions while screwing to prevent potential damage to the battery.

Choose the appropriate accessory

⚠ CAUTION • Use only the screwdriver tips recommended by **PRETUL®**.

- Keep the screwdriver tips in good condition. This reduces the load on the tool and extends its lifespan.

⚠ CAUTION • Turn off and disconnect the tool before changing the rotation direction, installing, or replacing a tip. Use the auxiliary handles if provided with the tool. Loss of control can cause personal injuries.

When operating the screwdriver

⚠ CAUTION • This tool is designed to work with screws. IT IS NOT A DRILL.

- This is a light-duty tool, do not use it for removing or installing screws that require a higher torque.

- Do not modify the tool or its accessories in any way.

- Turn on the screwdriver after attaching the tips.

- Be careful when screwing slotted screws as the tool may slip.

- Do not apply excessive force.

- Do not use this tool with one hand.

- After each use, remove tips and extensions and store them properly.

⚠ WARNING Choking Hazard! Children can swallow small parts and choke. Keep small parts away from children.



Hold the power tool by the insulated gripping surfaces when performing an operation where the fastener may meet hidden wires or its own power cable.


Fasteners that meet an energized cable can turn the metallic parts of the power tool into live components, resulting in an electric shock for the operator.

- Use ear protection when performing services with 85dB noise exceed. Prolonged exposure to noise can cause hearing loss.

- Use a dust mask and dust extraction equipment if necessary. Remember that working with materials such as asbestos, lead-based paints, additives, certain types of wood, metals, or minerals can be highly toxic.

- Use safety glasses.




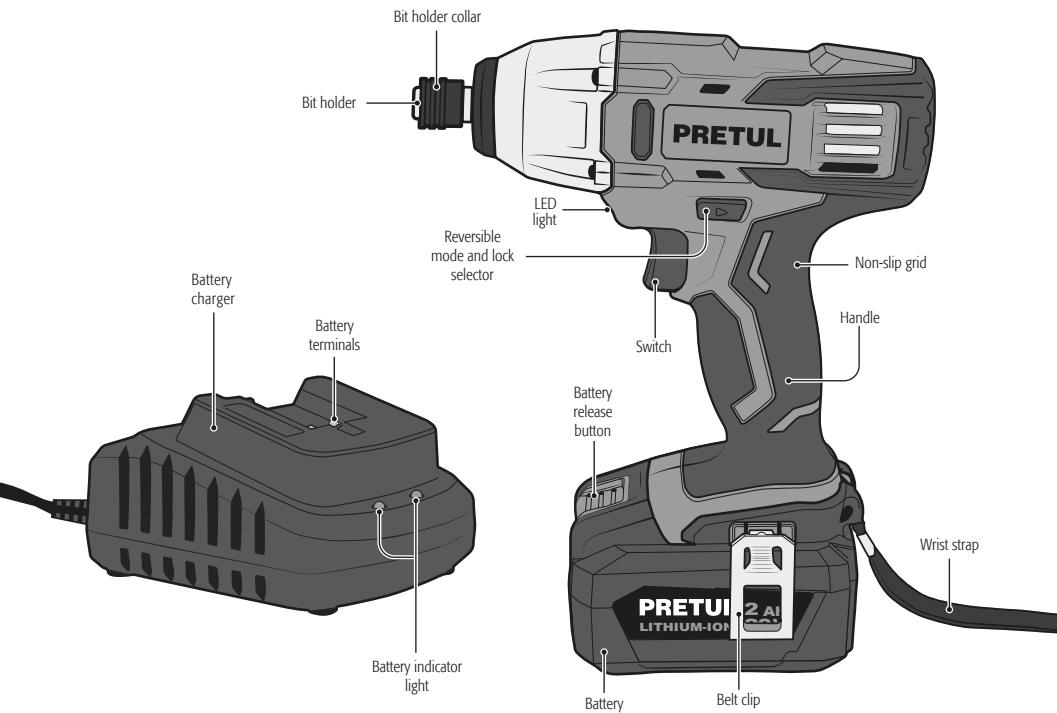

Start up

Battery charge

- Connect the charger plug to a 127 V~ outlet (the green light on the charge indicator will turn on).
- Insert the battery into the charger by sliding it as shown in the picture. The green light will turn off, and the red light should turn on, indicating that it is already charging.
- When the battery is fully charged, the green light will turn on, and the red light will turn off.
- Disconnect the charger from the power once the charging is complete.
- If the red-light flashes, it indicates that the battery temperature is below 0 °C or above 45 °C. Wait until the battery temperature is within the appropriate range before charging.
- If the battery indicator lights do not turn on after inserting the battery into the charger, it indicates that the battery is defective. Please replace the battery with a new one.

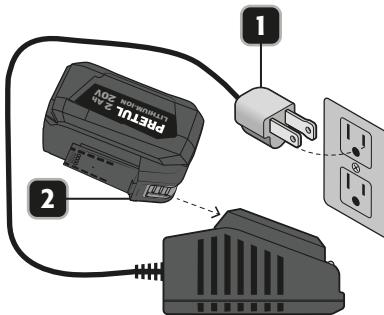


Considerations for battery use

The battery is shipped in a DISCHARGED state by default. It is necessary to charge it for approximately 1 hour and 30 minutes before use.

The normal charging temperature range is from 0 °C to 45 °C. Charging is automatically suspended outside this range until it reaches the correct temperature. The normal discharge/working temperature range is from 0 °C to 75 °C. If the temperature exceeds 75 °C, the electronic control will shut off power until the tool reaches the optimal temperature range. If the battery voltage drops below the normal level during operation, the tool will stop functioning. Between each charge, allow the charger a 15-minute rest. In a warm environment or after prolonged use, the battery may become too hot to recharge. Allow the battery to cool down before attempting to recharge it.


Installing and removing the battery

- To install the battery in the tool handle, align the battery unit with the rails inside the tool handle and slide it into the handle until the battery unit is firmly inserted into the tool; verify that it does not come out on its own.
- To remove the battery, press the release button (C) and firmly pull the battery to remove it from the tool handle.

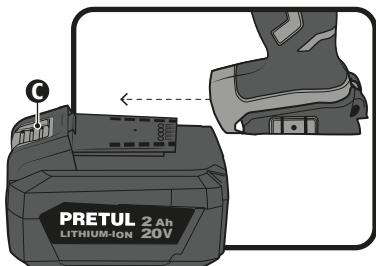


Selection of impact bits and drill bits

- Always use the suitable impact bits.
- Use only impact bits that match the sizes depicted in the picture.
- Using incorrect bits may lead to imprecise and inconsistent torque and/or damage to the bolt or nut.

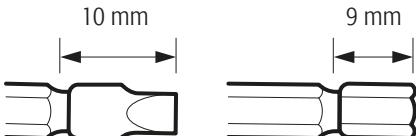


Installation of the bit

- Place the direction button in the lock position (center).
- Pull the bit holder collar (D) outward from the front side.
- Insert the bit and release the collar.
- Once you hear a "click," the accessory will be securely locked in place.

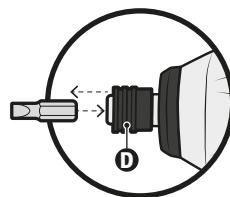

Removing the accessory

- Pull the bit holder collar (D) outward from the front of the tool.
- Remove the accessory from the bit holder.

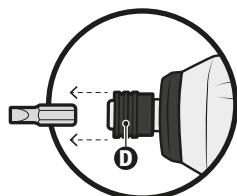


Rotation direction

- To screw, release the switch and press the rotation direction button on the side where the marks point to the bit holder collar.
- To reverse and unscrew, press it on the opposite side.
- The tool switch locks if the rotation direction button is in the middle position.

⚠ CAUTION • The first time you turn on the tool after reversing rotation, you may hear a "click." This is normal and does not represent any problem.

⚠ CAUTION • To avoid damaging the tool, never reverse the rotation direction while the tool is in operation.

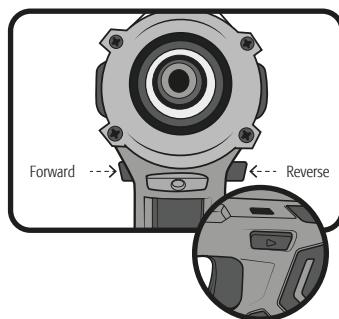


Belt clip

- The belt clip can be assembled on either side of the tool using only the provided screw, making it suitable for left or right-handed users.
- If you want to move the belt clip to the other side, remove the screw holding the belt clip and reassemble it on the other side. Make sure to tighten the screw securely.
- If you never need the clip, you can remove it from the tool.

Power on and operation control

- Press the switch to start operation; release the switch to stop operation.
- The switch allows you to select the appropriate speed for each task. The tighter you press the switch, the faster the tool will operate.
- When releasing the on/off switch, the machine will stop.
- Move the rotation direction button to the middle position to lock the on/off switch.

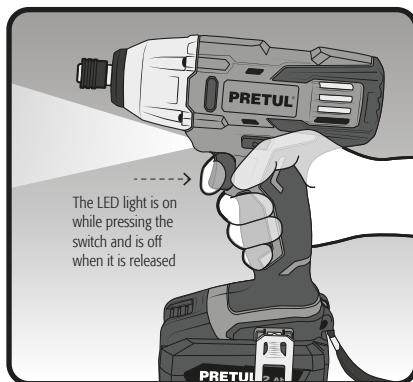

Screwing - unscrewing

Consider the following points as the torque may be affected by each of them:

- **Voltage:** Low voltage from a nearly discharged battery or cell will reduce the torque.
- **Accessory size:** Not using the correct accessory size will cause a reduction in torque.
- **Bolt size:** Larger diameter bolts generally require higher tightening torque. The tightening torque will also vary according to length, grade, and the coefficient of friction.
- **Bolt:** Ensure that all threads are free of rust and other debris to allow proper torque.
- **Material:** The type of material and surface finish will affect the torque.
- **Tightening time:** Longer tightening time increases the torque. A tightening time greater than recommended could put too much tension on fasteners or cause them to strip or become damaged.

Problem	Cause	Corrective action
The tool loses efficiency.	• Low battery.	• Charge the battery.
The trigger cannot be pressed.	• The rotation direction button is in the lock position.	• Move the rotation direction button to forward or reverse position.
The trigger can be pressed, but the tool does not rotate.	• Discharged battery.	• Charge the battery.
The battery leaks.	• Minor dripping may occur in extreme temperatures or after heavy use; this is normal. • Intense or very evident dripping is due to a damaged battery.	• Clean the liquid from the skin or clothing immediately with water and soap. • Replace the battery immediately.
The battery does not charge, and the charger light does not turn on.	• Battery improperly placed in the charger. • Charger improperly connected to the electrical outlet.	• Correctly insert the battery into the charger. • Check that the plug is properly connected to the outlet.
The tool heats up after prolonged periods of work.	• Normal heating due to energy absorption from the motor gears and electricity during work.	• Let the tool cool down for a period of 5 minutes.
The battery heats up during operation.	• Normal heating due to energy extracted from the battery while the tool is in operation.	• Stop the tool for a period of 5 minutes to allow the battery to cool down.
The battery heats up during charging.	• Normal heating due to chemical reactions inside the battery during charging.	
The charger heats up during charging.	• Normal heating due to voltage regulation.	

Maintenance

Cleaning and maintenance


- Make sure proper cooling of the motor by keeping vents clean and unblocked.
- Regularly inspect all mounting screws and ensure they are properly tightened. If any screws are loose, tighten them immediately.
- Clean the tool with a clean and soft cloth. Do not use alcohol or detergent. Disconnect the tool and remove the battery before cleaning.

Service

Tool service must be performed exclusively at a TRUPER Authorized Service Center. Service and maintenance carried out by unqualified individuals can be dangerous, potentially causing personal harm, and may also void the product warranty.

Environmental protection

Electrical appliances and batteries must not be disposed off with household waste. Please deliver this appliance, as well as its batteries, with the contacts insulated with adhesive tapes to a recycling center. Check the location of the nearest center in your community.

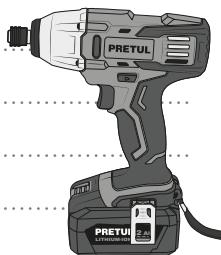

Authorized service centers

PRETUL®

If you have any problems contacting a TRUPER Authorized Service Center, please consult our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers 800 690-6990 or 800 0187-873 to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 893
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #324, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTER TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
Ciudad de MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREDORA, CORREDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77110 PLATA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCURSAL TORRÉON CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORRÉON, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, SLP. TEL.: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZIRIO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 355 7244
GUANAJUATO	CIA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5795	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90070, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93508, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN #6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAH Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code

28269

Model

DIMI-20P

Brand**PRETUL®**

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. . Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

WWW.TRUPER.COM

11-2023

Sello del establecimiento comercial. Fecha de entrega:



Garantía. Duración: 1 año. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación ofuncionamiento, excepto si se uso en condiciones distintas a las normales; cuando no fue operado conforme instrucciones. La diferencia o reparación por personal no autorizado por TRUPER®. Para hacer efectiva la garantía industrial, fue el cliente o preparado por personal no autorizado por TRUPER®. Para hacer efectiva la garantía de los componentes y accesorios, incluye los gastos de transportación del producto que deviven de su cumplimiento o en Corregidora 35, Centro, Querétaro, CDMX, 06060, donde también podrá adquirir partes, componentes, presentante el producto, poliza sellada o factura o recibo o comprobante, en el establecimiento donde lo compró o en Corregidora 35, Centro, Querétaro, CDMX, 06060, donde también podrá adquirir partes, componentes, presentante el producto, poliza sellada o factura o recibo o comprobante, en el establecimiento donde lo compró de su red de servicios. Tel. 800-018-7873. Made in/Made in China. Importador TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Mex. C.P. 54257, Tel. 761 782 9100.

**Poliza de
Garantía**


Código	Modelo	Marca	PRTUL®	DIMI-20P	28269
--------	--------	-------	--------	----------	-------

PRTUL®



En caso de tener algún problema para contactar un Centro de Servicio Autorizado TRUPER, consúltenos en este número donde le informaremos cuál es el centro de servicio más cercano.

MICHIGAN FIC FERRETERIAS	MICH. TEL.: 443 334 6858 AV. PASEO DE LA REPUBLICA #30-A, COL. EX-HACIENDA LA HERRERA, CP. 58050, MORELIA.
JALISCO SUCURSAL GUADALAJARA	TEL.: 33 3606 5285 AL 90 AV. DULCE DE HOH. #6800, COL. SANTA CRUZ DEL PUEBLO, COL. CENTRO, CP. 43000, TLAZULITA, JAL.
HIDALGO FERREROS SA DE CV.	TEL.: 775 753 6615 / 775 753 6616 HGO. TEL.: 775 753 6615 / 775 753 6616 LEADERDAD INDUSTRIAL #34 LOCAL 301, INTURBO DE PESAS RODRIGUEZ, COL. CENTRO, CP. 43000, TLAZULITA, HGO.
GUERRERO CENTRO DE SERVICIO ECPSE	TEL.: 471 48 5793 CHILPANCINGO, GRO. TEL.: 471 48 5793 CENTRO DE SERVICIO ECPSE
GUANAJAUTO CIA. FERRERIA NUVEO UNICO SA DE CV.	TEL.: 461 67 7578 / 79 / 80 / 88 AV. MEXICO #203, CD. INDUSTRIAL, CP. 38010, CULIACAN, SINALOA.
ESTADOS MEXICO SUCURSAL CENTRO LOTEPEC	TEL.: 781 78 9101 EX1 5250 JILOTEPEC, JILOTEPEC, ED. PROGRESO INDUSTRIAL PROGRESO INDUSTRIAL #1, COL. SANTA FE, CP. 39101, JILOTEPEC, JILOTEPEC, ED. PROGRESO INDUSTRIAL
DURANGO TORNADOS AGUILA, SA DE CV.	TEL.: 314 322 1986 / 618 2818 544 MZ200, COL. LUIS ECHEVERRIA DURANGOCO, CALLES 5 DE FEBRERO #57, SUR II 25 MZ., 10, COL. SONORA FIX FERRETERIAS
COLIMA SUCURSAL TORCÓN	TEL.: 871 209 08 25 CALLE METAL MEXICANA #280, PARQUE INDUSTRIAL ORIENTE C.P. 27278, TORCÓN, COAH.
COAHUILA SUCURSAL TORCÓN	TEL.: 55 5522 5051 / 5522 4861 COL. CENTRO, CP. 66060, CIUDAD METROPOLITANA, COAH.
MEXICO FIC FERRETERIAS	TEL.: 471 2782 1115 CHIHUAHUA, CHIH. TEL.: 614 434 0025 BARRIO CENTRAL, MEXICO CIUDAD, CP. 31415,
CHIHUAHUA SUCURSAL CHIHUAHUA	TEL.: 962 118 4083 AV. SISTEMAS TECNOLÓGICOS #108-11, PARQUE INDUSTRIAL TAPACHULA, CHIH. TEL.: 962 118 4083 BARRIO CENTRAL, MEXICO CIUDAD, CP. 31415,
CAMPECHE TORNADOS FERRETERIA AKA	TEL.: 981 815 2808 CP. 24800 CAMPECHE, CAMP. TEL.: 981 815 2808 AV. ALVARO OBREGÓN #24, COL. SEPIAZNA TUXPEC, OAX. TEL.: 287 106 3092 CP. 77700 PLATA MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL,
CHIAPAS FIC FERRETERIAS	TEL.: 222 282 8828 / 84 / 85 / 86 CP. 37270, CUATLA, CHIAPAS, CP. 37270, AV. PERIFERICO #2A SAN LORENZO ALMECATELA PUEBLA SUCURSAL FERRETERIA
NUEVO LEÓN SUCURSAL MOTORRENT	TEL.: 755 258 8931 MEXICO TEL.: 81 352 8791 / 81 352 8790 NEUVO LEÓN, TEL.: 81 352 8791 / 81 352 8790 COLONIA PLAZA DE NAHUCA, CP. 66025, ESCOBEDO,
CALIFORNIA SUR SUCURSAL TIJUANA	TEL.: 664 969 5100 FIRDOFI 11, CP.22244, TIJUANA, BC. FIRDOFI 11, CP.22244, TIJUANA, BC.
AGUASCALIENTES DE TODO PARA LA CONSTRUCCIÓN	TEL.: 449 994 0557 GRAL. BARAGAN #1701, COL. GEMMA, CP. 20030. AGUASCALIENTES, AGS. TEL.: 449 994 0557 CAPITAL AGUASCALIENTES, AGS. TEL.: 449 994 0557
CALIFORNIA SUCURSAL TIJUANA	TEL.: 664 969 5100 FIRDOFI 11, CP.22244, TIJUANA, BC. FIRDOFI 11, CP.22244, TIJUANA, BC.
NAVARRA FERRETERIAS DE TEPIC	TEL.: 755 258 8931 MEXICO TEL.: 449 994 0557 MAZATLÁN #17, COL. CENTRO, CP. 83000, TEPIC, NAY.
MORELOS FIC FERRETERIAS	TEL.: 755 258 8931 CALLE 131, CP. 62740, CUAUTLA, MOR. CALLE 131, CP. 62740, CUAUTLA, MOR.
PUEBLA SUCURSAL FERRETERIAS	TEL.: 755 258 8931 CALLE 131, CP. 62740, CUAUTLA, MOR.
NAYARIT FERRETERIAS DE TEPIC	TEL.: 755 258 8931 CALLE 131, CP. 62740, CUAUTLA, MOR.
GUANAJAUTO DE TODO PARA LA CONSTRUCCIÓN	TEL.: 755 258 8931 CALLE 131, CP. 62740, CUAUTLA, MOR.

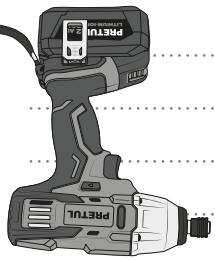

- **Tempo de ajuste:** Si el tiempo mayor de ajuste aumenta el par de ajuste. Un tiempo de ajuste mayor al que todos los sujetadores o sujetadores de superficie permiten es un indicador de que el par de ajuste es demasiado.
- **Materia:** El tipo de material que se adapta a la superficie del material afectará el par de ajuste.
- **Peso:** Asegúrate de que todos los sujetadores de peso de acuerdo a otros desechos para permitir un par de ajuste.
- **Tamaño del accesorio:** Los pernos de mayor diámetro generalmente requieren una mayor torsión de fijación.
- **Volumen:** El balón volante por una batería o una caja comprenderá completamente descargada reducirá el par de ajuste.

Considera los siguientes puntos ya que el par de ajuste puede ser afectado por cada uno de ellos:

Atracillar - desatrapillar




- Mueve el botón de dirección de giro a la posición media para bloquear el movimiento de la herramienta.
- Al soltar el interruptor de encendido/apagado, la herramienta se detendrá.
- El interruptor le permite seleccionar la velocidad adecuada para cada tarea. Mientras más aprueba el dispositivo, más rápido operará la herramienta.
- Presiona el interruptor para detener la operación.

Encendido y control de operación

- Si nunca va a necesitar el clip, puede extraerlo de la herramienta.
- Si quiere mover el clip para centrarlo en otro lado, quite el tornillo que sostiene el clip para centrarlo en su lugar y vuelvalo a ensamblar en el otro lado. Asegúrese de ajustar bien el tornillo.
- Si deseas mover el clip para centrarlo en otro lado, quite el tornillo que sostiene el clip para centrarlo en su lugar y vuelvalo de este modo para adaptarse a tus necesidades.
- El clip para centrarlo puede ser ensamblado a cualquier lado de la herramienta utilizando solamente el tornillo provisto.

Clip para centración

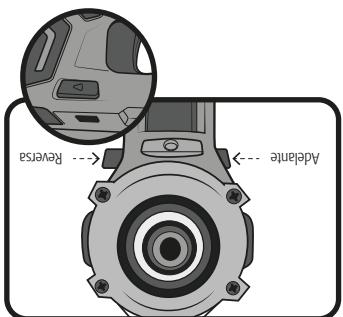


- La primera vez que encienda la herramienta despus de insertar la rotación, presione la pulsadora un "clic". Esto es normal y no representa ningún problema.
- Para no dañar la herramienta, nunca invierta la dirección de rotación de la herramienta se encuentra en la dirección de rotación de la herramienta se encuentra en la dirección de rotación de la herramienta.

- Para invertir el sentido de rotación, presione el botón de dirección de giro está en la posición de en medio.
- El interruptor de sentido y desatrapillar presionado del lado contrario de giro del lado donde las marcas apuntan hacia el collar del porta puntas.
- Para atrapillar, suelte el interruptor y presione el botón de dirección

Dirección de rotación


Puesta en marcha

PRETUL®

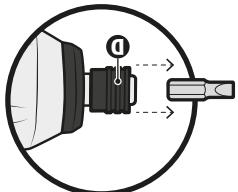


- Retirar el accesorio del portapuntas.
- De la parte delantera de la herramienta.
- Tira del collar de porta punta (D) hacia afuera

Retirar accesorio

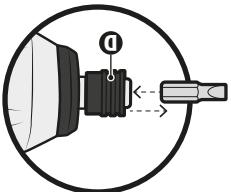


- Estará bloqueado.
- El momento en el que escuche un "clic", el accesorio
- Inserte la punta y suelte el collar.
- Desnudar la herramienta.
- Tira del collar de porta punta (D) hacia afuera de la parte central.
- Coloque el botón de dirección en la posición de bloqueo

Instalación de la punta

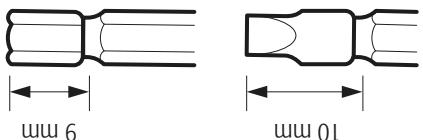

- Usar de puntas incorrectas resultará en un daño a la herramienta.
- El uso de puntas incorrectas resultará en un daño a la herramienta.
- Cargando con las medidas que se muestran en la imagen.
- Use solamente puntas de impacto que adecuadas.
- Utilice siempre las puntas de impacto

Selección de las puntas de impacto y de brocas

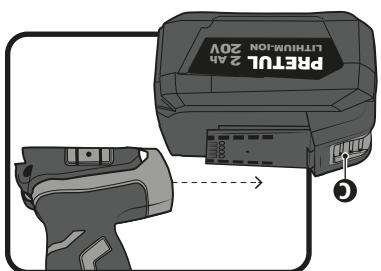

- Para instalar la batería en el mango de la herramienta.
- Alineé la unidad de batería con los ranuras en el interior de la herramienta.
- Una vez que la batería quede fijamente insertada en el mango de la herramienta, deslícela en el interior del mango de la herramienta.
- Para retirar la batería de la herramienta.
- Para retirar la batería, presione el botón de liberación del cierre firmemente de la herramienta para sacarla del mango de la herramienta.
- Para retirar la batería, presione el botón de liberación del cierre firmemente de la herramienta para sacarla del mango de la herramienta.

Instalar y retirar la batería


La batería viene DESCARGADA de fábrica. Será necesario que la cargue por aproximadamente 1 hora 30 minutos antes de poder usarla.

La temperatura normal de carga es de 0 °C a 45 °C. Fuera de este rango se suspende la carga automáticamente hasta que alcance la temperatura normal. La temperatura normal de descarga / tiempode vida útil es de 0 °C a 25 °C. Si los 75 °C se excede, el control electrónico apaga la energía de la herramienta hasta que la temperatura alcance de nuevo el rango óptimo de temperatura. Cuando la batería está debajo de la tensión normal durante el tiempo, la herramienta se apaga de nuevo.

Entre cada carga, dé al cargador 15 minutos de descanso. En un ambiente seco y seco, es posible que la batería se caliente demasiado como para ser recargada. Permita que se enfrie antes de usarla.

Evitar cargar la batería en un ambiente de temperatura ambiente de 0 °C a 25 °C. Si los 75 °C se excede, el control electrónico apaga la energía de la herramienta hasta que la temperatura alcance de nuevo el rango óptimo de temperatura. Una vez que la batería se calienta demasiado, es posible que la batería se recaliente.


Consideraciones para el uso de la batería

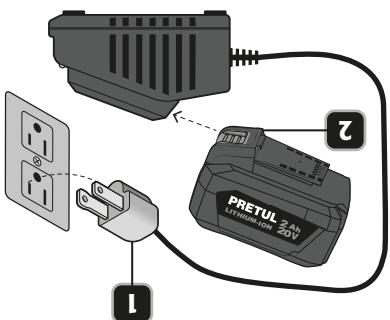

- Si las luces indicadoras de la batería no se encienden después de insertar la batería en el cargador, indica que la batería está defectuosa. Por favor, sustituya la batería por una nueva.
- Si las luces indicadoras de la batería se encienden después de la carga, pero la batería no se calienta, es posible que la batería esté dañada.
- Si la luz roja permanece encendida, es señal de que la temperatura de la batería es menor a 0 °C o mayor a 45 °C. Espere a que la batería se caliente antes de cargarla.
- Desconecte el cargador de la corriente una vez concluida la carga.
- Debe encenderse la batería para cargarla.
- Cuando la batería se enciende completamente cargada, la luz encenderá de nuevo, indicando que la carga se ha iniciado.
- Inserte la batería en el cargador deslizándola como se muestra en la imagen. La luz verde se apagará y la luz roja deberá encenderse, indicando que la carga se ha iniciado.
- Conecte la clavija del cargador en un tomacorriente de 127 V~ (la luz verde del indicador de carga se encenderá).
- Conecte la clavija del cargador en un tomacorriente de 127 V~ (la luz verde del indicador de carga se encenderá).

Carga de la batería

Puesta en marcha

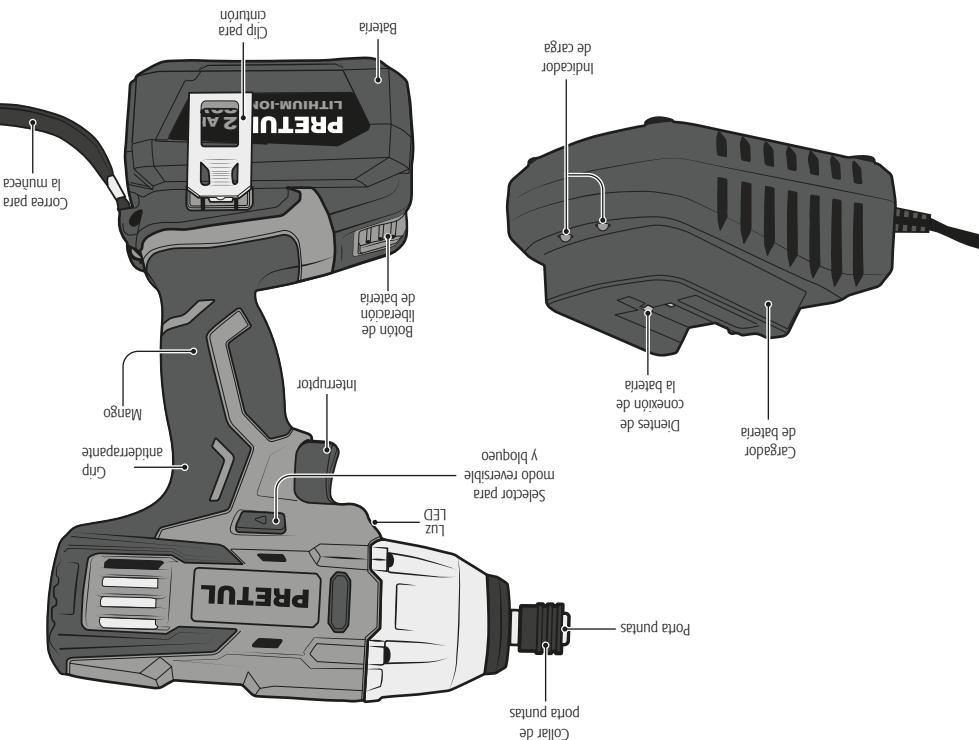

Partes

PRETUL®



Está homologada con la Norma Oficial Mexicana (NOM).

WON

Eso permitte un mejor control de la fermentación en situaciones inesperadas. Visita [descubramos](#) o [rope y ganchos alrededor de las plazas en su país](#). No visitas se te o joyas. Mantenga sus pulseras.

La ropa sin tela, joyas o celuloide largos pueden quedar atrapados en las plazas en movimiento.

En una de esas collar con disquisitivos de extracción y recolección de polvo confeccionadas a la herramienta, verificó que sus conclusiones útiles corredamente.

E uso de estos dispositivos reduce los riesgos relacionados con el polvo.

Seguridad Personal

- 1. Usa el sentido común. Evita el alcohol y las drogas.
- 2. Usa siempre protección para los ojos.
- 3. Usa siempre la seguridad del equipaje.
- 4. Evita arañazos de animales salvajes.
- 5. Usa siempre la protección solar.
- 6. Usa siempre la protección solar.
- 7. Usa siempre la protección solar.
- 8. Usa siempre la protección solar.
- 9. Usa siempre la protección solar.
- 10. Usa siempre la protección solar.

Sección de electricidad

La clavija de la herramienta debe coincidir con el tomacorriente adaptador para darjays de herramientas puestas a tierra. Nunca modifique una clavija. No use ningún tipo de dispositivo que modifique o elimine la conexión a tierra.

Evite el contacto del cuerpo con superficies metálicas que estén en contacto con el suelo. Como tuberías, radiadores, cuchillas eléctricas y refrigeradores.

El uso de goma que libera amianto a la lluvia o condiciones de humedad.

Hay un mayor riesgo de choque eléctrico si el clavijero está puesto a tierra.

Elija una herramienta que cumpla con las normas de la IEC.

No propague la herramienta ni la utilice en condiciones de humedad.

Siempre use guantes de goma para protegerse de los cortocircuitos. Nunca use el cable para transportar, levantar o desencender una herramienta. Mantenga el cable lejos del calor, aceite, artículos inflamables o piezas en movimiento.

Los cables dañados o roturados aumentan el riesgo de choque eléctrico.

Cuando maneje una herramienta en exteriores, use una extensión especial para uso en exteriores.

El uso de una extensión adecuada para exteriores reduce el riesgo de choque eléctrico.

Use una alarma de circuito por un interruptor de circuito de fuga a tierra (GFCI).

Si el uso de la herramienta en un lugar húmedo es inevitable, use una extensión adecuada para exteriores reducida el riesgo de choque eléctrico.

Resea de trabajo

- Manejega el área de trabajo limpia y bien iluminada.
- Instalaciones que cumplen con las normas establecidas.
- Los áreos desordenados y obscuras son propensas a accidentes.
- No maneje la remuneración en aumentos o rebajas.
- como se muestra en la figura 1, gás o polvo inflamables.
- Las herramientas eléctricas producen chispas que pueden encender materiales inflamables.
- La herramienta eléctrica debe ser utilizada a control.

Advertencias generales de seguridad  para herramientas eléctricas

PRETUL
®

especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.



ADVERTENCIA AI opera hermanas magazins como "Liso y flexible", "Máscara y Solteras", "Estás más que bien" y "Volver". Estas páginas no son responsables de las publicaciones realizadas en ellas.

СИМВОЛЫ И СИГНАЛЫ ПРОЦЕССОВ СОСУДОВОЙ СИСТЕМЫ


de 10 A hasta 13 A	de 13 A hasta 15 A	de 15 A hasta 20 A
16 AWG*	14 AWG	12 AWG
18 AWG*	16 AWG	8 AWG
18 AWG(*)	16 AWG	6 AWG
de 10 A hasta 10 A	3 (uno a tres)	

Capacidad en Amperes Número de conductores de 1.8 m a 15 mayor de 15 m

Calibre de extension

herramienta. Si tiene dudas use el siguiente calibre más alto.

ADVERTENCIA Al usar un cable de conexión, asegúrese de usar el cable que suministra su herramienta. Un cable de un calibre inferior o calibre insuficiente puede causar daños al dispositivo y sobreexponerlo a la electricidad. Los cables de tensión en la línea, teniendo en cuenta que consumen más corriente que los cables de conexión, se generan más calor. Un cable de longitud excesiva o demasiado corto debe ser evitado. Pueden producirse quemaduras si se aplica una fuerza excesiva a la conexión. Los cables deben ser utilizados de acuerdo con las normas y especificaciones establecidas en la Placa de datos de la herramienta.

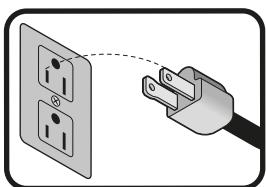

Requerimientos eléctricos

A) ADVERTENCIA Si el cable de servicio Autotizado TRUPER, con el fin de evitar daños en el sistema eléctrico de esta red, este debe ser empalmado por el fabricante o la constructora del sistema eléctrico que lo ha instalado. Los cables de servicio deben ser empalmados por los técnicos autorizados de la red.

La clase de constucción del cargador es: Alismiento reforzado

Código •	28269	Descripción •	Destornillador de impacto inalámbrico
Porta puntas •	1/4" (6.5 mm)	Tensión •	20 V•
Velocidad variable •	0 r/min - 2 200 r/min (RPM)	Golpes por minuto •	0 golpes/min - 3 000 golpes/min (BPM)
Rotación •	adelante - reversa	Grado IP •	IP 20
Torque máximo •	180 Nm (133 lb·ft)	Batería •	Ión-litio 20 V•= 2 Ah Tiempo de carga: 55 minutos aproximadamente
Cargador •	Entrada: Tensión: 127 V~ Frecuencia: 60 Hz Salida:	Corriente: 0.9 A	Tensión: 21 V• Corriente: 2.5 A

DIMI-20P

- ▲ Realice **MANTENIMIENTO** periódico a su maquinaria (página 9).
- ▲ Mantenga limpios los orificios de ventilación de la herramienta y del cargador.
- ▲ Siga las indicaciones de operación y funciones (página 8).
- ▲ Siga las **CONSIDERACIONES** de carga para la batería (página 6 y 7).
- ▲ Cargue la batería únicamente con el cargador incluido o su equivalente recomendado por **TRUPER®**.

Recomendaciones de uso y cuidados

12	Poliza de garantía
11	Centros de servicio autorizados
10	Notas
9	Protección ambiental
8	Mantenimiento
6	Solución de problemas
7	Puesta en marcha
6	Partes
5	Advertencias de seguridad para uso de destornillador de impacto inalmbrico
4	Advertencias generales de seguridad para herramientas eléctricas
3	Requerimientos eléctricos
3	Especificaciones técnicas

ATENCIÓN

Indice


PRETUL®



Lea este instructivo por completo
antes de usar la herramienta.



! ATENCIÓN

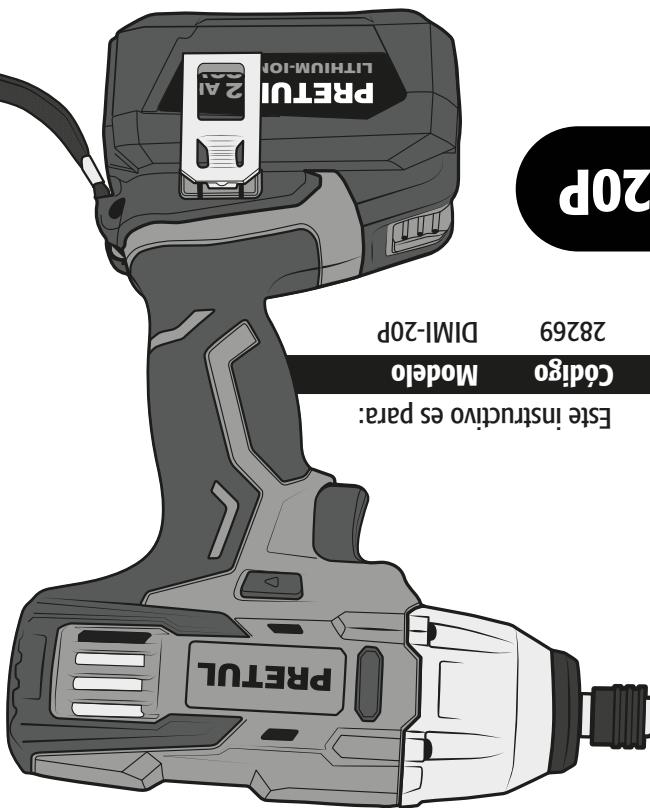

DMI-20P

28269 DMI-20P

Código Modelo

Este instructivo es para:

Porta puntas

20 V = 1/4"

6.5 mm

Destornillador de impacto inalámbrico

Instructivo de

PRETUL®

ESPAÑOL
ENGLISH