

Lea todas las instrucciones de seguridad en la escalera y en este mapa antes de usar la escalera

**IMPORTANT: All instructions must be read carefully before using the ladder. Keep instructions for future reference.**


**PASO 1. EXPANDA LA ESCALERA TELESCÓPICA**

1. Suelte la correa que asegura la carga
2. Coloque la escalera en posición vertical en una posición inicial.
3. Coloque su pie en el peldaño inferior para mantenerlo estable en su lugar
4. Retire el conector del peldaño superior con ambas manos
5. Asegúrese de que cada peldaño esté levantado hasta su extensión completa y bloqueado, antes de intentar extender el siguiente peldaño.
6. Descargue el número deseado de pasos hasta alcanzar la altura deseada
7. Para evitar accidentes, se recomienda no pararse en los últimos tres peldaños de la escalera.

**PASO 2. PLEGADO DE LA ESCALERA TELESCÓPICA**

Tenga mucho cuidado al plegar la escalera. No coloque ninguna parte de su cuerpo, incluidas las manos, los dedos o los pulgares, entre los peldaños o por encima del peldaño de cierre.

1. Agarre la escalera por los acoplamientos debajo del peldaño y asegúrese de haber activado los pestillos.
2. Coloque el pulgar sobre los botones de bloqueo que desea excluir.
3. Coloque el resto de su mano debajo del acoplamiento.
4. Si pone el resto de su mano sobre el mecanismo de bloqueo, ¡puede quedar atrapado entre los pies!
5. Al mismo tiempo, presione los botones de bloqueo hacia adentro (entre sí), mientras la etapa superior descende.
6. Repita la operación para cada paso.

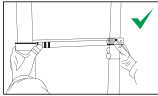

**Paso 3. ESCALERA TELESCÓPICA PARA COSECHA**

1. Al extender la escalera, asegúrese de que la escalera esté firmemente nivelada, no la coloque sobre una superficie inestable.
2. Extienda la escalera con los tornos hacia usted.
3. No transporte ni use la escalera cerca de líneas eléctricas o equipos. La escalera puede inducir su electricidad.
4. Guarde la escalera en un lugar seco para evitar la humedad.
5. No la use como silla de montar.
6. Guarde la escalera en un lugar seco para evitar humedad.
7. No usar como sillón.

**CUIDADO Y MANTENIMIENTO**

Para un funcionamiento óptimo, mantenga la escalera limpia de residuos.

**STEP 1. EXPAND TELESCOPIC LADDER**

1. Release the strap that secures the ladder.
2. Place the ladder upright in a starting position.
3. Place your foot on the bottom rung to hold stable in place.
4. Remove the connector of the top rung with both hands.
5. Make sure that each rung is pulled up to its full extension and is locked, before attempting to extend the next rung.
6. Download the desired number of steps until you reach the desired height.
7. Never stand or climb closer than 3 feet from the top.



**TIP:** To extend the ladder to its full height, pull up on the top rung and make sure it locks in place. Then proceed with the rest. Again make sure that each rung locks in place before pulling up the next rung.

**STEP 2. FOLDING THE TELESCOPIC LADDER.**

Please, be very careful when folding the ladder. Do not place any parts of your body, including hands, fingers or thumbs, between the rungs or higher than the closing rung.

**TIP:** Do not forget that just as the ladder extends and locks in one rung, it also closes in one rung. Each rung closes by simultaneously pushing the latches of the previous, lower rung inward. Start from the highest rung you reach. Please close each rung by safe drop. Please make sure that the rest of your hand is below the rung (see diagram).

1. Grasp the ladder by the couplings below the rung and make sure that you have activated the latches.
2. Place your thumb on the lock buttons that you want to exclude.
3. Place the rest of your hand under the coupling.
4. If you put the rest of his hand over the locking mechanism may be stuck between the feet!
5. Simultaneously, push the lock buttons inside (one another), while the upper stage drop down.
6. Repeat this operation for each step.

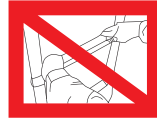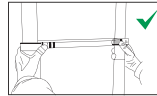

**SAFETY:** If the next lower rung is fully extended, the previous rung will stop. You can close the ladder completely when you also close the next lower rung.

**STEP 3. HARVESTING TELESCOPIC LADDER**

Placing the "security strap". Make sure that the strap is tight and well fastened. When carrying place your hand on the outside of the ladder and hold the handle located underneath the 2nd rung, so the ladder won't open. It may cause injuries to the users as well as damage on the ladder itself.

**IMPORTANT TO REMEMBER!**

1. Read all safety instructions on the ladder and on this map before using the ladders.
2. When extending the ladder, make sure that the ladder is securely standing on level, do not place on unstable surface.
3. Extend the ladder with the latches facing you.
4. Lean the ladder only with the top end of rungs against a firm surface, never lean the ladder against a part of the unfolded rungs. It may cause damage.
5. Do not carry or use the ladder near power lines or equipment. The ladder can induce its electricity.
6. Store the ladder in a dry place to avoid moisture.
7. Do not use as a saddle.

**CARE AND MAINTENANCE**

For consistent, smooth operation, keep ladder clean of any debris.

