

**INSTRUCTIVE**

Read the instruction manual before use

1.- To extend the handle, turn it counterclockwise.



2.- Extend the handle to the desired height.



3.- To secure the measuring wheel handle again, turn it clockwise.



4.- The maximum measurement capacity is 999.99 m, return the counter mark to 000.00 by pressing the button.




## MEASURING FROM WALL TO WALL

Place the odometer on the floor, with the back of the wheel against the wall.

Proceed to move in a straight line to the next wall.

Record the meter reading. The diameter of the wheel must be added to this reading (10 cm).

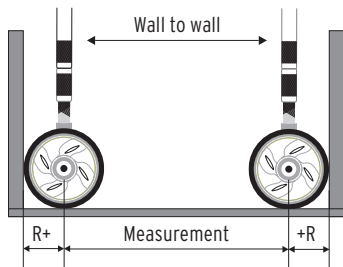


## MEASURE FROM WALL TO ANY POINT

Place the measuring wheel on the floor, with the back of the wheel against the wall.

Proceed to move in a straight line to the desired point.

Record the meter reading. The radius of the wheel must be added to this reading (5 cm).

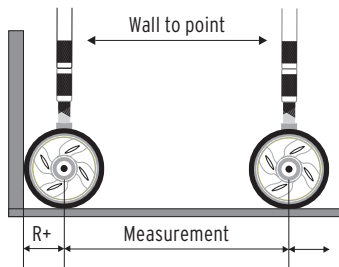


## MEASURING FROM ONE POINT TO ANOTHER

Place the measuring wheel on the ground, mark the start of the measurement with the point on the tire.

Proceed to move in a straight line to the desired point.

Record the meter reading.

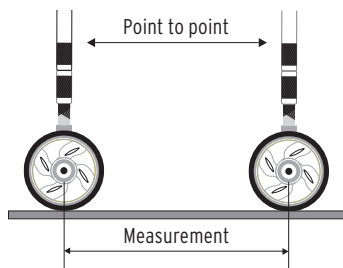

Imported by **Truper, S.A. de C.V.** Parque Industrial 1,  
Parque Industrial Jilotepec, Jilotepec, Edo. de Méx.  
C.P. 54257, Made in China, Phone number 761 782  
9100. [www.truper.com](http://www.truper.com) 12-2019