


Model

Electric Pressure Washer

9.3 MPa
1350 PSI

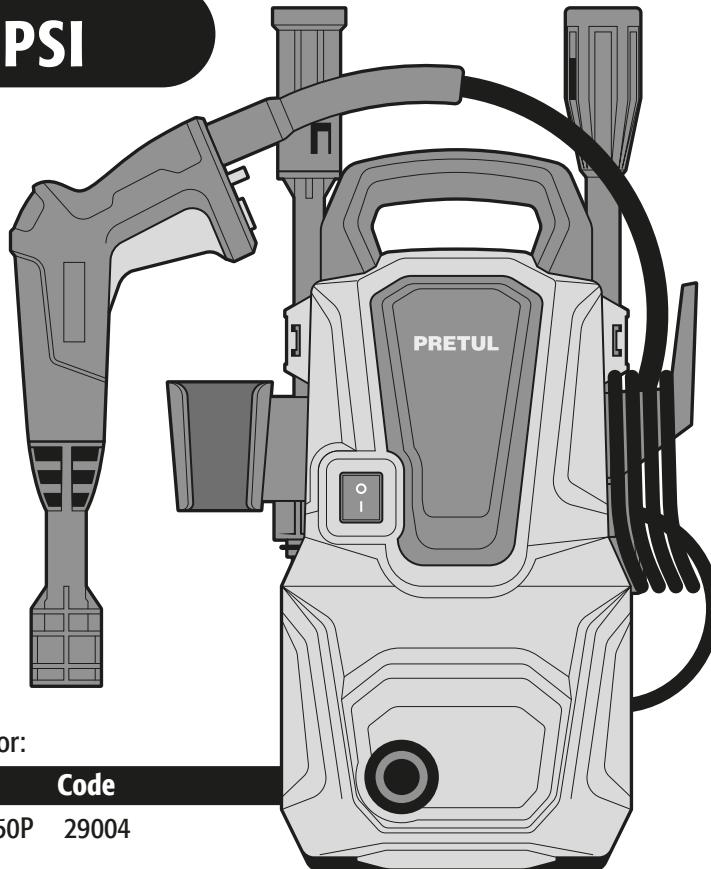

Applies for:

Model	Code
HILA-1350P	29004



Read the user's manual thoroughly
before operating this tool.



Technical data	3
Power requirements	3
 General power tool safety warnings	4
 Safety warnings for using pressure washers	5
Parts	6
Assembly	7
Start up	8
Maintenance	9
Troubleshooting	10
Authorized service centers	11
Warranty policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.



Use and care recommendations




THIS MACHINE DOES NOT SUCK WATER FROM PONDS OR TANKS.

It must be connected to a supply outlet or an elevated tank.



ALWAYS USE THE FILTERS AND CLEAN THEM AFTER EACH USE.

Replace the filter when it is cracked or worn.

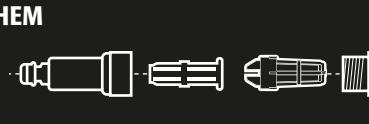

FULFILL THE WORKING CYCLES.

50 min of work and 20 min of rest. Daily maximum 3 hours.



Perform periodic **MAINTENANCE** to your machine (page 9).

HILA-1350P

Code	•	29004
Description	•	Electric Pressure Washer
Maximum Pressure	•	1 350 PSI
Minimum and Maximum Water Input Pressure	•	14 PSI - 58 PSI
Maximum Input Temperature	•	104 °F
Maximum Flow Rate	•	1.2 GPM
Voltage	• 127 V ~	Frequency • 60 Hz
Noise Level	•	92 dB
Vibration Level	•	1.8 m/s ²
Weight	•	9.5 lb
Work Cycle	•	50 minutes' work per 20 minutes' rest Maximum 3 hours daily.
Conductors	•	18 AWG x 2C with 221 °F insulation temperature
Insulation	• Class II	IP Grade • IPX5

Power Cord Grips used in this product: Type "Y"

Tool Build Quality: Reinforced

Thermal insulation on motor winding: Class F

⚠ WARNING

Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a  **TRUPER** Authorized Service Center.

The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use.

Do not expose to rain, liquids and/or dampness.

⚠ WARNING


Before gaining access to the terminals all power sources should be disconnected.



Power requirements

⚠ WARNING

Tools with double insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Double insulation eliminates the need of both a grounded third power cord with three prongs or a grounded power connection.

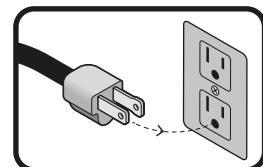

⚠ WARNING

When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension gauge	
		from 6' to 49'	higher than 49'
from 0 A and up to 10 A	10 A	18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A		14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

⚠ WARNING

When operating power tools outdoors, use a  **VOLTECK** grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



⚠ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. Save all warnings and instructions for future references.

Work area**Keep your work area clean, and well lit.**

Cluttered and dark areas may cause accidents.

**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

Sparks generated by power tools may ignite the flammable material.

**Keep children and bystanders at a safe distance while operating the tool.**

Distractions may cause loss of control.

**Electrical Safety****The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.

**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety**Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.

**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry or long hair, may get caught in moving parts.

**If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.**

Using these devices reduce dust-related risks.

Power Tools Use and Care**Do not force the tool. Use the adequate tool for your application.**

The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.

**Keep the cutting accessories sharp and clean.**

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service**Repair the tool in a  TRUPER Authorized Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.

Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.

Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



This tool is in compliance with the Official Mexican Standard (NOM - Norma Oficial Mexicana).

Safety warnings for using pressure washers

PRETUL®

- A certified electrician shall carry out the connection to the power supply. It is recommended to include in said supply a residual current device to interrupt the power supply if the grounded leakage current is exceeding 30 mA per 30 s or a device that delivers the ground circuit.

⚠ WARNING • This device has been designed to be used with the cleaning agent supplied or recommended by the manufacturer. Using other type of cleaning agents or chemical substances may seriously affect the device safety.

⚠ WARNING • Do not use the device in the presence of third parties unless wearing protective clothes.

⚠ WARNING • High-pressure jet may be dangerous if misused. The jet shall not be aimed directly against any living being, active electric equipment or the device.


- Do not aim the jet against yourselves or third parties to clean clothes or shoes.
- Disconnect the device from the power supply before carrying out user's maintenance.
- The pressure washer shall not be used by children or people with no training in its use.
- To guarantee the device safety, use original or factory approved spare parts.

⚠ WARNING • High pressure nozzles, guards and couplings are important for the device safety. Use only nozzles, guard and couplings recommended by the manufacturer.

- Do not use the device if the power cable of important parts in the device show damage, for example, safety devices, high-pressure nozzles, high-pressure gun, etc.
- If using an extension cord for the power cable, the plug and power supply shall be constructed against water seeping in.

⚠ WARNING • An inadequate extension cable

can be dangerous.

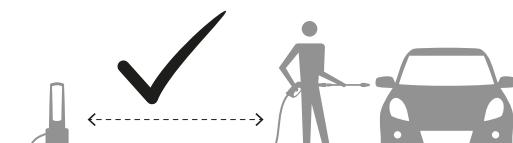

Correct way to operate the pressure washer



Wrong way to operate the pressure washer

Before operating de pressure washer

⚠ CAUTION • Pressurized spray is very powerful and dangerous if misused. It is not recommended for painted surfaces, wood surfaces or articles attached with adhesive.

⚠ WARNING • Do not use bleach, chloride, chemical products or any other cleaner containing acid or that is not specific for pressure washers. Otherwise the device can be seriously damaged.

- To minimize the amount of water entering in contact with the pressure washer during the operation, set it as far as possible from the place to be washed.

When operating the pressure washer

⚠ WARNING • Wear eye protection and thick clothes.

- When spraying, always use both hands to gain total control of the lance.

⚠ WARNING • Never touch the nozzle or the water spray while the pressure washer is in operation.

- To allow free air circulation while being operated DO NOT cover it.

⚠ WARNING • Keep all the connections dry and above ground.

⚠ WARNING • Do not touch the plug with wet hands

After operating the pressure washer

- Disconnect the power cable when not using the pressure washer and before removing the high-pressure hose.

⚠ CAUTION • When the pressure washer is not being used and to prevent an accidental discharge, enable the trigger lock in the spraying gun.

- Never make knots nor fold the high-pressure hose. It may get damaged.




⚠ CAUTION • Do not use or store this product when temperature falls below 40 °F. The warranty will not cover damage due to freezing.

Automatic stop

- The pressure washer is built with a stopping device that detects when the spraying gun trigger is released. It opens and electric circuit in the motor to stop the pressure washer.

⚠ WARNING • If the Automatic Stop fails, DO NOT USE the pressure washer. Contact a  TRUPER® authorized Service Center. Using the pressure washer in this condition may damage the device and / or cause personal injuries



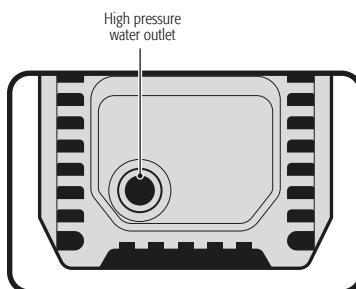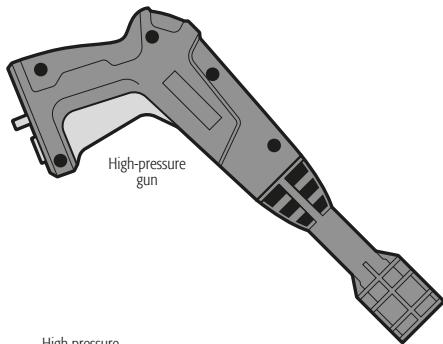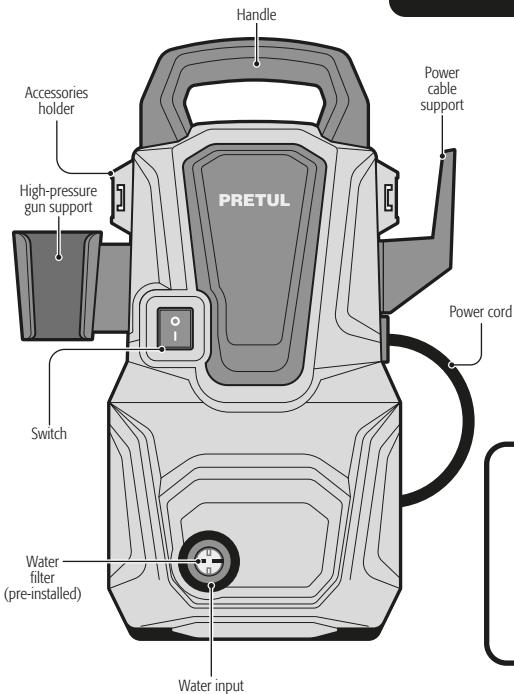

Lance with
adjustable nozzle




Lance
(extension)



Water
filter



Fast
connector

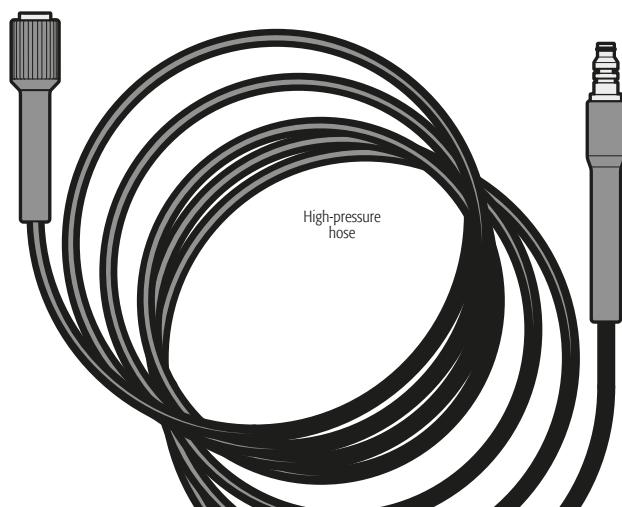

Assembly

PRETUL®






• Some parts of your pressure washer are not assembled. Follow these steps to install them:

1. Place the handle on the top of your pressure washer and attach it with the included screws.
2. Place the high-pressure gun holder and the electric cable holder on the sides of your pressure washer according to the parts of diagram.

- Remove the packaging caps in the device water inlet and outlet.
- Fix the external filter (B) in the water inlet of the pressure washer (A) as shown in the image.

CAUTION Before disconnecting the garden hose, leave the water running through to expel any object inside it.

- Connect the garden hose (C, not included) to the fast connector (D) and the fast connector to the filter (B).
- Connect the high-pressure hose (H) into the pressure washer high pressure outlet (F). Turn clockwise to tighten the connection.
- Keep the button (I) pressed when connecting the high-pressure hose end (H') into the high-pressure gun. When the hose end butts, release the button to secure the hose and prevent leaks.
- Insert the "T" shaped lock of the lance (extension) (K) into the high-pressure gun notch, in a vertical position. When the lance is touching the spring, depress to fight the spring force and simultaneously turn the lance, a 1/4 turn clockwise until the lance fits firmly in position.
- Repeat this procedure to set the lance with adjustable nozzle (L) into the lance (extension) end.

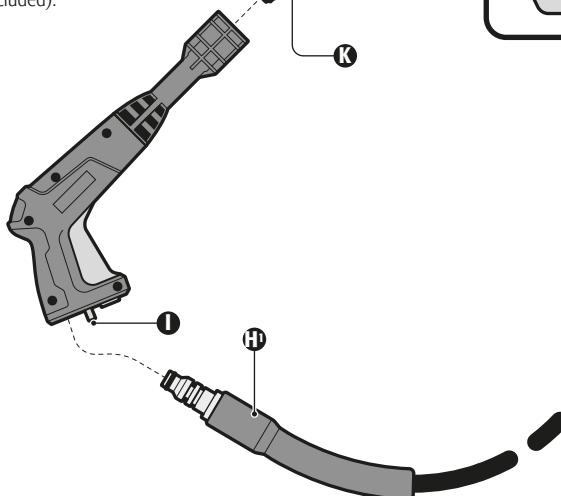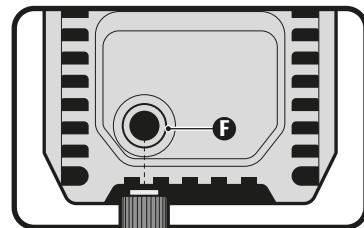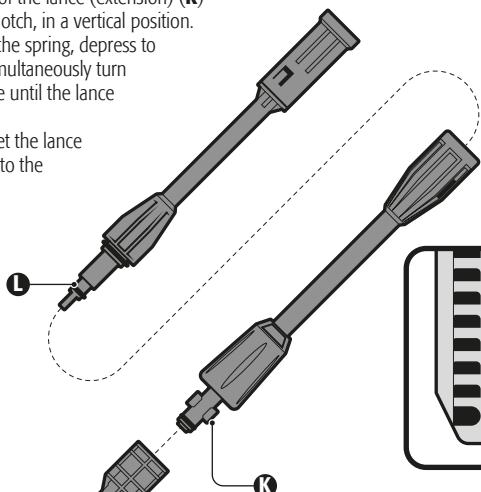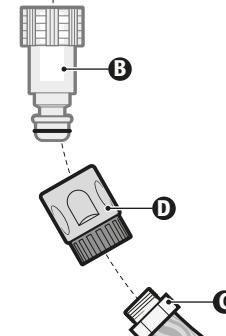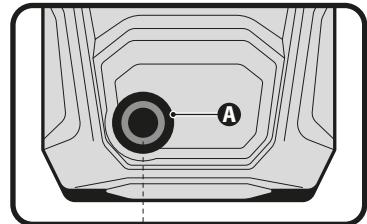


* Available:

Pretul LAT-HILAP Dirt blaster. Truper SOAP-HC Foam cannon and SOAP-HILA Soap dispenser (not included).


Turning ON

- Open the water faucet. Keep it open while using the pressure washer.
- Completely untangle the power cable and connect the plug into the power supply. In this step, do not turn ON the pressure washer.
- Press and hold the high-pressure gun trigger to release the air trapped inside the pressure washer. Release the trigger when the water flows constantly.
- Turn the switch into position I (ON). The motor will start momentarily and then, it will stop.

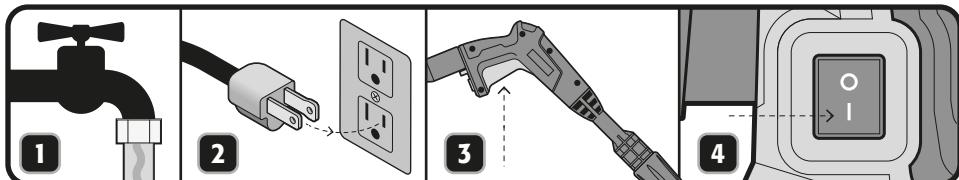
**Using standing water**

- To use standing water instead of running water, set the standing water container at least 1 meter high regarding the ground level. It is necessary to have a safe and adequate connection (flexible hose).
- Before operating the pressure washer, double check the high-pressure hose is disconnected.
- Connect the flexible hose that comes from the stored water container to the flow inlet of the pressure washer. Check that the flow to the pressure washer is constant (not less than 12.5 L/min).
- Press and hold the trigger of the gun to allow free flow of water. Turn on the pressure washer until water comes out of the gun. The hose should not operate without water for more than 1 minute.


⚠️ WARNING • It is important that the standing water container is full all the time. Using the pressure washer dry more than 2 minutes will damage the high-pressure pump and it is not covered with the Warranty.

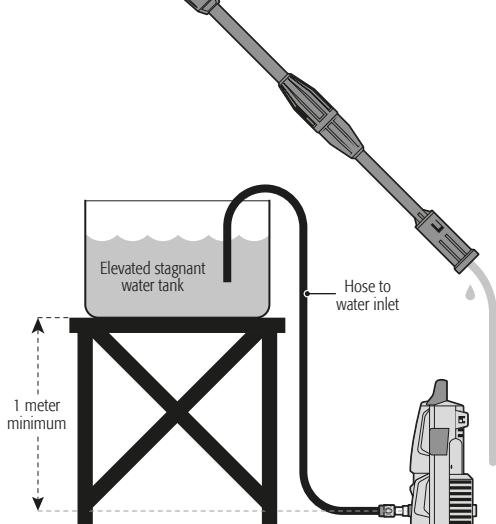**Spraying**

- Press the gun trigger to start spraying.
- To stop spraying, just release the trigger.
- The gun has a blocking button (A) to prevent accidental spraying. Pointing the gun to the front, the button will show to the left when the trigger is blocked and to the right, when it is released.

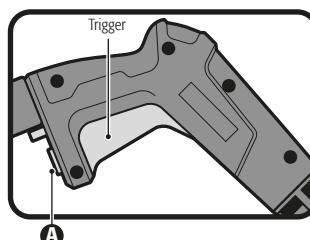**Lance Nozzle**

Concentrates the spray into a beam

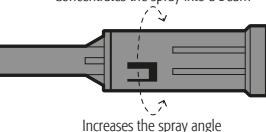

- Adjustable mist nozzle: Turn the nozzle to open or close the mist angle. The mist, with the open angle, encompasses a wider surface and is ideal to rinse surfaces. With the angle closed, mist is aimed to one point and is ideal to clean.

WARNING Disconnect the power cord from the outlet before making any adjustments, service or maintenance to the pressure washer.

- Any repairs or maintenance shall be carried out only in a  **TRUPER®** Authorized Service Center.
- It is recommended to take the equipment for maintenance once a year to inspect components such as carbons, bearings, etc.

Cleaning and care

- Keep the pressure washer free of dust. Never use water or chemical cleaners to clean the pressure washer. Clean only with a clean, dry cloth.
- Always keep the vents clean and free of obstructions to ensure proper cooling of the motor.
- Regularly inspect all mounting screws and make sure that they are tightened correctly. If any of the screws are loose, tighten them immediately.
- The motor is the heart of the pressure washer. Be very careful that it is not affected by oil or water.
- Periodically check the power cord for any damage. If damaged, have the cable replaced at a  **TRUPER®** Authorized Service Center.

Lubrication of nozzles

- Nozzles should be lubricated with non-water-soluble grease or light oil on a regular basis.
- A blocked nozzle causes the pressure in the pressure pump to rise too high. It should be cleaned immediately.
 - 1) Remove the blockage in the nozzle by inserting the nozzle cleaner through the center hole.
 - 2) Purge the nozzle with water. Restart the pressure washer and press the trigger of the high-pressure gun. If the pressure is still high repeat steps 1 and 2.

Lubrication of the pressure washer

- Take the machine to a  **TRUPER®** Authorized Service Center every six months for maintenance (lubricate valves and change oil).

CAUTION In case of oil leakage, contact a  **TRUPER®** Authorized Service Center.

Carbon brushes replacement

- Carbon brushes shall be checked periodically and be replaced always in a  **TRUPER®** Authorized Service Center when worn.
- After being replaced, ask the technician to inspect if the carbon brushes move freely in the carbon brushes housing. Ask to turn ON the pressure washer 5 minutes to even out the carbon brushes and commutator contact.
- Only use original  **TRUPER®** spare carbons specifically designed with the hardness and electric resistance for each type of motor. Carbon brushes that are out of specification may damage the motor.
- When replacing carbon brushes always replace both.

Lubrication of connections

- The connections in the pressure washer hoses, the spray gun and spears shall be cleaned regularly and lubricated with non-soluble grease to prevent leaks and damage the seals in each connection.

Water filter


- Any foreign particles that enter the pressure washer pump can damage it. To avoid this possibility, the pressure washer has two water filters.
- Filters should always be clean to keep water flowing and prevent damage to the pump.

Cleaning the internal filter (A):

- Remove the filter carefully.
- Rinse it and place it inside the machine.

Cleaning the external filter (B):

- After each use, unscrew the filter. Disassemble it and rinse the two parts.
- Reassemble it and verify that the thread screws tightly without forcing it. Do not overtighten to avoid damaging the thread.
- Replace filters when they are broken or wear and tear.

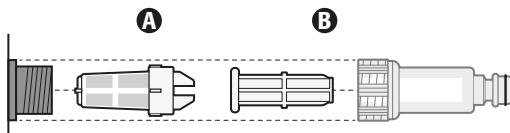

Winter storage

- Turn OFF the pressure washer and depress the trigger to release the pressure trapped inside the unit.
- Remove the garden hose and the pressure hose.
- Turn ON the pressure washer and leave it running 5 seconds to eliminate almost all the water trapped inside the pump.
- Disconnect the pressure washer and put away the cable.
- Store the pressure washer and the accessories in a dry environment with controlled temperature. Do not store the pressure washer and the accessories where temperature can drop to 40 °F.

CAUTION DAMAGE DUE TO FREEZING IS NOT COVERED BY THE WARRANTY.

Problem	Possible Cause	Solution
The pressure washer is not starting.	<ul style="list-style-type: none"> • Pressure washer is not connected. • Faulty power supply. • Blown fuse. • Defective extension cable. 	<ul style="list-style-type: none"> • Connect the pressure washer. • Use a different power supply. • Replace the fuse. Turn OFF other machines. • Replace the extension cable.
Pressure is not constant.	<ul style="list-style-type: none"> • The pump is drawing in air. • Dirty, worn, or stuck valves. • Worn pump seals. 	<ul style="list-style-type: none"> • Check the hoses and connections have no leaks. • Clean the dirty parts and replace the worn ones. • Go to a  TRUPER® Authorized Service Center if the problem still persists.
The pressure washer stops while working.	<ul style="list-style-type: none"> • Blown fuse. • Incorrect power supply. • Thermal sensor is activated. • Nozzle partially blocked. 	<ul style="list-style-type: none"> • Replace the fuse. • Turn OFF other machines. Check the voltage supply is matching the specified voltage specified in this instruction. • Allow the pressure washer to cool down. • Clean the nozzle.
The fuse blows.	<ul style="list-style-type: none"> • The fuse is too small. 	<ul style="list-style-type: none"> • Change to an installation higher than the ampere consumption of the pressure washer. • Try not using the extension cable.
The pressure washer is pulsating.	<ul style="list-style-type: none"> • Air in the hose. • Wrong water supply. • Nozzle partially blocked. • Air filter blocked. • Tangled hose. 	<ul style="list-style-type: none"> • Run the pressure washer with the trigger open until it runs regularly and pressure restarts. • Check the water supply meets the required specifications. Avoid using long and thin hoses. Minimum $1\frac{1}{2}$". • Clean the nozzle. • Clean the filter. • Straighten the hose.
The pressure washer starts but no water comes out.	<ul style="list-style-type: none"> • Frozen pump, hoses or accessories. • No water supplies. • The water filter is blocked. • The nozzle is blocked. 	<ul style="list-style-type: none"> • Wait for the thawing of the pump, hoses or accessories. • Connect the water input. • Clean the filter. • Clean the nozzle.

Authorized service centers

In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers 800 690-6990 or 800-018-7873 to get information about the nearest Service Center.

AGUASCALIENTES **DE TODO PARA LA CONSTRUCCIÓN**
GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20050,
AGUASCALIENTES, AGS. TEL.: 449 994 0537

BAJA CALIFORNIA **SUCURSAL TIJUANA**
AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL
FLORIDO II, C.P. 22244, TIJUANA, B.C.
TEL.: 664 969 5100

BAJA CALIFORNIA SUR **FIX FERRETERÍAS**
FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO
NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S.
TEL.: 613 132 1115

CAMPECHE **TORNILLERÍA Y FERRETERÍA AAA**
AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA
C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808

CHIAPAS **FIX FERRETERÍAS**
AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700,
TAPACHULA, CHIS. TEL.: 962 118 4083

CHIHUAHUA **SUCURSAL CHIHUAHUA**
AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL
BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415,
CHIHUAHUA, CHIH. TEL.: 614 434 0052

Ciudad de MÉXICO **FIX FERRETERÍAS**
EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35,
COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX.
TEL.: 55 5522 5031 / 5522 4861

COAHUILA **SUCURSAL TORREÓN**
CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL
ORIENTE, C.P. 27278, TORREÓN, COAH.
TEL.: 871 209 68 23

COLIMA **BOMBAS Y MOTORES BYMTESA DE MANZANILLO**
BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE
SEPTIEMBRE, C.P. 28239, MANZANILLO, COL.
TEL.: 314 332 1986 / 332 8013

DURANGO **TORNILLOS ÁGUILA, S.A. DE C.V.**
MAZURO #200, COL. LUIS ECHEVERRÍA, DURANGO,
DGO. TEL.: 618 817 1946 / 618 818 2844

ESTADO DE MÉXICO **SUCURSAL CENTRO JILOTEPEC**
PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL
JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257
TEL.: 761 782 9101 EXT. 5728 Y 5102

GUANAJUATO **CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.**
AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010,
Celaya, GTO. TEL.: 461 617 7578 / 79 / 80 / 88

GUERRERO **CENTRO DE SERVICIO ECLIPSE**
CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010,
CHILPANCINGO, GRO. TEL.: 747 478 5793

HIDALGO **FERREPRECIOS S.A. DE C.V.**
LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE
ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO,
HGO. TEL.: 775 753 6615 / 775 753 6616

JALISCO **SUCURSAL GUADALAJARA**
AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL
VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL.
TEL.: 33 3600 5285 AL 90

MICHOACÁN **FIX FERRETERÍAS**
AV. PASEO DE LA REPÚBLICA #3140-A, COL.
EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA,
MICH. TEL.: 443 334 6858

MORELOS **FIX FERRETERÍAS**
CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL.
CENTRO, C.P. 62740, CUAUTLA, MOR.
TEL.: 735 352 8931

NAYARIT **HERRAMIENTAS DE TEPIC**
MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY.
TEL.: 311 258 0540

NUEVO LEÓN **SUCURSAL MONTERREY**
CARRETERA LAREDO #300, 1B MONTERREY PARKS,
COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO,
NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790

OAXACA **FIX FERRETERÍAS**
AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300,
TUXTEPEC, OAX. TEL.: 287 106 3092

PUEBLA **SUCURSAL PUEBLA**
AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA,
C.P. 72710, CUAUTLACINGO, PUE.
TEL.: 222 282 8282 / 84 / 85 / 86

QUERÉTARO **ARU HERRAMIENTAS S.A. DE C.V.**
AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE
ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO.
TEL.: 427 268 4544

QUINTANA ROO **FIX FERRETERÍAS**
CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL,
C.P. 77710 PLAYA DEL CARMEN, Q.R.
TEL.: 984 267 3140

SAN LUIS POTOSÍ **FIX FERRETERÍAS**
AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320,
SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341

SINALOA **SUCURSAL CULIACÁN**
AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA
MORA, C.P. 80145, CULIACÁN, SIN.
TEL.: 667 173 9139 / 173 8400

SONORA **FIX FERRETERÍAS**
CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL.
CENTRO, C.P. 85000, CD. OBREGÓN, SON.
TEL.: 644 413 2392

TABASCO **SUCURSAL VILLAHERMOSA**
CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL,
2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB.
TEL.: 993 353 7244

TAMAULIPAS **VM ORINGS Y REFACCIONES**
CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL.
RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA,
TAMS. TEL.: 899 926 7552

TLAXCALA **SERVICIOS Y HERRAMIENTAS INDUSTRIALES**
PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ,
C.P. 90970, SAN PABLO DEL MONTE, TLAX.
TEL.: 222 271 7502

VERACRUZ **LA CASA DISTRIBUIDORA TRUPER**
BLVD. PRIMAVERA ESO. HORTENSIA S/N, COL.
PRIMAVERA C.P. 93508, POZA RICA, VER.
TEL.: 782 823 8100 / 826 8484

YUCATÁN **SUCURSAL MÉRIDA**
CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY,
MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC.
TEL.: 999 912 2451

Code	Model	Brand
29004	HILA-1350P	PRETUL®

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by **Truper®**. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number **800-018-7873**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. ZIP code. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date: