

Manual


Angle grinder

1.6 Hp

Power

4 1/2"

Wheel

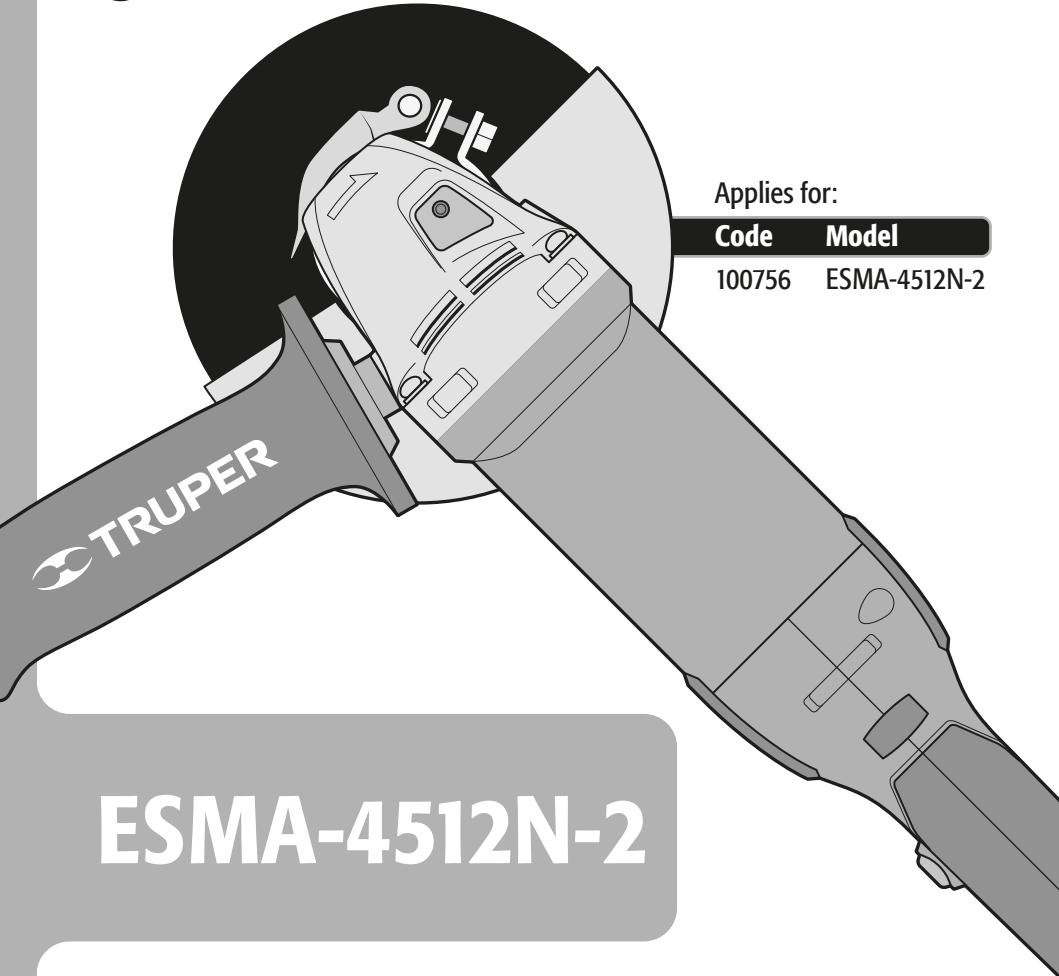

ESMA-4512N-2

Applies for:

Code Model

100756 ESMA-4512N-2



Read this manual thoroughly
before using the tool.



Technical Data	3
Power Requirements	3
 General power tool safety warnings	4
 Safety warnings for angle grinders	5
Parts	7
Preparation	7
Start Up	8
Maintenance	9
Notes	10
Authorized Service Centers	11
Warranty Policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations

⚠ TO EXTEND THE LIFE OF YOUR TOOL, CLEAN IT WITH COMPRESSED AIR AFTER EACH USE.

⚠ FULFILL THE WORKING CYCLES
50 min of work and 20 min of rest. Daily maximum 6 hours.



⚠ NEVER use or pull the power cord to carry, lift, or disconnect the tool.

⚠ NEVER press the lock button while the wheel is running.



⚠ Perform periodic **MAINTENANCE** to your machine (page 9).

ESMA-4512N-2

Code	•	100756
Description	•	Angle grinder
Grinding Wheel	•	4 1/2"
Voltage	•	220 V~
Frequency	•	50 Hz / 60 Hz
Current	•	5.5 A
Power	•	1.6 Hp
Speed	•	11 000 r/min
Duty cycle	•	50 minutes work per 20 minutes idle. Maximum 6 hours per day.
Conductors	•	H05RN-F 2X0.75 mm ²
Insulation	•	Class II
		IP Grade • IP 20

Power Cord Grips used in this product: Type Y
Tool Build Quality: Reinforced insulation.
Thermal insulation on motor winding: Class E

⚠ WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER Authorized Service Center.

The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use.

Do not expose to rain, liquids and/or dampness.


⚠ WARNING Before gaining access to the terminals all power sources should be disconnected.



Power Requirements

⚠ WARNING Tools with double insulation and reinforced insulation eliminate the need of a grounded power cord with three prongs or a grounded power connection.

⚠ WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

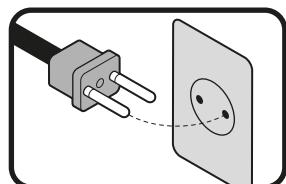

Ampere Capacity	Number of Conductors	Extension gauge	
		from 6' to 49'	higher than 49'
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A		14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

⚠ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area**Keep your work area clean, and well lit.**

Cluttered and dark areas may cause accidents.

**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

Sparks generated by power tools may ignite the flammable material.

**Keep children and bystanders at a safe distance while operating the tool.**

Distractions may cause loss of control.

**Electrical Safety****The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.

**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety**Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.

**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry or long hair can become caught in moving parts.

**If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.**

Using these devices reduce dust-related risks.

Power Tools Use and Care**Do not force the tool. Use the adequate tool for your application.**

The correct tool delivers a better and safer job at the rate for which it was designed.

**Do not use the tool if the switch is not working properly.**

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service**Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.

Conformidad
Europea

Safety warnings for angle grinders

This power tool is intended to function as a cutting tool. Read all safety warnings, instructions and specifications provided. Failure to follow the instructions outlined below may result in electric shock, fire and/or serious injury.

TRUPER
INDUSTRIAL

Choose the appropriate wheel

CAUTION • Never use wheels with bigger diameter than the size required in the tool.

WARNING • Use only wheels or accessories more than 11 000 RPM speeds.

The rated speed of the accessory must be at least equal to the maximum speed marked on the tool. Accessories running faster than their rated speed may break and become detached.

CAUTION • Use only wheels or accessories with an orifice that fits perfectly in the tool spindle.

CAUTION • Use only wheels or accessories specifically designed for the chosen material.

Before operating the grinder

• Set apart some time and assess the job you are about to do. Pay attention to all the necessary cautions before starting to grind.

DANGER • Remove all the fastening wrenches from the tool. Otherwise they can shoot away causing severe injuries to the user.

WARNING • Double-check the guard. It should be perfectly fastened and in good working condition. Do not use the tool without a guard. Fragments of workpieces or a broken accessory can break off and cause damage beyond the immediate area of operation.

CAUTION • Double-check the wheel. It should not be broken or cracked. Tap the wheel gently with a wooden hammer and listen for a strange sound to learn if it is cracked.

DANGER • Before plugging the tool, see if it is in the OFF position (See page 8, Turning on). Otherwise the tool could start unexpectedly causing severe injuries.

CAUTION • Run the tool 30 seconds before using, to detect important vibration or any type of unusual movement. If detected, unplug the tool and take it to a TRUPER Authorized Service Center.

CAUTION • See if the wheel rotates freely.


• Do not over tighten the wheel. It could break.

WARNING • To work with small work pieces fasten with wrenches. Never use your hands to hold the piece. Keep present people at a safe distance from the work area. Anyone entering the work area should wear personal protective equipment.

Operations for which this power tool is not designed may result in an accident and cause personal injury.

It is not recommended to use this power tool in operations such as sanding, brushing or polishing.

Do not use accessories that are not specifically designed and recommended by the manufacturer.

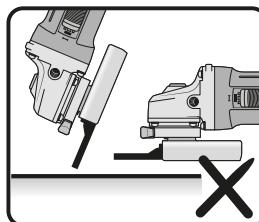

Wrong way to operate the grinder

While operating the grinder

CAUTION • Do not use a woodcutting saw blade or a toothed blade. Such blades cause frequent kickbacks and loss of control.

WARNING • Wear safety glasses, gloves and an apron when using the tool.

WARNING • Keep the power cable or extension in the back of the tool. Avoid accidentally damaging the cables with the wheel.

• If control of the power tool is lost, the cable may be cut or tangled and the operator's arm or hand may be pulled toward the rotary attachment.

WARNING • Never hold the tool by the power cable. Hold by the housing or auxiliary handle.

CAUTION • Hold the tool by the isolated parts. The cutting tool could come into contact with hidden wiring or its own cable. Making contact with a "live" wire causes the metal parts to electrify and give an electric shock to the user.

• Never let go of the power tool until the attachment comes to a complete stop.

• Never hit the work surface with the wheel.

CAUTION • To get the best result with the grinding process, the inclination of the wheel and the working surface should have an angle measuring 15° to 30°.

DANGER • When the wheel is rotating never use the spindle lock to stop it. It is very dangerous and may cause injuries to the user.


CAUTION • Do not touch the wheel or the working piece after grinding. Wait for them to cool down. Never try to cool them down using water or oil.

WARNING • Before checking, adjusting or changing wheels, double-check the tool is not plugged in. • Do not use the power tool near flammable materials. • Do not operate the tool while it is being transported to your side.

DANGER • Sparks caused when grinding may be dangerous. Use caution. Make sure sparks do not get into contact with skin or flammable substances.

• Gradually clean the tool's vents. The motor fan directs dust into the housing and excessive accumulation of metal dust can cause an electrical hazard.

• Do not use accessories that require liquid refrigerants. The use of water or other liquid refrigerants can result in an electric shock.

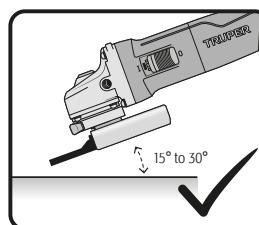

Right way to operate the grinder

The outer diameter and thickness of the accessories must be within the assigned capacity.

Incorrectly sized accessories cannot be properly protected or controlled.

For best results use 4-1/2" cutting wheels with 0.04" (1mm) - 0.25" (6.4 mm) thickness

⚠ DANGER **KICKBACK (Sharp Recoil)**

Kickback (sharp recoil) is a sudden reaction when a rotating wheel, backrest, brush, or other accessory gets stuck or snagged. Stalling or snagging causes rapid stalling of the rotary attachment which in turn causes the power tool to be forced uncontrollably in the direction opposite to the rotation of the attachment at the working point. An abrasive wheel jams into the workpiece, the edge of the contacting wheel can be pinched into the surface of the material causing the wheel to stop, creating a kickback (sudden recoil). The wheel may break and the fragments may jump in the direction of or away from the operator, depending on the direction of wheel movement at the point of jamming.

Kickback can occur as a result of misuse of power tools and/or improper operating procedures or conditions and can be avoided by taking the precautions listed below:

- a) **Keep a firm grip on the power tool.** Maintain your body and arm so that they can resist the forces of kickback. Always use the auxiliary handle, if provided, for maximum control over kickback or the reaction of the torsional movement of the engine during starting. The operator can control the torsional movement and the kickback forces if the appropriate precautions are taken;
- b) **Never place your hand near the rotating attachment.**

The accessories may kick back in your hand;

- c) **Do not place your body in the area where the power tool can move if kickback (sudden recoil) occurs.**

This will propel the power tool in the opposite direction of wheel movement at the point of engagement or binding;

- d) **Take special care when working on corners, sharp edges, among others. Avoid bouncing and jamming of the attachment.**

When working corners, sharp edges, or bouncing, can cause the attachment to jam and result in loss of control of the power tool or kickback (sudden recoil) of the power tool.

⚠ WARNING **Specific safety for grinding and cutting operations with abrasives**

- a) **Use only wheel types that are recommended for the specific power tool and the specific tool holder that is designed for the selected wheel.**

wheels that are not designed for the power tool cannot be properly protected and are unsafe;

- b) **The grinding surface of wheels with a sunken center must be installed below the plane of the guard.**

An improperly installed wheel may project burrs outside the plane of the guard and cannot be properly protected;

- c) **The guard must be securely fastened to the power tool and positioned to provide maximum safety, so that the least amount of the blade is exposed to the operator.**

Do not use damaged accessories. Before each use inspect the accessories. * Check abrasive wheels for damage.

- * Check backing pads for cracks, tears or excessive wear

After inspecting and installing the accessory, operate the tool at maximum speed without charge for one minute.

Damaged accessories usually break during this period of time.

Do not use accessories that are not specifically designed and recommended by the manufacturer. The fact that the accessory may be installed on the power tool does not ensure safe operation.

- d) **wheels should be used only for their recommended applications. For example: do not grind with the side of a cut-off wheel.** Abrasive wheels are used for perfect grinding. If lateral forces are applied, they can break;
- e) **Always use flanges in perfect condition, of the correct size according to the shape of the selected disk.**

A flange with the correct characteristics supports the wheel, which reduces the possibility of wheel rupture. The flanges for cut-off wheels can be different from the flanges for grinding wheels;

- f) **Do not use worn out disks from larger or higher capacity tools**

Wheels that are designed for larger or higher capacity tools are not suitable for the increased speed that occurs in the operation of a smaller size or capacity tool and may defragment.

⚠ WARNING **Additional safety warnings for abrasive cutting operations**

- a) **Avoid locking or applying excessive pressure to the abrasive cut-off wheel.** Do not attempt to make an excessively deep cut.

Applying excessive force to the wheel increases the load on the power tool and the susceptibility to deformation in the cutting area and increases the possibility of kickback (sudden recoil) or blade breakage;

- b) **Do not place your body in line and behind the rotating wheel.**

When the wheel, at the point of operation, is aligned with your body, the possibility of a kickback (sudden recoil) can propel the spinning wheel and the power tool directly against you;

- c) **When wheel operation is interrupted or cutting stops for any reason, turn off the power tool and keep it stationary until the wheel comes to a complete stop.** Do not attempt to remove the blade while it is in motion, as this may cause kickback (sudden recoil) or similar effect.

Investigate and complete corrective actions to eliminate the cause of the spin interruption;

- d) **Do not restart the cutting operation on the workpiece. Allow the blade to reach maximum speed off the workpiece and carefully restart cutting.**

The abrasive cut-off wheel can jam, move upwards or produce a kickback if cutting is restarted on the workpiece;

- e) **Support large workpieces on presses or clamping brackets to reduce the risk of the abrasive cut-off wheel becoming trapped or of kickback (sudden recoil).**


Large pieces tend to sink under their own weight. Brackets should be placed under the workpiece near the cutting line and near the edge of the workpiece on both sides of the abrasive cut-off wheel;

- f) **Be careful when making a "very small cut" in walls or other blind areas or where there is no visibility of internal components.**

The protruding abrasive cutting wheel can cut through gas or water pipes, electrical wiring, or objects that may cause kickback (sudden recoil).

Parts


TRUPER[®]
INDUSTRIAL

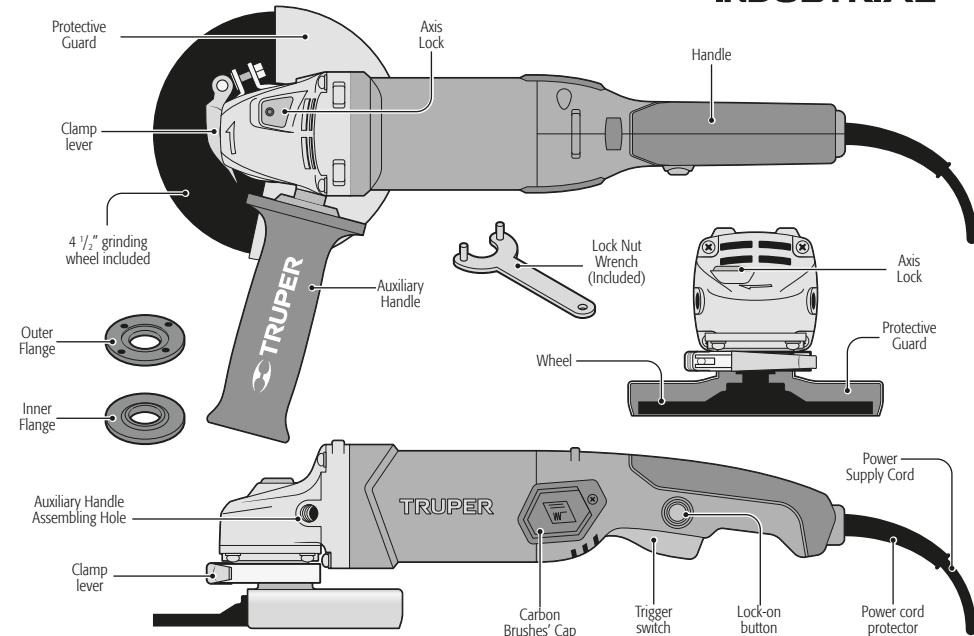

Preparation


Protection Guard Assembly

1. Open the clamp lever and match both extended parts inside the protection guard bracket with the matching slots in the axis cover. Push the protective guard down until the protruding parts engage and rotate freely with the corresponding grooves in the axis cover.
2. With the clamp lever open, turn the protective guard to the desired working position.
3. Set it pushing the bracket lever.

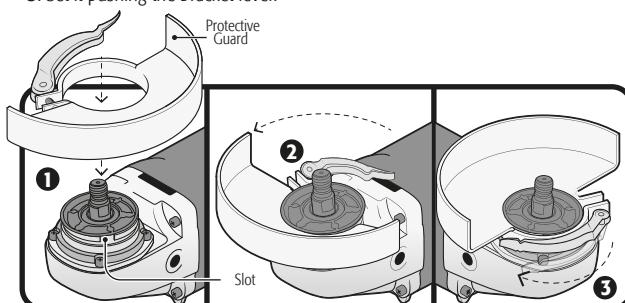

Wheel Assembly


4. Fit the inner flange onto the spindle.
 5. Set the wheel onto the inner flange.
 6. Set the outer flange onto the spindle.
 7. Press the spindle lock into the grinder head.
 8. Screw the outer flange with the lock nut wrench until securely fastened.
- DANGER** The spindle lock should only be used to change wheels.
Never use it to stop the wheel while rotating.

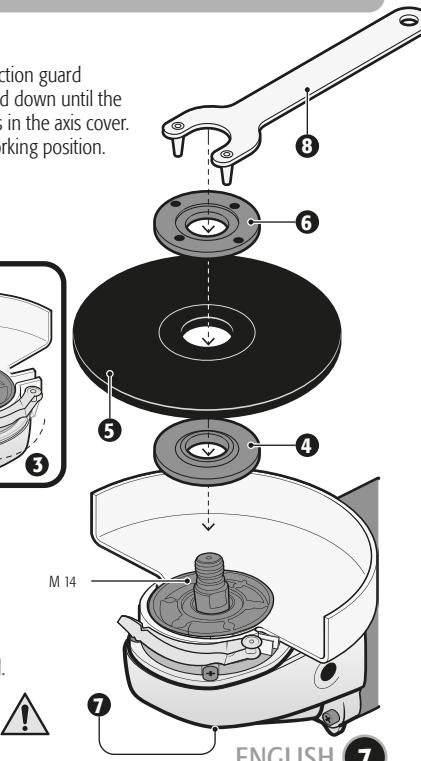

ENGLISH

Auxiliary Handle Assembly

CAUTION Before performing any operation, always make sure that the auxiliary handle is firmly installed. Set the auxiliary handle in one of the two positions according to the operator's preference and the job to perform.

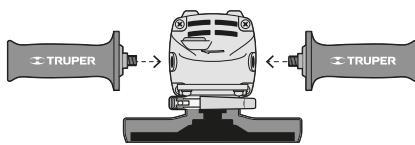

Start Up

The angle grinder is a manual power tool. It is used to grind and cut steel, pipes, and angles in iron, bricks, tiles, stone and/or ceramic pieces. Also to remove burr from metal surfaces, to level and smoothing out soldering. When changing the tool accessory, it can be used to clean rust and to buff metal surfaces and other materials.

Turning on

- Intermittent operation:

Connect the plug into the power outlet.

Press switch (A) to start the tool.

To stop, just release the switch.

- Continuous operation:

Connect the plug into the power outlet.

Press switch (A) and block it pressing the

Lock-on button (B).

To stop, press and then release the switch.

How to correctly hold the tool

Always hold the tool using both hands. One hand holds the handle and the other hand on the auxiliary handle. Use care not to obstruct the ventilation slots.




- Grinding:

For better results hold the tool at an angle of 15° to 30° with regards to the work piece. Move backward and forward with a constant rhythm and a slight pressure. This way the work piece will not get too hot, will not fade and rough edges will not appear.

- Cutting:

Do not press, tilt or oscillate the tool. Use a moderate speed. The wheel should always rotate in a movement opposite to the cutting movement. Never the other way around, as there is danger that the tool shoots out of control.

For cutting hard stone, using a diamond wheel is recommended.

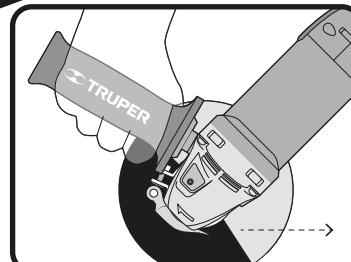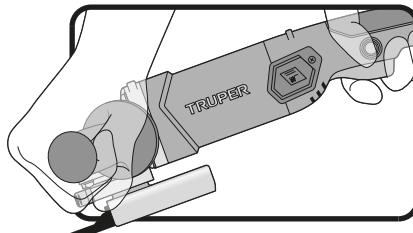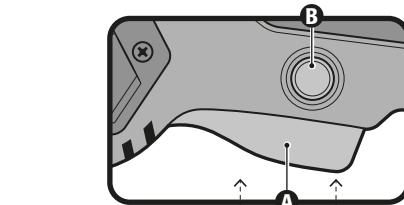

Useful Tips

- To prevent damaging the wheel work using the wheel into the right position.
- Press onto the work piece using less force than the tool's weight to avoid overload and damaging the motor and wheel.
- After installing a new wheel allow it to rotate with no load at least during one minute. If it vibrates, replace immediately.
- ⚠ CAUTION** • Avoid working onto wood or soft materials like lead. These materials saturate the wheel very fast and make it unusable.

Maintenance


- Before cleaning the tool disconnect the tool.
- Never use water or other liquids. Use only a brush.
- To avoid motor overheating clean the ventilation slots regularly.
- Double-check all the tool components are securely fastened.
- The housing should not be cracked or damaged.
- Double-check the power cable is not cut or peeled.
- After a prolonged use the grease on the tool head should be replaced in a **TRUPER®** Authorized Service Center.

Repairs

Use only spare parts and accessories recommended by the manufacturer. In the event the tool is not working, repairs should be carried out in a **TRUPER®** Authorized Service Center.


Carbon Brush Replacement

- Replace worn (burnt, broken or smaller than 0.19" long) carbon brushes. Use new carbons.
- When replacing carbons always replace both carbons at the same time.
- Use a screwdriver to remove the lid from the carbon brushes..
- Remove worn carbons from the housing. Clean accumulated dust with compressed air.
- Set the new carbons in a reverse order. Carbons should easily fall into the carbon housing.
- After setting up new carbon brushes let the grinder running a couple of minutes unloaded. This way the carbon brushes will adjust better.
- Use only original **TRUPER®** spare carbon brushes, designed specifically with the right strength and electric resistance for each type of motor. Carbon brushes with different specifications may damage the motor.
- For better results, it is recommended to use grinding and/or cutting wheel to 4-1/2" **TRUPER®**

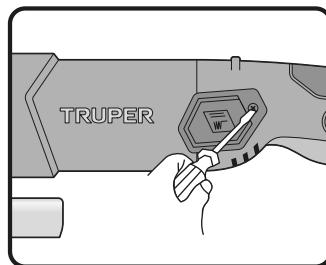

Storage

Store the tool neatly in a dry place. Protect against dust and water.

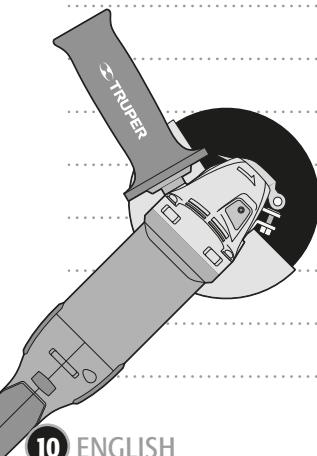

Authorized Service Centers

TRUPER[®]
INDUSTRIAL

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers **800 690-6990** or **800-018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITAN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCRASAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIK MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIK, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCRASAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANAHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCRASAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUATLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRASAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CIUAHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
MEXICO CITY	FIX FERRETERÍAS EL MONSTRUO DE CORREDIGORA, CORREDIGORA # 35, COL. CENTRO, C.P. 06060, CIUAHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTAÑA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCRASAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4541
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 8013	SINALOA	SUCRASAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCRASAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 / 5102	TABASCO	SUCRASAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 71578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL., BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRESOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRASAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P. 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCRASAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMAN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code	Model	Brand
100756	ESMA-4512N-2	TRUPER® INDUSTRIAL

Warranty. Duration: 5 years. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, only present the product in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. The costs of transportation of the product that derive from its fulfillment of its service network are included. **TRUPER will not require any proof of purchase to make the warranty effective.** Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.

Stamp of the business. Delivery date:



Sello del establecimiento comercial. Fecha de entrega:



Edo. de Mex. C.P. 54257, Tel. 761 782 9100.
In/Hecho en China. Importador TRUPER, S.A. de C.V. Parque industrial 1, Parque industrial Jilotepéc, Jilotepéc,
no solicita ningún tipo de compromiso de pago para hacer efectiva la garantía. Tel. 800-018-7873. Made
in/Hecho los gastos de transporte del producto que devenga de su cumplimiento de su red de servicios. TRUPER
incluye los gastos de transporte podra adquirir partes, componentes, consumibles y accesorios.
Cuahutémoc, CDMX, 06060, donde tambien se encuentra el establecimiento donde lo compró o en Corregidora 35, Centro,
tambien presente el producto en el establecimiento donde lo compró o en Garantía
instuctivo; fue allíadero o repartido por personal no autorizado por TRUPER®. Para hacer efectiva la garantía
fundonamiente, excepto si se usó en condiciones distintas a las normales; cuando no fue operado conforme
Garantía. Duración: 5 años. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o


Código	Modelo	Marcas	ESMA-4512N-2	INDUSTRIAL
100756			TRUPER®	

**Poliza de
Garantía**

INDUSTRIAL
TRUPER®


En caso de tener algún problema para contactar un Centro de Servicio Autorizado TRUPER® consulte las páginas AGUASCALIENTES, BAJA CALIFORNIA SUR, CALIFORNIA, CAMPECHE, CHIAPAS, COAHUILA DE RIVIERA, COLIMA, DURANGO, GUANAJAUTA, Hidalgo, JALISCO, MÉJICO, MÉXICO, NUEVO LEÓN, OAXACA, PUEBLA, QUERÉTARO, SAN LUIS POTOSÍ, SINALOA, TAMAULIPAS, TOLUCA, VERACRUZ, YUCATÁN y MICHOACÁN.

MICHOACÁN FIX FERRERIAS SUCURSAL MÉRIDA VALLE DE LA EMBRAGÜETA #800, COL. SANTÍA CRUZ DEL NORTE, C.P. 45655 TIAJOMULCO DE ZUNIGA, JAL.	MICHOACÁN FIX FERRERIAS CALLE 33 #600 602 LOCAL 102 OFICINA DE TECNICA Y MUSAS, MPIO. UMINA, C.P. 47390, MERIDA, YUC.
JALISCO SUCURSAL GUADALAJARA VIAL ADOFO DE LA HORNA #800, COL. SANTÍA CRUZ DEL NORTE, C.P. 43600, GUADALAJARA, JAL.	JALISCO SUCURSAL GUADALAJARA CALLE 99 912 2451 TEL.: 33 3606 5285 AL 90
HIDALGO FERRERIAS S.A. DE C.V. CLILIPUNGO #40 LOCAL 30, TECNORÍA DE PASEO ROBLEDO, C.P. 43600, TECNORÍA DE PASEO	HIDALGO FERRERIAS S.A. DE C.V. CLILIPUNGO #40 LOCAL 30, TECNORÍA DE PASEO ROBLEDO, C.P. 43600, TECNORÍA DE PASEO
GUERRERO CENTRO DE SERVICIO ECLIPSE CHILPANCINGO, GRO., TEL.: 747 478 5793	GUERRERO CENTRO DE SERVICIO ECLIPSE CHILPANCINGO, GRO., TEL.: 747 478 5793
CUANAJAUTA GRUPO AUVIO MUNDO S.A. DE C.V. JALTEPEC JILOTEPEC #225, CDM. INDUSTRIAL, C.P. 52010,	CUANAJAUTA GRUPO AUVIO MUNDO S.A. DE C.V. JALTEPEC JILOTEPEC #225, CDM. INDUSTRIAL, C.P. 52010,
MÉJICO SUCURSAL CENTRO JILOTEPEC DGO. TEL.: 618 817 1946 / 618 818 2844	MÉJICO SUCURSAL CENTRO JILOTEPEC DGO. TEL.: 618 817 1946 / 618 818 2844
DURANGO TORNILLOS AGUILA, S.A. DE C.V. TEL.: 54 352 1986 / 352 1083	DURANGO TORNILLOS AGUILA, S.A. DE C.V. TEL.: 54 352 1986 / 352 1083
COLIMA BOMBA Y MOTORRES BYMTESA DE MANZANILLO TEL.: 871 209 68 25	COLIMA BOMBA Y MOTORRES BYMTESA DE MANZANILLO TEL.: 871 209 68 25
COAHUILA SUCURSAL TRENES TEL.: 55 552 5051 / 5522 4861	COAHUILA SUCURSAL TRENES TEL.: 55 552 5051 / 5522 4861
MÉJICO FIX FERRERIAS COL. MONTRARIO DE CORREGIDORA, CORREGIDORA # 35, CDMX.	MÉJICO FIX FERRERIAS COL. MONTRARIO DE CORREGIDORA, CORREGIDORA # 35, CDMX.
CHIHUAHUA SUCURSAL CHIHUAHUA TEL.: 614 434 0052	CHIHUAHUA SUCURSAL CHIHUAHUA TEL.: 614 434 0052
CHIAPAS TORNILERA Y FERRERIA AAA TEL.: 962 118 4083	CHIAPAS TORNILERA Y FERRERIA AAA TEL.: 962 118 4083
CAMPACHE FIX FERRERIAS TEL.: 613 152 7115	CAMPACHE FIX FERRERIAS TEL.: 613 152 7115
CALIFORNIA SUR FUDERAS II, C.P. 22244, TIJUANA, B.C.	CALIFORNIA SUR FUDERAS II, C.P. 22244, TIJUANA, B.C.
AGUASCALIENTES DE TODO PARA LA CONSTRUCCIÓN AV. LA ENCANTADA LOTE #5, CDM. GRANMA, C.P. 20030.	AGUASCALIENTES DE TODO PARA LA CONSTRUCCIÓN AV. LA ENCANTADA LOTE #5, CDM. GRANMA, C.P. 20030.
BAJA FIX FERRERIAS TEL.: 66 996 5100	BAJA FIX FERRERIAS TEL.: 66 996 5100
Www.TRUPER.COM En caso de tener algún problema para contactar un Centro de Servicio Autorizado TRUPER®, consulte la página AGUASCALIENTES, BAJA CALIFORNIA SUR, CALIFORNIA, CAMPECHE, CHIAPAS, COAHUILA, COLIMA, DURANGO, GUANAJAUTA, Hidalgo, JALISCO, MÉJICO, NUEVO LEÓN, OAXACA, PUEBLA, QUERÉTARO, SAN LUIS POTOSÍ, SINALOA, TAMAULIPAS, TOLUCA, VERACRUZ, YUCATÁN y MICHOACÁN.	Www.TRUPER.COM En caso de tener algún problema para contactar un Centro de Servicio Autorizado TRUPER®, consulte la página AGUASCALIENTES, BAJA CALIFORNIA SUR, CALIFORNIA, CAMPECHE, CHIAPAS, COAHUILA, COLIMA, DURANGO, GUANAJAUTA, Hidalgo, JALISCO, MÉJICO, NUEVO LEÓN, OAXACA, PUEBLA, QUERÉTARO, SAN LUIS POTOSÍ, SINALOA, TAMAULIPAS, TOLUCA, VERACRUZ, YUCATÁN y MICHOACÁN.

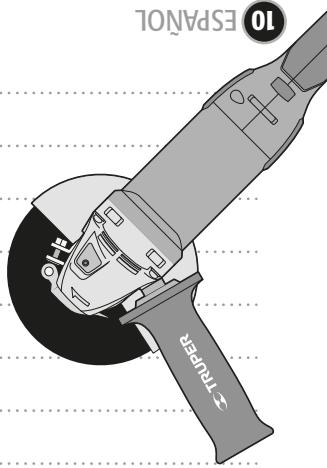

Notas

INDUSTRIAL
TRUPER®

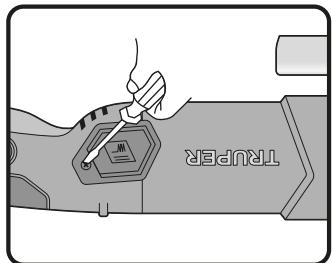

Almacenamiento

- Almacene la herramienta ordenadamente en un lugar seco y protegida de polvo y agua.
- Para mejores resultados, se recomienda utilizar discos de corte y/o desbastar para cada tipo de motor. Los carbonos fuera de especificaciones pueden dañar el motor.
- Solo se deben de usar carbonos de repuesto **TRUPER** originales, que no solo cumplen con las especificaciones de fabricación, sino que también cumplen con las normas de calidad establecidas por la industria.
- Funcione durante algunos minutos sin cargar de trabajo para que los carbonos tengan un mejor ajuste.
- Despues de colgar los carbonos nuevos, permita que la herramienta se enfrie.
- Coloque los carbonos nuevos invertiendo el orden. Los carbonos deben estar acumulados con aire comprimido.
- Retire los carbonos desgastados del portacarbonos y retire el polvo.
- Utilice un desmolillador para quitar la tapa de los carbonos.
- Cambie los carbonos de la herramienta cada 5 mm de largo, con carbonos nuevos.
- Es necesario reemplazar los carbonos desgastados (quemados), rotos o de menos de 5 mm de largo, con carbonos nuevos.

Cambio de carbonos

Alguno Centro de Servicio Autorizado **TRUPER** dispone de que la herramienta no tiene que ser preparada para su uso. Utilice únicamente referencias y accesorios recomendados por el fabricante. En caso de que la herramienta no cumpla con las normas de seguridad establecidas por el fabricante, se debe cambiarla en un Centro de Servicio Autorizado.

Reparación

- Despues de usar una prolongación o grasa de la cabeza de la herramienta debe revisar que no esté corroída o pedida.
- Siempre revise que el cable no esté dañado.
- La carcasa no debe estar curvada o dañada.
- Revise que todos los componentes de la herramienta estén bien fijos.
- Revise que la herramienta esté limpia y libre de manchas regulares.
- Para evitar que se sobrecaliente el motor, debe limpiar las ranuras de ventilación de la carcasa.
- Nunca utilice agua u otros líquidos, solamente utilice un cepillo.
- Descarte siempre la herramienta antes de proceder a la limpieza.

Mantenimiento

ATENCIÓN • Evite trabajar madera o metales suaves como el plomo. Pueden espirales saturan muy rápido el disco y lo hacen inoperable.


- Despues de instalar un disco nuevo permítale que el disco gire sin trabajar al menos un minuto.
- Presione sobre la pieza de trabajo con una fuerza menor al peso de la herramienta para evitar que la sobrecarga dañe el motor y el disco.
- Trabaje con el disco en la posición correcta para evitar que se dañe.
- Despues de instalar un disco nuevo permítale que el disco gire sin trabajar al menos un minuto.
- Despues de instalar un disco nuevo permítale que el disco gire sin trabajar al menos un minuto.

Consejos útiles

Puesta en marcha


Preparación

Montaje del mango auxiliar

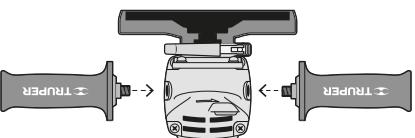

- A ADVERTENCIA:** Antes de realizar cualquier operación, asegúrese siempre de que el mango auxiliar esté instalado firmemente. Rosque el mango auxiliar en alguna de las 2 posiciones segün la preferencia del operador.


operario o aplicación. La fuerza de los 2 tornillos es suficiente para sujetar el mango auxiliar en las 2 posiciones segün la preferencia del operador.

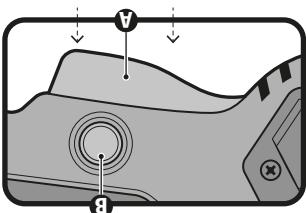


Encendido

Como sujetar adecuadamente la herramienta

- Siempre sostenga la herramienta con ambas manos. Una mano sosteniendo el mango y la otra el mango auxiliar. Tenga cuidado de no obstruir las ranuras de ventilación.
- Sujete la herramienta con una ligera movilidad. Conecte la clavija al tomacorriente. Presione el interruptor (A) y bloquelo, apretando el seguro de uso continuo (B).
- Oprima el interruptor (A) para hacer que la herramienta empiece a funcionar. Presione el interruptor (A) para interrumpir su uso. Simplemente suelte el interruptor para interrumpir su uso.
- Oprima el interruptor continuamente. Conecte la clavija al tomacorriente. Presione el interruptor (A) para hacer que la herramienta empiece a funcionar.
- Oprima el interruptor continuamente. Conecte la clavija al tomacorriente. Presione el interruptor (A) para hacer que la herramienta empiece a funcionar.
- Si cambia de posición de la herramienta se puede utilizar para limpiar óxido y para pulir superficies de aluminio, latillas, azulejos, piedra y/o piezas de cerámica; para quitar la rebaba de las superficies de metal, para nivelar y emerilladora angular es una herramienta eléctrica manual, se utiliza para esmerilar y cortar acero, tubos, hierro en forma de cortocircuito.

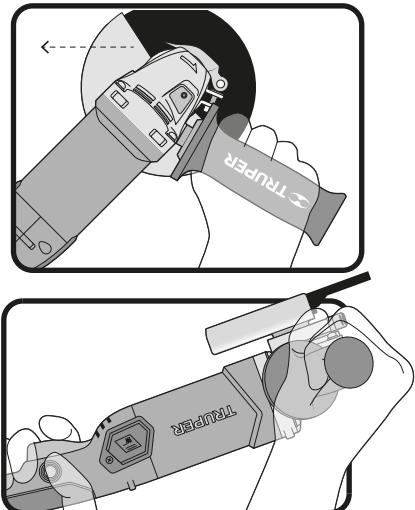

- Correcto: No presione, la dede u oscile la herramienta. Trabaje a una velocidad moderada.
- Erróneo: El disco debe girar siempre en sentido opuesto al movimiento de corte, nunca en el otro sentido, pues existe el riesgo de que la herramienta salga despedida sin control.
- Correcto: Para cortar piezas gruesas es recomendable usar un disco de corte de diamante.

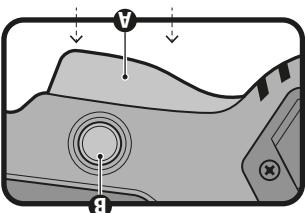

- Nunca use la herramienta en el modo de corte. De esta forma la pieza de trabajo no se calienta demasiado, no se decolora y no se produce arañazos.
- Nunca use la herramienta en el modo de corte. De esta forma la pieza de trabajo no se calienta demasiado. La herramienta se calienta más rápidamente en el modo de corte.


Puesta en marcha

Montaje del mango auxiliar




- A ADVERTENCIA:** Antes de realizar cualquier operación, asegúrese siempre de que el mango auxiliar esté instalado firmemente. Rosque el mango auxiliar en alguna de las 2 posiciones segün la preferencia del operador.

operario o aplicación. La fuerza de los 2 tornillos es suficiente para sujetar el mango auxiliar en las 2 posiciones segün la preferencia del operador.

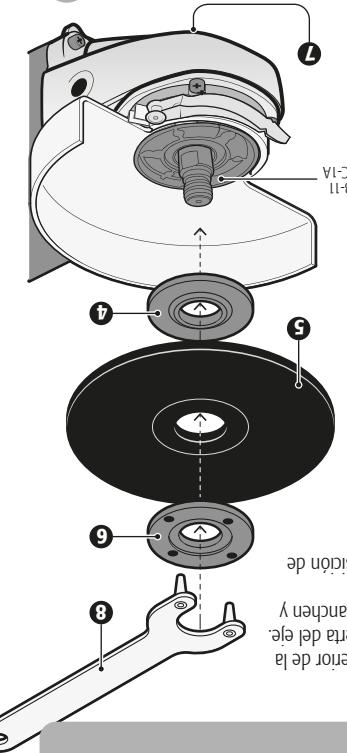


1. Abra la Palanca de la abrazadera y haga coincidir las partes sobresalientes del interior de la abrazadera con las ranuras correspondientes de la placa de protección.
2. Coloque la Palanca de la abrazadera sobre la parte correspondiente de la placa de protección hasta que las partes sobresalientes enganchen y permanezcan en su lugar.
3. Fije la empunadura a la palanca de la abrazadera.

Montaje del disco

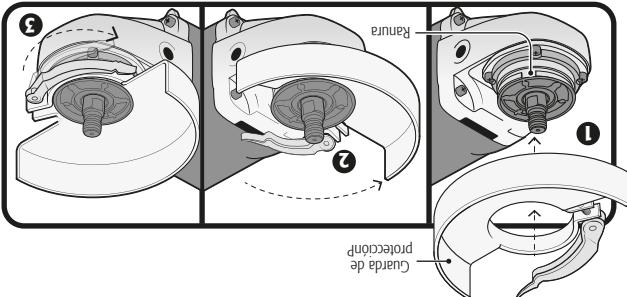

Montaje de la guarda de protección

Preparation

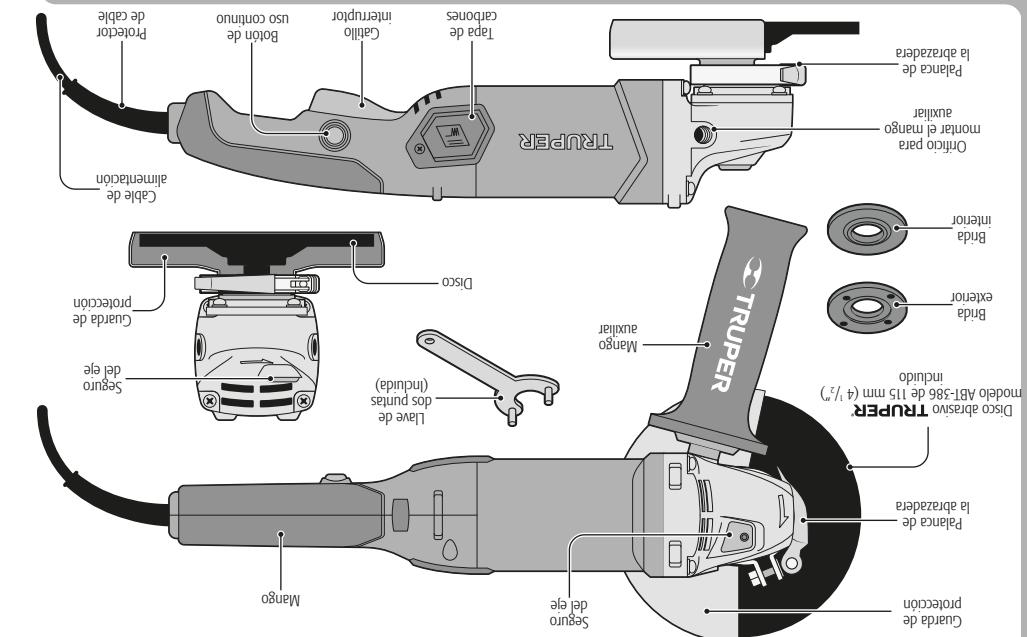

Partes

Advértencias de Seguridad

INDUSTRIAL
TRUPEER®


Capacidad en	Número de	Conductores	Calibre de extensión
de 0 A hasta 10 A	18 AWG(*)	16 AWG	16 AWG
de 10 A hasta 15 A	16 AWG	14 AWG	14 AWG
de 15 A hasta 20 A	14 AWG	12 AWG	12 AWG
de 15 A hasta 20 A	12 AWG	8 AWG	8 AWG

* Se permite utilizar cables más gruesos que el calibre recomendado para extensiones de hasta 15 m.

AWG = Calibre de alambre estadounidense (American Wire Gauge). Referencia: NM-J-195-ANKE

La siguiente tabla muestra los extremos más comunes con los que se deben conectar los cables de extensión. Si tiene dudas use el siguiente calibre más alto.

Un cable de un calibre inferior ocasionaría caídas de tensión en la línea.	Un cable suficiente para transportar la corriente que consume su herramienta.	Teniendo como resultado una sobrecarga del motor.
Al usar un cable de extensión, asegúrese de usar el	calibre suficiente para la extensión.	amperaje indicado en la placa de datos de la herramienta.

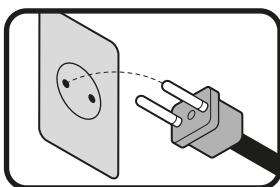

ADVERTENCIA Las herramientas de doble aislamiento y aislamiento a tierra o de conexión a tierra que requieren conexión a tierra tienen una conexión a tierra que es necesaria para su protección personal. No la exponga a la lluvia, líquidos y/o humedad.

ADVERTENCIA Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio Autorizado TRUPER®. con el fin de evitar algún riesgo de descarga a tierra que cause daños personales. La construcción del aislamiento eléctrico es de acuerdo a las normas de la IEC y UL.

ADVERTENCIA Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados. Desconecte la herramienta de la red eléctrica y líquidos y/o humedad.



La clase de aislamiento térmico de los devanados del motor: Clase E
La clase de construcción térmica es: Aislamiento reforzado.
[E] cable de alimentación tiene sujetacables tipo Y

Codijo •	100756	Descripción •	Esmeriladora angular
DiscoS •	4 1/2" (115 mm)	Tamaño de disco •	11000 r/min
Tensión •	220 V~	Potencia •	1250 W
Frecuencia •	50 Hz / 60 Hz	Velocidad •	5.5 A
Corriente •	5.5 A	Ciclo de trabajo •	50 minutos de trabajo por 20 minutos de descanso. Máximo 6 horas diarias.
Conductores •	HO5RN-F 2X0,75 mm²	Alimentación •	Clase II
•	La clase de aislamiento térmico de los devanados del motor: Clase E	Grado IP •	IP 20

ESMA-4512N-2

Especificaciones técnicas

TRUPER® INDUSTRIAL

■ PARA PROLONGAR LA VIDA DE SU HERRAMIENTA, LIMPIE CON AIRE

Recomendaciones de uso y cuidados

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesaria y evitar riesgos o lesiones graves, es fundamental que se sigan las siguientes reglas de seguridad:

- Provecho de la herramienta.
- Para poder sacar el máximo provecho de la herramienta.
- Alargar su vida útil, hacer válida la garantía en caso de ser necesaria y evitar riesgos o lesiones graves, es fundamental que se sigan las siguientes reglas de seguridad:

ATENCIÓN

Indice

- **■ REALICE MANTENIMIENTO** periódico a su máquina (página 9).
- **■ NUNCA** apriete el botón de bloqueo cuando esté girando el disco.
- **■ NUNCA** use el cable para transportar, levantar o desconectar la herramienta.
- **■ NUNCA EXCEDA EL CICLO DE TRABAJO** 50 min de trabajo por 20 min de descanso. Máximo diario 6 horas.
- **■ COMPROMIDO (SOPLETAR), DESPUES DE CADAS USO.**

12 Poliza de Garantía.

11 Centros de Servicio Autorizados.

10 Notas.

9 Mantenimiento.

8 Puesta en marcha.

7 Preparación.

6 Partes.

5 Advertencias de Seguridad para uso de emeryladores.

4 Advertencias generales de seguridad para herramientas eléctricas.

3 Requerimientos eléctricos.

2 Especificaciones técnicas.



Lea este instructivo por completo
antes de usar la herramienta.

ATENCIÓN



ESMA-4512N-2

100756 ESMA-4512N-2

Código Modelo

Este instructivo es para:

1250 W 4 1/2" 115 mm
Potencia Disco

Esmeriladora angular

Instructivo de

TRUPER® INDUSTRIAL

ESPAÑOL
ENGLISH