


Manual

Oil - Free Air Compressor

116 PSI
Pressure

Applies for:

Code	Model
13836	COMP-30S

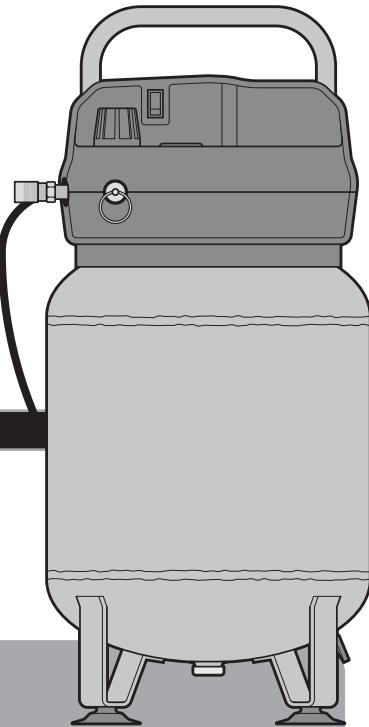

COMP-30S



Read the user's manual thoroughly
before operating this tool.



Technical Data	3
Power Requirements	3
 General Power Tool Safety Warnings	4
 Safety Warnings for Using Air Compressors	5
Parts	6
Start Up	7
Maintenance	8
Troubleshooting	9
Notes	10
Authorized Service Centers	11
Warranty Policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations

 **NEVER EXCEED** the maximum pressure rating (PSI) of the tool or accessory being worked on.

 **ASSEMBLE** the wheels and front support to keep the compressor level.

 Perform periodic **MAINTENANCE** to your machine (page 8).

COMP-30S

Code •	13836
Description •	Oil-free air compressor
Voltage •	127 V ~
Current •	10 A
Measurements •	12.4" x 26.3"
Air Connections •	1/4" fast coupling
Maximum Pressure Operation •	116 PSI
Air Flow •	4 CFM - 40 PSI 2.7 CFM - 90 PSI
Tank Capacity •	7.9 gal
Conductors •	16 AWG x 3C with 221 °F insulation temperature
Insulation •	Class I
	IP Grade • IP20

Power Cord Grips used in this product: Type "Y".

Tool Build Quality: Basic insulation

Thermal insulation on motor winding: Class F

WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.


WARNING Before gaining access to the terminals all power sources should be disconnected.



Power Requirements

WARNING The equipment shall be grounded while in use to prevent an electric shock.

- Connect plug into a properly grounded contact or outlet as shown in example **A**. Not all contacts or outlets are properly grounded. If not sure, contact with a certified electrician.
- If the outlet you want to use with the equipment has two poles (2 orifices), FOR ANY REASON AT ALL DO NOT REMOVE OR ALTER THE PLUG'S EARTH TERMINAL. Use a temporary adapter as shown in example **B** and always connect the earth conductor's lug as indicated.

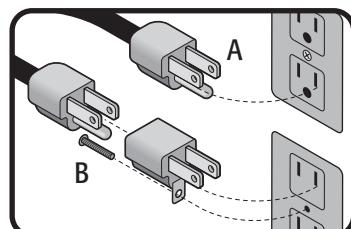

CAUTION When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Amperage Capacity	Number of Conductors	Extension Gauge
From 0 A and up to 10 A		18 AWG
From 10 A and up to 13 A		16 AWG
From 13 A and up to 15 A	3 (one grounded)	14 AWG
From 15 A and up to 20 A		12 AWG
		8 AWG
		6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



WARNING All the cabling, power connections and the ground connection of the system shall be in compliance with the Mexican Official Standard NORMA OFICIAL MEXICANA NOM-001-SEDE-2012, INSTALACIONES ELÉCTRICAS (UTILIZACIÓN) or with the local codes and municipal by-laws.

⚠️ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area**Keep your work area clean, and well lit.**

Cluttered and dark areas may cause accidents.

**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

Sparks generated by power tools may ignite the flammable material.

**Keep children and bystanders at a safe distance while operating the tool.**

Distractions may cause loss of control.

**Electrical Safety****The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.

**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety**Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.

**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

**Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.**

Loose clothes or long hair may get caught in moving parts.

**If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.**

Using these devices reduce dust-related risks.

Power Tools Use and Care**Do not force the tool. Use the adequate tool for your application.**

The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

**Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.**

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.

**Keep the cutting accessories sharp and clean.**

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service**Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.

**Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.**

Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.

This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

Safety Warnings for Using Air Compressors



Before using the compressor

⚠ CAUTION • The equipment, when operated, may be an ignition source. Keep the equipment away at least 18 ft away from explosive vapors like gasoline or other solvents. Always operate the equipment in a well-ventilated area. Do not operate in enclosed areas. Do not smoke while spraying. Do not spray in flammable environments. Keep the compressor as far away as possible from the spraying area.

⚠ CAUTION • Solvents like trichloroethane and methylene chloride may have a chemical reaction with the aluminum used in the paint spraying guns, paint pumps, etc., and may cause an explosion. If using those solvents, use only stainless-steel spraying equipment. This will not affect the air compressor but may affect the equipment being used.

⚠ DANGER • For any reason, do not carry out welding jobs in the compressor air tank because it creates a very dangerous situation. If carrying out a welding job in the tank, the Warranty is void.

⚠ DANGER • When raining or in wet surfaces, never use the compressor outdoors. Danger of electric discharge.

⚠ CAUTION • Check the maximum pressure specified by the manufacturer for pneumatic tools and accessories. The compressor outlet pressure shall be regulated so that it never exceeds the maximum specified pressure.

• Keep in place the labels and nameplates. They have important safety information. If the labels or nameplates cannot be read or are missing, contact a

TRUPER® Authorized Service Center to get spares.

⚠ CAUTION • For any reason, do not modify the compressor or the release valve. Doing it will make the Warranty void. Those parts are factory adjusted for this unit maximum pressure.

⚠ CAUTION • Double check all the labels in the paint or toxic materials you will spray. Follow the safety instructions. Wear a breathing mask if there is a possibility of inhaling the material sprayed. Read the breathing mask instructions to make sure it delivers the adequate protection.

⚠ CAUTION • Always wear safety eyeglasses when using an air compressor.

- To allow a better cooling ventilation, the compressor shall be kept 12" minimum distance away from the closest wall and in a well-ventilated area.

- The environment temperature recommended for the compressor operation es from 32 °F to 95 °F

While operating the compressor

⚠ CAUTION • Do not aim the nozzles, sprinklers or the air jet towards people or animals.

⚠ WARNING • Never inhale the compressed air directly from the air compressor. It is not adequate as breathing air.

⚠ WARNING • Do not adjust the regulator above the maximum pressure marked in the accessory. Otherwise, the compressor may burst.

- Operate the compressor on a perfectly level surface.
- Keep the compressor well ventilated. Do not cover it while its running.

⚠ CAUTION • The compressor gets hot while running. Do not touch it or allow children get close during or immediately after using it. Do not user it without the motor cover. Work away from flammable objects or liquids.

- The air hose components may get hot during use. Leave them to cool down before disconnecting.
- Do not use the air hose to move the compressor.
- Do not leave the compressor connected to the power supply if not taking care of it during long periods of time. Disconnect the tool after working with it.
- Using accessories not recommended by TRUPER® may result in personal injuries.
- Under the cover, high temperatures are produced, and there are moving parts. To prevent burns or other type of injuries, do not operate without having the cover in place. Give the compressor cooling-down time before handling or servicing.
- Do not release any of the connections when the tank is under pressure.

After using the compressor

• Remember, the unit starts automatically. Always turn OFF the compressor. Remove the plug from the power supply. Purge and release all the pressure from the system before servicing or when not in use.



• Periodically drain humidity from the tank. A clean and dry tank will help with corrosion.




• Pull the pressure release valve ring daily to make sure it works correctly and to remove from the valve any obstruction.

• If transporting the compressor, fasten in adequately. Release the tank pressure before transporting.



• Protect the air hose and electric cable to detect weak or worn out points. Replace if necessary.

- The air compressor is useful to supply energy for pneumatic tools, as versatile as power tools. It can be used for drilling, screwing, hammering, riveting, stapling, chiseling, polishing, blasting, cleaning, painting, etc.

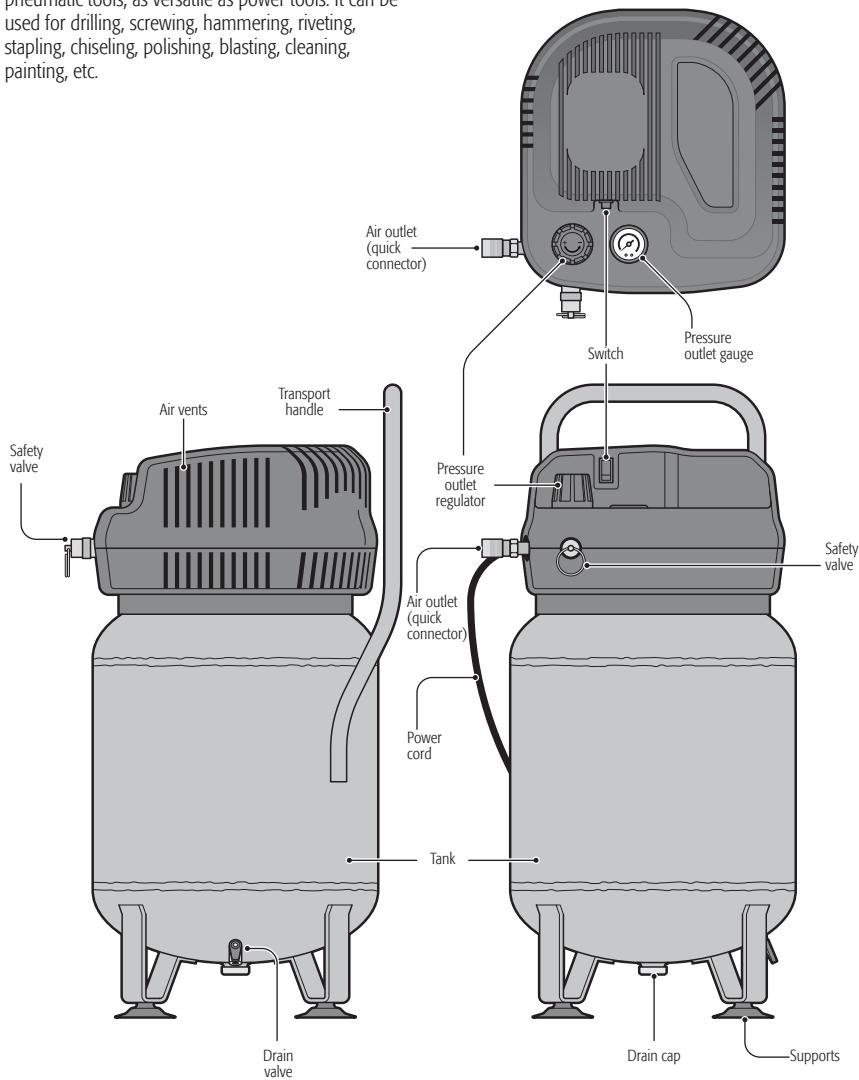

Turning ON and operation

- CAUTION** • Before operating the compressor, set it in a flat, level and solid surface, good ventilation and away of flammable object, for example, curtains or drapes. Leave 12" free space around the compressor to allow air to circulate.
- Turn the regulator (**A**) completely in a clockwise direction to close the air flow.
 - Connect the air hose to the air outlet (**B**).
 - Press the ON / OFF switch (**C**) into the OFF (**O**) position.
 - Connect the power cable.
 - Turn ON the equipment pressing the ON / OFF switch into ON (**I**) position. Let the compressor run until reaching the pressure of the automatic switch off.
 - Set the pneumatic tool in the end of the hose.
 - Turn the regulator until the gauge (**D**) indicates the adequate pressure for the pneumatic tool. Operate following the tool instructions.
 - As the air in the tank empties, due to the use of the pneumatic tool, the compressor reboots automatically to keep the preset pressure. When the tool is used continuously, the compressor will have automatic ON / OFF cycles.

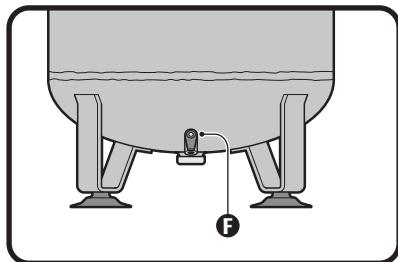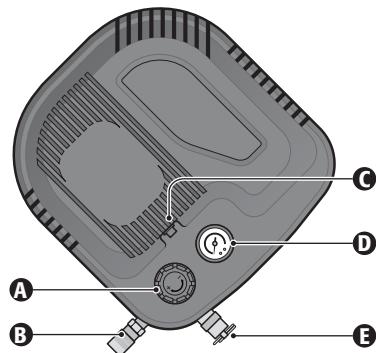

Turning OFF and storage

- Turn OFF the compressor pressing the ON / OFF switch into the OFF (**O**) position.
- Disconnect the power cable and tangle it in the handle to prevent damage when not in use.

CAUTION Never disconnect the compressor from the power supply to turn it OFF. If the power supply is accidentally interrupted, do not forget to press the switch OFF so the compressor is correctly turned off.

- Wear safety eyeglasses. Release the pressure from the tank pulling the safety valve ring (**E**). Use your other hand to divert the burst of air passing in your face.
- Drain the condensation in the tank opening the drain valve in the bottom of the tank (**F**). Pressure in the tank shall be below 68,9 kPa (10 PSI) when the tank drains.
- Disconnect the air hose from the compressor and leave the end open and hanging to drain condensation.
- The compressor and the hose shall be stored in a fresh and dry place.

Humidity in the compressed air

- Humidity inside the tank can get condensed and produce droplets of water that get expelled with the compressed air. When humidity in the environment is high or when the compressor is used continuously during long periods of time, drain the tank constantly and install a humidity filter in the air hose, as close to the pneumatic tool or air gun as possible.

Cleaning and care


- Disconnect the equipment from the power supply and release all the pressure from the system before trying to install, servicing, relocate or carry out maintenance.
- Always have the vents clean and free of obstructions to guarantee an adequate motor cooling.
- Inspect regularly all the mounting screws and double check for tightness. If any of the screws is lose, tighten immediately.

Air filter

- Check the air filter frequently. Double check it is clean.
- To service the filter, remove the filter cover.
- Remove the filter and clean the sponge or filter with hot and soapy water (paper filters cannot be washed). Rinse and let dry.
- Replace the air filters if not possible to wash.
- Set the filter back in the housing base and set the cover.


Safety valve

- Check the safety valve before each use.
 - Wear safety eyeglasses.
 - Turn ON the compressor and allow the tank to fill.
 - When the compressor shuts OFF automatically, press the ON / OFF switch into the OFF position (O)
 - Pull the safety valve ring a few seconds to release air. ALWAYS put your face away from the air stream. Release the ring.
 - If air is leaking before releasing the ring, DO NOT use the compressor and go to a C TRUPER® Authorized Service Center to replace the safety valve.
- DANGER** • Using the compressor with a valve in bad repair may result in death or severe body injuries.

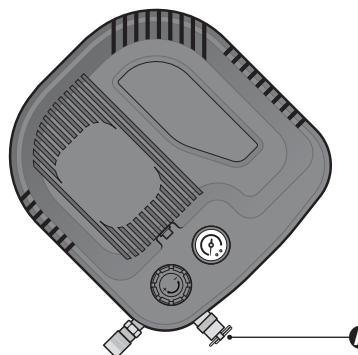

Maintenance

- After each use, disconnect the compressor and release the air pressure from the tank by pulling the safety valve ring (A).
- After releasing all pressure, open the drain valve (B) to remove the water stored in the tank by condensation.

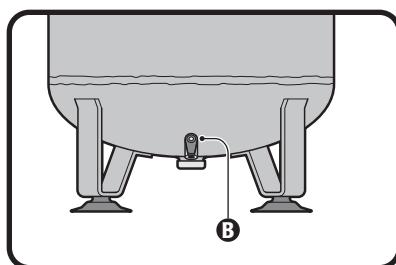

Service

- Any other service or repair to the compressor shall be carried out in a C TRUPER® Authorized Service Center. Service and maintenance carry out by non-certified people may cause personal injuries and make the Warranty void.

Troubleshooting



Problem	Cause	Solution
The motor is not working.	<ul style="list-style-type: none">• There is no power.• Blown fuse.• Thermal switch activated.• Pressure switch is failing.	<ul style="list-style-type: none">• Make sure the power cable is connected. Check the fuse – circuit breaker.• Replace the blown fuse.• Turn OFF the compressor and wait a couple of seconds to let the thermal switch to recover. Later turn ON the compressor.• Go to a TRUPER® Authorized Service Center.
The motor buzzes but is not working or works slowly.	<ul style="list-style-type: none">• Voltage drops.• Motor wiring in short or open.• Faulty check valve or pressure switch.• Compressed air in the cylinder.	<ul style="list-style-type: none">• Check the voltmeter. Minimum voltage shall be 115 V ~• Go to a TRUPER® Authorized Service Center.• Go to a TRUPER® Authorized Service Center.• Press the switch 15 seconds into the OFF position, Then, lift to the ON position.
Fuses blow. The circuit switch shoots repeatedly.	<ul style="list-style-type: none">• Wrong capacity in the fuse, overloaded circuit.• Faulty check valve or pressure switch.	<ul style="list-style-type: none">• Check the right fuse is being used. Use a fuse with time delay. Disconnect other appliances in the same circuit. Operate the compressor using an independent circuit.• Go to a TRUPER® Authorized Service Center.
The thermal overload protection causes interruptions repeatedly.	<ul style="list-style-type: none">• Voltage drops.• Clogged air filter.• Lack of adequate ventilation.• Environment temperature is too high.	<ul style="list-style-type: none">• Check the voltmeter. Minimum voltage shall be 115 V ~• Clean the air filter.• Move the compressor into an area with adequate ventilation.• Move the compressor into an area with adequate ventilation.
Tank pressure drops when the motor stops.	<ul style="list-style-type: none">• Loose connections (couplings, pipes, etc.).• Drain valve is open.• Leaks in the check valve.	<ul style="list-style-type: none">• Check to detect air leaks. Use sealing tape in all the leaky connections.• Tighten the drain valve.• Disassemble the check valve. Clean or replace it. <p>DANGER DO NOT DISASSEMBLE THE CHECK VALVE WHEN THERE IS AIR IN THE VALVE. FIRST, PURGE THE TANK TO RELEASE ALL THE PRESSURE.</p>
Excessive humidity it the discharge air.	<ul style="list-style-type: none">• Water in excess in the tank.• High humidity.• Admission filter is clogged.	<ul style="list-style-type: none">• Drain the tank opening the drain valve.• Move the compressor into an area with less humidity. Use a filter in the air piping.• Clean or replace the filter.
The motor operates continuously without stopping.	<ul style="list-style-type: none">• The pressure switch is failing.• Excessive air use.• Drain valve open	<ul style="list-style-type: none">• Go to a TRUPER® Authorized Service Center to replace the pressure switch.• The compressor is not big enough to satisfy the CFM requirements of the pneumatic tool you are using.• Make sure the drain valve is completely closed
The compressor vibrates.	<ul style="list-style-type: none">• Loose mounting knobs.• The tank rubber base is not installed or is worn.	<ul style="list-style-type: none">• Tighten all the knobs and screws.• Install or replace the rubber base.
Air outlet is lower than normal.	<ul style="list-style-type: none">• The drain valve is open.• The admission filter is dirty.• Leaks in one connection.	<ul style="list-style-type: none">• Tighten the drain valve.• Clean or replace the admission filter.• Tighten the connections. Check to detect leaks. Replace damaged or broken hoses.

Authorized Service Centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0557	MORELOS	FIX FERRETERÍAS CAPITAN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL MOLINO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUATLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREDOR, CORREDOR # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 6823	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 2013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRESOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P. 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code	Model	Brand
13836	COMP-30S	 TRUPER®

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by **Truper®**. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 22, Centro, Cuahtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number **800-018-7873**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



1
YEAR

Stamp of the business. Delivery date:

AÑO

Sello del establecimiento comercial. Fecha de entrega:

Industria 1, Parque Industrial Jilotepéc, Jilotepéc, Edo. de Méx. C.P. 54257, Tel. 761 782 9100.

su red de servicios. Tel. 800-018-7873. Made in China. Importador Truper, S.A. de C.V. Parque Industrial Cuauhtémoc, CDMX, 06060, donde también podrá adquirir partes, componentes, consumibles y accesorios. Incluye los gastos de transporte del producto que deviene de su cumplimiento de

o en Corregidora 22, Centro, Cuauhtémoc, CDMX, 06060, donde también podrá adquirir partes, componentes y accesorios. Incluye los gastos de transporte del producto que deviene de su cumplimiento de

preservar el producto, poliza sellada o rellena o relleno o compresión, en el establecimiento donde lo compró.

Institutivo; que al ser elaborado o preparado por personal no autorizado por Truper®. Para hacer efectiva la garantía.

Garantía. Duración: 1 año. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o

Código	Modelo	Marca	COM-P-50S	TRUPER®
13836				

**Poliza de
garantía**

TRUPER®




EN CASO DE TENER ALGÚN PROBLEMA PARA CONTACTAR UN CENTRO DE SERVICIO AUTORIZADO TRUPER®, CONSULTE NUESTRA PÁGINA WWW.TRUPER.COM DONDE OBTENDRÁ UN LISTADO ACTUALIZADO, O LLAME AL: 800 690-6990 ó 800 018-7873 DONDE LE INFORMA- RA NÚMERO DE SERVICIO AUTORIZADO TRUPER®, DONDE PUEDE CONSEGUIR LA INFORMACIÓN.
BAJA CALIFORNIA SUR DE TODO PARA LA CONSTRUCCIÓN ACUASCALENTES
SUCURSAL TIJUANA AV. LA ENCANTADA LOTE #5, PARQUE INDUSTRIAL CP 20030. AGUASCALIENTES, AGS, TEL.: 449 994 0537
BOLIVIA SUCURSAL TIRIBIDI GRAL. BARRAGAN #120, COL. RÍO MÍNIMO, CP 58030. ACUASCALENTES, AGS, TEL.: 449 994 0537
CAMPESINO TORNILLOS Y FERRERIA AAA AV. 20 DE NOVIEMBRE #910, COL. CENTRO, CP 68300. OAXACA
CAMPESINO TORNILLOS Y FERRERIA AAA CP 24080 CAMPECHE, CAMP, TEL.: 981 815 2088 AV. MEXICO #27, COL. CENTRO, CP 30000. CHIAPAS
CHIHUAHUA SUCURSAL CHIHUAHUA AV. SISTEMAS EERGON #27-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO
COAHUILA SUCURSAL TORREON TEL. 87 209 628 23 AV. MEXICO #28-A SAN LORENZO ALMECTA CP 77170 LIMÓN FEDECAZ MZ 6 LT 3 LOCAL 2, COL. EJIDAL, QUINTANA ROO

TRUPER®

Solución de problemas


Mantenimiento

Filtro de aire

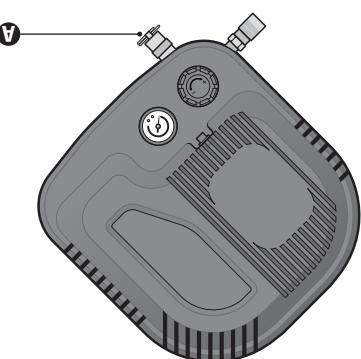

- Revise frecuentemente el filtro de aire para confirmar que esté limpio.
- Para dar servicio al filtro, retire la cubierta del filtro.
- Retire el filtro y límpie la espuma o filtro con agua caliente y jabonosa (los filtros de papel no se pueden lavar). Enjuague y dése seco.
- Reemplace los filtros de aire que no se puedan limpiar.
- Coloque el filtro de regreso en la base de la carcasa y coloque la cubierta.

Limpieza y cuidados

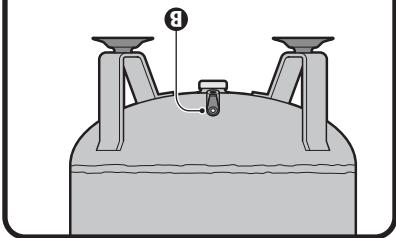

- Coloque el otro servicio o reparación del compresor debe ser realizada por personas no calificadas autorizadas **TRUEPER**. El servicio y mantenimiento realizado por personas que no tienen la licencia de taller peligroso y legítimo a ocasiones daños puede resultar perjudicial para la garantía del producto.
- Despues de liberar toda la presión, abra la válvula de seguridad (A).
- Despues de tirar del tanque jalando el anillo de la válvula de presión de cada uso desconecte el compresor y libere la presión del tanque.

Servicio

- Despues de liberar toda la presión, abra la válvula de seguridad (B) para eliminar el agua almacenada en el tanque.
- Despues de liberar toda la presión, abra la válvula de seguridad (A).
- Despues de tirar del tanque jalando el anillo de la válvula de presión de cada uso desconecte el compresor y libere la presión del tanque.



Mantenimiento

- Revise la válvula de seguridad antes de cada uso.
- Use lentes de seguridad.
- Encienda el compresor y permita que se caliente el tanque.
- Cuanado el tanque se apague automáticamente por presión de instrumento ON / OFF en la posición OFF.
- Jale el anillo de la válvula de seguridad aparte por unos segundos para liberar el aire. SIEMPRE aparte su rostro de la boca del anillo.
- Si se usan aire expulsos que se salta el anillo, si la válvula es atornio y no se puede accionar con el anillo NO use el compresor y acuda a un Centro Autorizado de servicio **TRUEPER** para reemplazar la válvula.
- El uso del compresor con una válvula en malas condiciones puede resultar en la muerte o lesiones corporales graves.

Válvula de seguridad

- Inspeccione regularmente todos los tornillos de montaje del motor.
- Use siempre las herramientas apropiadas para apretar y desapretar.
- Siempre mantenga las herramientas limpias y libres de aceite.
- Toda la presión del sistema eléctrico y libre de servicio, requiere de un mantenimiento.
- Desconecte el equipo del suministro eléctrico y libre de servicio, realice o dar mantenimiento.
- Inspeccione regularmente todos los tornillos de montaje y asegúrese de que estén apretados correctamente. En caso de que alguno de los tornillos esté suelto, apriételo inmediatamente.


Humedad en el aire comprimido

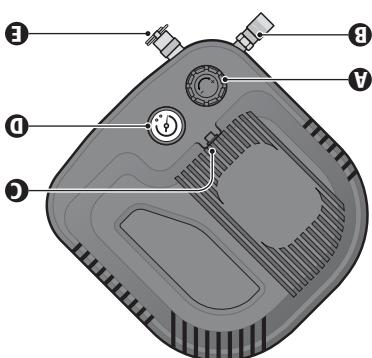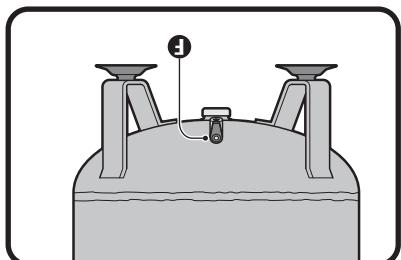

Apagado y almacenaje

- A. ATENCIÓN** • Antes de operar el compresor coloque la herramienta y operación sobre una superficie plana, nivelada y sólida, con buena ventilación y alejado de objetos inflamables, cables, como contenedores de aceite. Deje un espacio de al menos 30,5 cm (12"), libre de obstrucciones y alejado de la fuente de calor. Coloque el regulador (**A**) completamente en dirección de las manecillas del reloj para cerrar el flujo de aire. Conecte la mangueira de aire a la salida de aire (**B**). Presione el interruptor ON/OFF (**C**) en la posición ON (Y) y eleve ligeramente el compresor hasta que la posición ON (**D**) se active de acuerdo a la indicación. Encienda el equipo presionando el interruptor ON / OFF en la posición ON (**E**). Coloque la herramienta neumática al final de la mangueira. Coloque el regulador hasta que la herramienta neumática (**F**) incline la herramienta segun sus instrucciones. Cierre el regulador para la herramienta neumática (**G**) incline la herramienta neumática para mantener la presión establecida. Coloque los dedos de apagado / encendido automáticamente la herramienta se usa continuamente, el compresor automáticamente para mantener la presión establecida.

Puesta en marcha

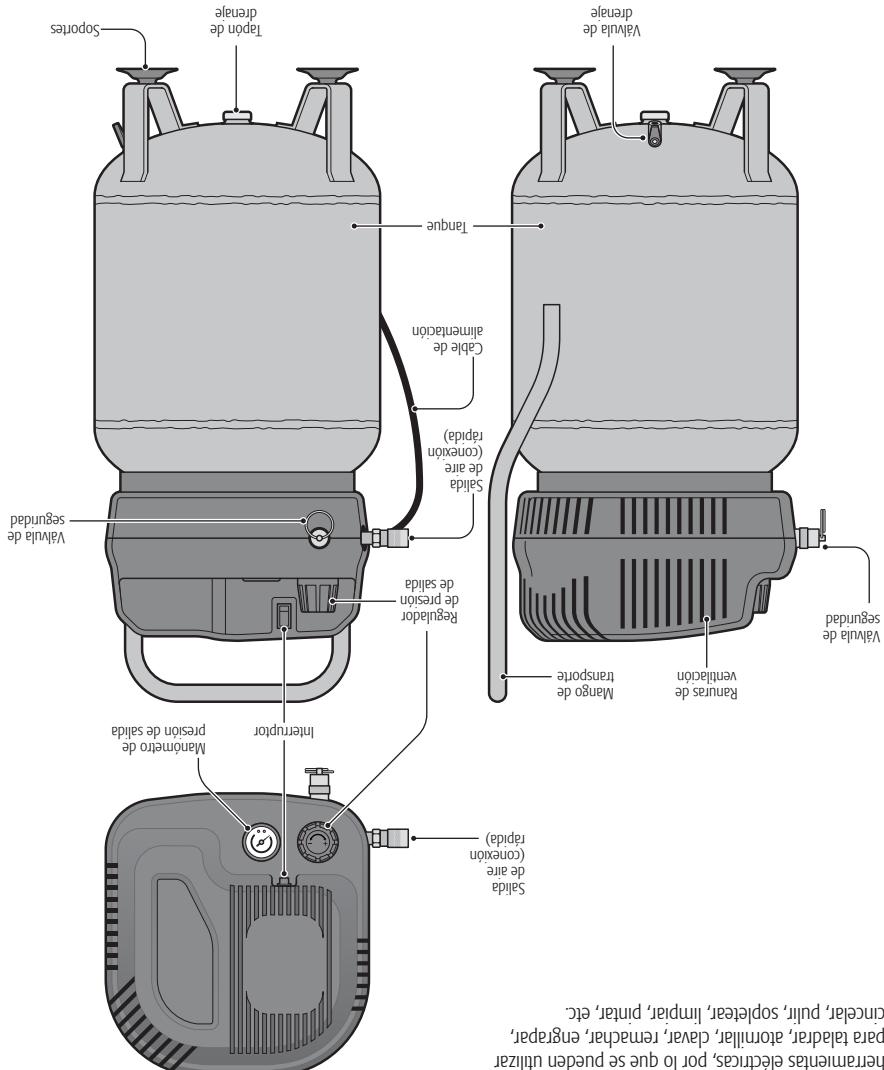

- El compresor de aire sirve para proveer de energía a herramientas eléctricas, tan versátiles como las herramientas neumáticas, para taladrar, atornillar, clavar, remachar, engrapar, etc.

Partes

CTRUPER®

TRUPER®

Melillas opera el compresor

Antes de usar el compresor

Advertencias de Seguridad para uso de compresores neumáticos

Para uso de compresores neumáticos

- Recuerde que la unidad arranca automáticamente.
- Siempre espere el compresor. Recite la d韆jala del lomacortíne, purgule y libere toda la presión del sistema.
- Debe de anillo de la válvula de liberación de presión para asegurarse de que funcione apropiadamente.
- Laqueo de limpio y seco ayuda a evitar corrosión.
- Use el compresor adecuado para el trabajo que requiere.
- Utilice el compresor adecuado para el trabajo que requiere.
- Use la presión del tanque adecuada para el trabajo que requiere.

Despues de usar el compresor

- **TRUPER.** Puede tener como resultado lesiones personales.
- Se producen altas temperaturas y hay partes en movimiento sobre todo de la cabeza. Para evitar quemaduras o ingerir líquidos calientes.
- Los componentes de la manigua de aire pueden descomprimirse durante el uso. Permiten que se entrelan anteriores de la ingle y las nalgas.
- No utilizar la manigua de aire para mover el computador.
- No debe de ser recomendado para largos períodos de tiempo.
- Descansar la espalda después de trabajar con ella.
- El uso de accesorios no recomendados por fabricantes.
- Se producen altas temperaturas y hay partes en movimiento sobre todo de la cabeza. Para evitar quemaduras o ingerir líquidos calientes.
- Los componentes de la manigua de aire pueden descomprimirse durante el uso. Permiten que se entrelan anteriores de la ingle y las nalgas.
- No utilizar la manigua de aire para mover el computador.
- No debe de ser recomendado para largos períodos de tiempo.
- Descansar la espalda después de trabajar con ella.
- El uso de accesorios no recomendados por fabricantes.
- Se producen altas temperaturas y hay partes en movimiento sobre todo de la cabeza. Para evitar quemaduras o ingerir líquidos calientes.
- Los componentes de la manigua de aire pueden descomprimirse durante el uso. Permiten que se entrelan anteriores de la ingle y las nalgas.
- No utilizar la manigua de aire para mover el computador.
- No debe de ser recomendado para largos períodos de tiempo.
- Descansar la espalda después de trabajar con ella.
- El uso de accesorios no recomendados por fabricantes.

- **ADVERENCIA** • No ajuste el refrigerador más arriba que la presión máxima de presión marcada en el accesorio, de lo contrario el compresor podría revestirse. Mantenga el compresor bien ventilado. No lo cubra ni lo utilice si la temperatura ambiente desciende de los 50° F (10° C).
- **A TENCIÓN** • El compresor se calienta durante la operación. No lo toque ni permita que los niños se acerquen al durante su uso.

A AIREACION • No dirijas las bocanillas, asperseres o el chorro de aire hacia las personas o animales.
A DVERTENCIA • Nunca mihale directamente el aire comprimido producido por el compresor de aire. No es adecuado como aire respirable.

www.orientsoft.com

- Para permitir una ventilación adecuada para el crecimiento, en un área adecuada donde vivienda.
- La temperatura ambiente recomendada para el crecimiento es de 30,5 °C a 35 °C.

A TENCIÓN • Asegúrese de leer todas las etiquetas de las pinturas o materiales textiles que está rociando. Lea las instrucciones del respirador para asegurarse de que el respirador sea adecuado. Siempre use anteojos de seguridad al trabajar con compuestos que contienen óxido de zinc.

DIFERENCIAS • Los sistemas de control de la velocidad de los motores de inducción tienen una eficiencia de funcionamiento que es superior a la de los motores de corriente continua.

ATENCIÓN • Revise la presión máxima establecida para las herramientas y accesorios de fijación. La presión de salida del compresor debe ser menor que el umbral establecido.

DIFERENCIAS • Los sistemas de control de la velocidad de los motores de inducción tienen una eficiencia de funcionamiento que es superior a la de los motores de corriente continua.

ATENCIÓN • Revise la presión máxima establecida para las herramientas y accesorios de fijación. La presión de salida del compresor debe ser menor que el umbral establecido.

DIFERENCIAS • Los sistemas de control de la velocidad de los motores de inducción tienen una eficiencia de funcionamiento que es superior a la de los motores de corriente continua.

ATENCIÓN • Revise la presión máxima establecida para las herramientas y accesorios de fijación. La presión de salida del compresor debe ser menor que el umbral establecido.

A ATENCIÓN! • El equipo puede ser una fuente de ignición en el ser humano. Mantenga el equipo a menos de 6 metros (18 pies) alejado de vapores explosivos como gasolina y otros solventes. Siempre use ropa de algodón seca para mantenerse ventilada. No robe en ambientes cerrados. No sume agua en ropa húmeda. No robe en ambientes inflamables. Mantenga el compresor tan lejos como sea posible del área de operación.

(UTILIZACIÓN) o con los códigos y ordenanzas locales. Debe emplear un electricista calificado.

complir con la NORMA OFICIAL MEXICANA NOM-001-SEDE, INSALACIONES ELECTRICAS

J. ABVERETENCIA | Todo el cabreado, las conexiones eléctricas y la conexión a tierra del sistema deben

VOLTEC Lets's characterize our capabilities prior to us as characters, you can then choose the style of design and description you like.


AWG = Calibre de alambre estadounidense (American Wire Gauge). Referencia: NMX-J-195-ANCE

* Se permite utilizarlo siempre y cuando las extensiones mismas cuenten con un artefacto de protección contra sobrecomienite.

Capacidad de	Numnero de	Conductores	Ampere	de 10 A hasta 10 A	de 10 A hasta 15 A	de 15 A hasta 20 A
			de 1,8 a 15 m	mayor de 15 m		
		Calidre de extensión				

ATENCIÓN Al usar un cable en el exterior, es importante seguir las normas de seguridad establecidas en la legislación local. Si tiene dudas sobre el uso de cables en exteriores, consulte con un profesional.

hermafomita es de 2 polos (2 officios). NO REMUEVA O ALTERE EL CONDUCTOR

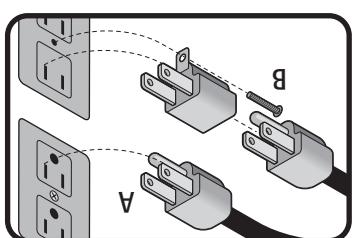

Redes de suministro eléctricos

A ADVERTENCIA Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.

Autorizado **TRUPER**, con el fin de evitar algún riesgo de desgarra o accidente considerable. La construcción del sistema eléctrico de esta herramienta es alterada por salpicaduras o

ADVERTENCIA Si el cable de alimentación se daña, éste debe ser reemplazado por el fabricante o Centro de Servicio

La clase de constucción de la herramienta es: Alislamiento básico.

Aristidumellito • Clase I G1000 IP67 • **Y** El cable de alimentación tiene certificación UL-Listado para uso en exteriores.

- Conductores
- 16 AWG x 3C con temperatura de aislamiento de 105 °C

• Capacidad del tanque

Flujo de aire •

• Máxima presión de operación 800 kPa (116 PSI)

• Conexiones de aire	• Micrófonos	• SACN (IP x 2) - CM	• 1-250	• 1-8
• 6,5 mm (1/4") accople rápido				

Colfriethre	• 10 A	Portechila del Motolin
Medidas	• 31 cm x 67 cm	Peso

Tension ● 127 V~ Frecuencia ● 60 Hz

Descripción	Compresor de aire libre de aceite
•	

• Código 13836 COM-F-305

COMP 202

COMP-305

Especificaciones técnicas

TRUPER®

A ATENCIÓN

Indice

- | |
|--|
| 3
Especificaciones técnicas

3
Requerimientos eléctricos

4
Advertencias generales de seguridad

5
Advertencias de seguridad para uso de compresores neumáticos

6
Partes

7
Puesta en marcha

8
Mantenimiento

9
Solución de problemas

10
Notas

11
Centros de Servicio Autorizados

12
Poliza de Garantía |
|--|
- Guarde este instructivo para futuras referencias.
- Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.
- Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

RECOMENDACIONES DE USO Y CUIDADOS


- | | | |
|---|---|---|
| ■
NUNCA EXCEDA el nivel máximo de presión KPa (PSI) de la herramienta o accesorio a medida que las ruedas y el soporte frontal para mantener niveles de compresor. | ■
ENSAMBLE las ruedas y el soporte frontal para mantener niveles de compresor. | ■
REALICE MANTENIMIENTO periódico a su máquina (página 8). |
|---|---|---|



Lea este instructivo por completo
antes de usar la herramienta.

ATENCION

COMP-30S

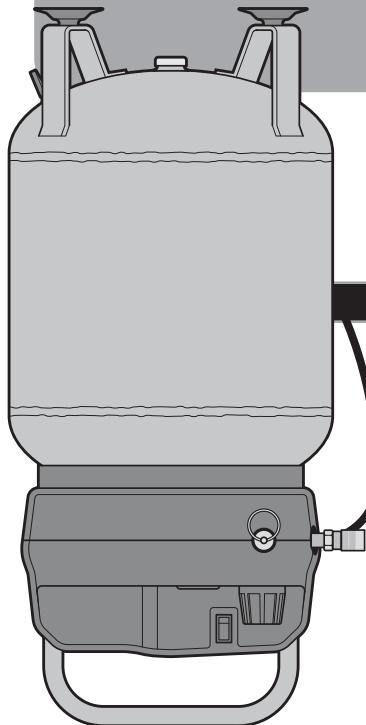

13836 COMP-30S

Código Modelo

Este instructivo es para:

800 KPa
(116 PSI)
Precision

Compresor de aire libre de aceite

Instructivo de

TRUPER®

ESPAÑOL
ENGLISH