


Manual

Hammer Drill

1.2 Hp 1/2"

Power

Chuck

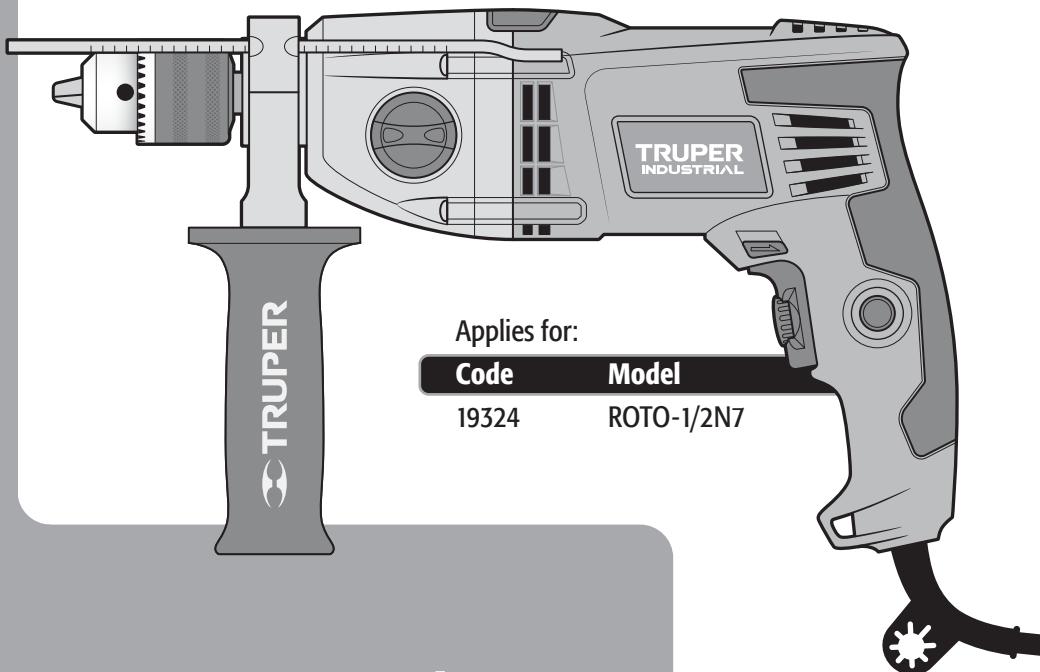

Applies for:

Code **Model**

19324

ROTO-1/2N7

ROTO-1/2N7

! CAUTION



Read the user's manual thoroughly
before operating this tool.



Technical data	3
Power requirements	3
 General power tool safety warnings	4
 Safety warnings for drills and hammer drills	5
Parts	6
Preparation	6
Preparation	7
Start up	8
Maintenance	9
Notes	10
Authorized service centers	11
Warranty policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations

 **TO EXTEND THE LIFE OF YOUR TOOL.**
Clean with compressed air after each use.

 Never use or pull the power cord to carry, lift, or disconnect the tool.

 Do not change the drive selectors while the chuck is rotating.



 **FULFILL THE WORKING CYCLES.**
50 min of work and 20 min of rest. Daily maximum 6 hours.



 Perform periodic **MAINTENANCE** to your machine (page 9).

ROTO-1/2N7

Code	●	19324
Description	●	Hammer Drill
Chuck	●	1/2"
Voltage	●	127 V~
Current	●	7 A
Power	●	1.2 Hp
Functions	●	Drill - Hammer drill
Drilling Capacity	●	Steel: 1/2" Concrete: 1/2" Wood: 1"
Speed	●	1: 0 RPM - 1 200 RPM 2: 0 RPM - 3 300 RPM
Srokes per minute	●	1: 0 strokes/min - 20 400 strokes/min 2: 0 strokes/min - 56 100 strokes/min
Duty Cycle	●	50 minutes' work per 20 minutes idle. Maximum 6 hours per day
Conductors	●	16 AWG x 2C with insulating temperature of 221 °F
Insulation	●	Class II IP Grade ● IP20

Power Cord Grips used in this product: Type "Y".

Tool Build Quality: Reinforced insulation

Thermal insulation on motor winding: Class B


WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power Requirements

WARNING Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminates the need of both a grounded third power cord with three prongs or a grounded power connection.

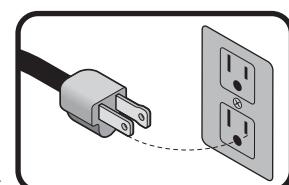

WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension Gauge
From 0 A and up to 10 A		From 6 ft to 49 ft Higher than 49 ft
From 10 A and up to 13 A		18 AWG 16 AWG
From 13 A and up to 15 A	3 (one grounded)	16 AWG 14 AWG
From 15 A and up to 20 A		14 AWG 12 AWG
		8 AWG 6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge -Reference NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



**General power tool
safety warnings**

⚠ WARNING! Read carefully all safety warnings and instruction listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.

**Electrical Safety**

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

**General power tool
safety warnings**

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry or long hair may get caught in moving parts.



If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.



Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.



Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a TRUPER Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.

This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

Safety Warnings for Drills and Hammer Drills

TRUPER
INDUSTRIAL

Select the Right Bit

- CAUTION** • Select the right bit for the material. This reduces the risk of severe injuries and makes the work faster.
- When drilling concrete or stone, use bits specifically dedicated for concrete.
 - For metal or plastic use metalworking bits. The measurements cover a minimum of 1/16" (1.5 mm) up to the maximum capacity of the chuck 1/2" (13 mm).
 - To work on wood, select regular bits dedicated for wood work. In any event, to drill orifices 0.25" or smaller, use bit to work on metal.
 - Do not try to use bits exceeding the chuck capacity.

Before Operating the Hammer Drill


- Take your time assessing the job to carry out. Make sure you watch all the necessary caution measures before you start drilling.

WARNING • Adjust correctly the bit into the chuck. Remove the chuck key before starting to drill. If the key is not removed, it can shoot out with great speed and cause severe injuries.

DANGER • Before drilling into a wall, floor or ceiling, make sure there are no hidden objects like cables, wiring or pipes.

DANGER • Double check the switch is OFF (see page 8, Strat Up and Operation Control) before connecting the tool. Otherwise, it will star unexpectedly and could cause severe injuries.

CAUTION • Turn OFF and disconnect the tool before reversing the chuck rotation direction and / or replacing the bit.

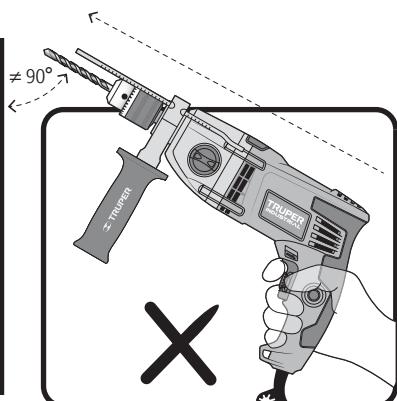

Wrong Way to Operate the Hammer Drill

While Operating the Hammer Drill

• Hold the tool using both the main handle and the auxiliary handle if supplied with the tool. Keep in mind that losing control can causes severe personal injuries.

• Hold the tool by the insulated surfaces, emphasizing when carrying out jobs where the cutting bit may contact hidden wires or its own power cable. Contact with a power conducting cable, electrify the metal parts of the tool and cause an electric shock to the operator.

• Do not force the tool to excessive force.

CAUTION • If the bit gets stuck in the work piece, shut off the hammer drill immediately! Then, remove the bit out from the work piece. Do not try to remove a stuck bit by turning it On and Off the tool to accelerate the drilling job.

• Do not exercise too much pressure on the tool in order to accelerate the drilling. Otherwise, the bit gets damaged and the efficiency will decrease as well as the useful life of the tool.

WARNING • The bigger the diameter of the bit, the higher the reactive force. It may cause losing control of the tool. To prevent this possibility, hold the tool firmly with both hands and stand well balanced while drilling at 90°.

• stay alert and prepared to relax the force when the bit drills through metal. Sudden movements may break the bit or damage the tool body.


CAUTION • Do not touch the bit or the orifice right after drilling. Allow cooling down time to manipulate. Do not try to cool down using water or oil.

• Avoid setting the tool in a place where there may be particles and / or dust immediately after using it. These particles may be absorbed inside the tool mechanism and damage it.


• Wear hearing protection when using the hammer drill. Exposure to noise may cause hearing loss.

• Wear anti-dust mask and a dust extracting equipment. Remember that working materials such as asbestos, paint with lead, additives, some kinds of wood, metals or minerals is highly toxic.

• Wear safety goggles.

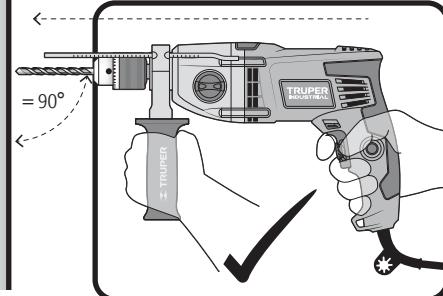


Right Way to Operate the Hammer Drill

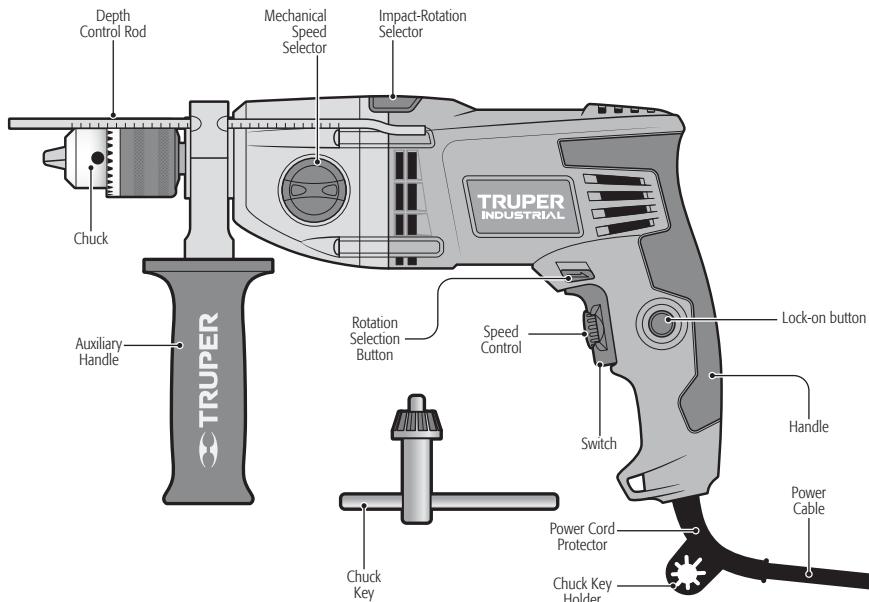

Preparation

Auxiliary Handle and Depth Control Rod Assembly

1. Turn the auxiliary handle in a clockwise direction while released so that the opening in the mount gets through freely over the chuck.
2. Insert the hammer drill head through the auxiliary mount.
3. Insert the depth control rod into the mount orifice.
4. Rotate the auxiliary handle together with its mount until it is set in the right position to operate the tool. The auxiliary mount is secure when the handle notches assemble in the gearbox.
5. Turn the auxiliary handle to firmly set the mount onto the hammer drill head.

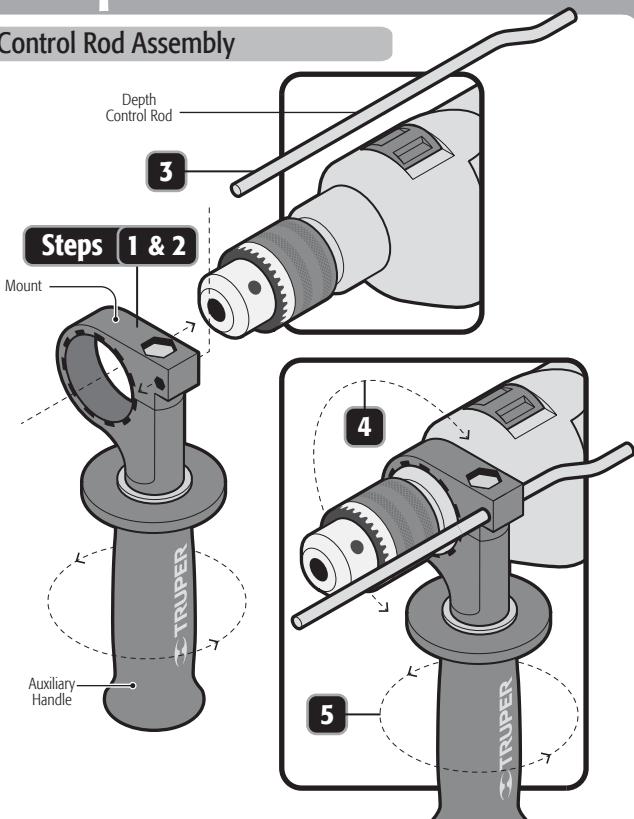


Preparation

TRUPER
INDUSTRIAL

Bit Fitting


- Put the bit into the chuck until it stops. Fasten with the chuck key and tighten the chuck alternatively into each of the orifices.

⚠ WARNING • Clean burr and any other foreign object from the bit and the chuck. Otherwise, the bit cannot be tight and could cause personal injuries.

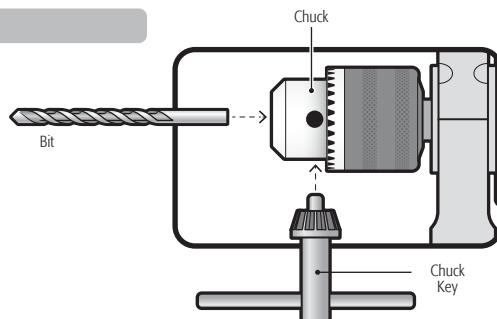

Depth control rod adjustment

- Loosen the auxiliary handle (See Page 6; auxiliary handle assembly), to allow free movement of the rod.
- Move the depth rod so that the distance between the end of the rod and the end of the drill bit equals the desired drilling depth.
- Tighten the auxiliary handle (See Page 6; auxiliary handle assembly), to lock the rod in position.
- When drilling with the depth rod, stop when the end of the rod reaches the surface.

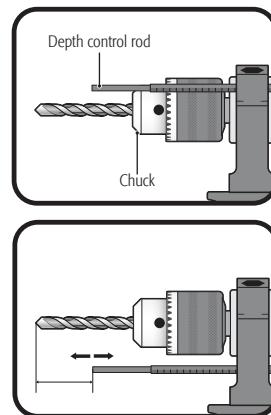

Start Up and Operation Control

• Intermittent operation:

Connect the plug into the power inlet.

Press the switch (A) to start the hammer drill.


To stop, just release the switch.

• Continuous Operation:

Connect the plug into the power inlet.

Press the switch (A) and block it pressing the lock-on button (B).

To stop, press and then, release the switch.

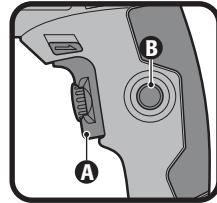**Speed Range Control**

• Speed range selection (mechanical speed).


• The two speeds available on the rotary hammer operate similarly to those used in cars.

• The low speed (Position 1) will give you a lot of torque. Use this speed when starting to drill large holes, either in metal or concrete. This will prevent the bit from getting stuck.

• Move the number 1 towards the back.

• The high speed (Position 2) has reduced torque but allows the rotary hammer to operate at higher revolutions per minute, which will make the rotary hammer, in its drilling function, drill wood or thin metal faster. Move the number 2 towards the back.


CAUTION Do not rotate the mechanical speed selector while the tool is operating.

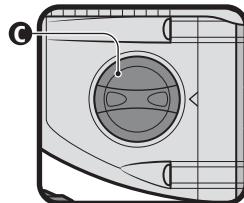**Speed Control**

• The tool can operate in different speeds. These can be selected adjusting the speed control (D) built in the switch.

• Turn the speed control in a clockwise direction to increase the Hammer Drill speed and torque.


• Turn in a counterclockwise direction to decrease speed and torque.

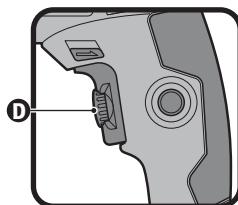**Changing From Hammer Drill To Drill**

• To drill concrete, floor tile or materials of similar hardness, move the impact-rotation selector (E) all the way towards the IMPACT mark. The bit will hit the material while rotating at the same time.

• To drill steel, wood or plastic, move the impact-rotation selector completely towards the DRILL to make the bit rotate onto the material.


WARNING Do not try to drill steel, wood or plastic with the hammer drill into IMPACT mode setting (selector towards). Otherwise the tool efficiency will lessen and the bit tip gets damaged.

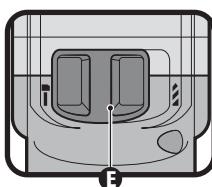**Rotation Direction**

• To have the bit rotating forward and drill, press the rotation selector (F), the button with the arrow pointing the chuck.


• Turn in reverse and habilitate the screwdriver press the button with the arrow pointing the Hammer Drill handle.

WARNING Never use the tool in reverse when having the impact - rotation selector into the IMPACT position (selector towards). Otherwise, the impact system will be severely damaged.

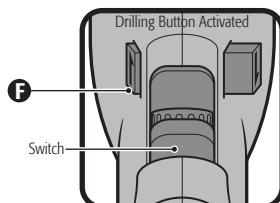

Chuck Replacement

- Remove the auxiliary handle and pen the chuck jaws all the way.
- Using a screwdriver remove the left-threaded safety screw with a clockwise movement.
- Fit the long side of an "L" Hex key (not included) in a vise and insert the short side of the "L" Hex key (not included) to the chuck. Close the jaws.
- Move the rotation selector lever into the reverse position (see page 8, Rotation Direction) and fastening with a firm hand activate the hammer drill. The chuck will be released with the turn.
- Set the new chuck threading into the hammer drill thread until it stops.
- Open the jaws fully and thread the screw in a counter-clockwise position. Tighten with a screwdriver.

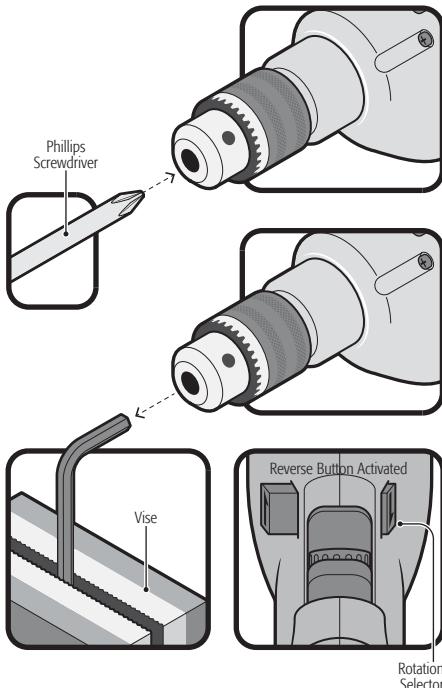

Cleaning And Care

- To guarantee adequate motor cooling, always keep slots clean and free of obstructions.
- Regularly inspect all the assembly screws. Double-check they are properly tighten. If any screws are loose, tighten immediately.

Service

- Servicing tools should only be made in a TRUPER Authorized Service Center. Service and maintenance performed by non-qualified people may be dangerous and can lead to personal injuries. It also makes the product Warranty void.

Carbon Brush Replacement

- Carbon brushes shall be checked periodically. When showing signs of wear go to a TRUPER Authorized Service Center to have both carbon brushes replaced.
- When replaced, ask the technician to inspect if the new carbon brushes move freely in the carbon brush housing. Ask to turn on the tool during 5 minutes to even the contact in the carbon brushes and the commutator.
- Use only original TRUPER spare carbon brushes, designed specifically with the right strength and electric resistance for each type of motor. Carbon brushes with different specifications may damage the motor.
- When replacing carbon brushes, always change both.

Lubrication

- We recommend lubricating the tool transmission every carbon brush replacement in a TRUPER Authorized Service Center.

Authorized Service Centers

**TRUPER
INDUSTRIAL**

In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0557	MORELOS	FIX FERRETERÍAS CAPITAN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCRAL Tijuana AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL MORO II, C.P. 22244, Tijuana, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCRAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCRAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUATLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREDORA, CORREDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCRAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 6823	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, SLP. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 2013	SINALOA	SUCRAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCRAL CENTRO JILOTEPEC PARQUE INDUSTRIAL #1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257, TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCRAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRESOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P. 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCRAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code**Model****Brand**

19324

ROTO-1/2N7

TRUPER
INDUSTRIAL

Warranty. Duration: 5 years. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, only present the product in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. The costs of transportation of the product that derive from its fulfillment of its service network are included. **Truper will not require any proof of purchase to make the warranty effective.** Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

**Póliza de
Garantía**

TRUPER INDUSTRIAL




Sello del establecimiento comercial. Fecha de entrega:

Edo. de Mex. C.P. 54257, Tel. 761 782 9100.

Garanía. Duración: 5 años. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación ofuncionamiento, excepto si se usó en condiciones distintas a las normales; cuando no fue operado conforme a las instrucciones; fue alterado o reparado por personas no autorizadas por TRUPER®. Para hacer efectiva la garantía se presentará el producto en el establecimiento donde lo compró o en Corregidora 35, Centro, Querétaro, donde también podrá adquirir partes, componentes, consumibles y accesorios. Cuauhtémoc, CDMX, 06060, donde también podrá adquirir partes, componentes, consumibles y accesorios. Truper no solicitará ningún tipo de comprobante de pago para hacer efectiva la garantía. Tel. 800-018-7873. Made in/Hecho en China. Importador TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepéc, Jilotepéc, Chiapas, 29000, México. Tel. 961 761 782 9100.

Código	Modelo	Marca	ROT-1/ZN7	INDUSTRIAL	TRUPER
19324					

Cambio de carbonos

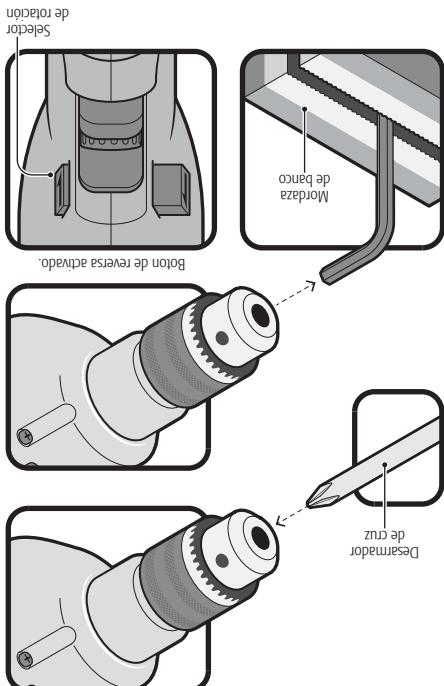

Cambio de droguero

- Los tabacoines deben reuisarce Periodicamente y ser reembolzados TRUFR cuando se helyan sidos desgastados.
 - D. Despues de uso hayan sidos reemplazados, pida que se les inspeccione si los nuevos tabacoines estan en buenas condiciones.
 - Encienda la heramienta durante 5 minutos para moverse libremente en el porta-cercha y solicite que encienda el contacto de los carbonos y el cumuloador.
 - Solo se debe usar carbonos de repuesto originales de motor.
 - Cuando se haga el cambio de carbonos siempre se deban de cambiar los dos carbonos.
 - La resistencia electrica adecuada para cada tipo de motor es la que se indica en la especificacion de cada uno.

- Se recuerda que la transmisión de la enfermedad se librificada cada cambio de carbones en un Centro de Salud Autónomo TULIPED

Lubrication

- E. servicio de las herramientas debes ser realizado en el mismo centro que el que te realizó la intervención.
 - Si necesitas que te realicen una intervención en tu domicilio, debes contactar con el servicio de atención domiciliaria del Centro de Salud más cercano a tu domicilio.


SERVICIO

- Simpre nenhuma das opostuções para garantizar um enfrentamento adequado à desigualdade social implica ideias de
- Impedir que todos os tomilos de montante regulamente todos os tomilos de montante.
- Y desgaste de que están preparados corredores. En caso de que alguno de los tomilos este se debilita, aprietele

Limpieza y cuidados


- Reúne el mithigó duriñ y dura compiéndemeles ihs moderas del boudro.
 - Extráe de temolí de segundad de cuches iquideras allíandando con un desamador en el sentido de las manecillas del reloj.
 - File el ledo largo de una llave hexagonal "L" (no incluida) en una mordaza de banco e inserte el lado inclinado en la llave hexagonal "L" (no incluida).
 - File el ledo largo de una llave hexagonal "L" (no incluida) al centro de la llave hexagonal "L" (no incluida) al que quede la pieña selección de rotación a la posición de revesa (ver página 8 Dirección de rotación) Y accione el rotomarillo sujetabolsillo firmemente. El biquete se libera con el giro.
 - Muera la pieña selección de rotación a la posición de revesa (ver página 8 Dirección de rotación) Y cierre las mordazas.
 - Muera la pieña selección de rotación a la posición de revesa (ver página 8 Dirección de rotación) Y cierre las mordazas.
 - Cuelgue del rotomarillo hasta que llegue al tope.
 - Afloje los tornillos que componen el mecanismo de los tornillos rosados olo en sentido opuesto a los manecillas del reloj. Afloje los tornillos rosados olo en sentido opuesto a los manecillas del reloj.

Mantenimiento

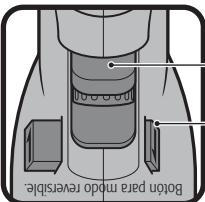


- Para que gire en reversa y pueda utilizar la herramienta como desacoplador.
- Para que la broca gire hacia adelante y pueda taladrar, presione, en el botón de reversa (F), el botón con la flecha que apunta al reverso.
- Si se activa el selector en la posición de IMPACTO (el selector hará clic), de lo contrario se activará en la posición de IMPACTO (el selector hará clic).

Dirección de rotación

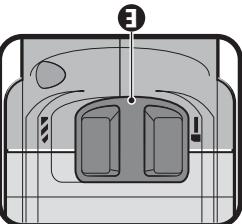


- Para permitir girar mejor medida o plástico, recorra el selector de impagador-rotación hacia la posición de taladro (▲), para que la broca rote sobre el material.
- Para permitir girar mejor medida o plástico, recorra el selector de impagador-rotación hacia la posición de taladro (▲), para que la broca gire en reversa.
- Para permitir girar hacia adelante y poder taladrar, presione, en el botón de reversa (F), el botón con la flecha que apunta al reverso.

Cambio de rotomartillo a taladro

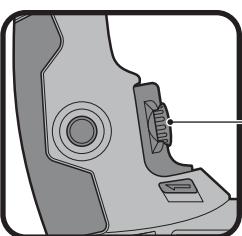


- La herramienta puede operar a distintas velocidades. Esto se encuentra en el selector de velocidad situado en el control de velocidad (D) que se encuentra en el interruptor.
- Gire el control de velocidad en dirección de las manecillas del reloj para aumentar la velocidad y rotación del rotomartillo.
- Gire el control de velocidad en dirección opuesta a las manecillas del reloj para disminuir la velocidad.
- Gire la herramienta a la torsión.

Control de velocidad

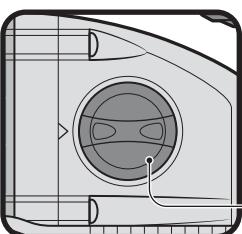

- La velocidad alta (Posición 2) tiene un torque reducido pero permite que el rotomartillo opere a mayores revoluciones por minuto, lo que hace que el rotomartillo, en su función de taladro, prefore más rápido la madera o metal.
- La velocidad media (Posición 1) tiene un torque reducido que permite que el rotomartillo funcione con una menor velocidad.
- La velocidad baja (Posición 1) le da un alto torque (poder de torsión), lo que hace que la herramienta sea más rápida en sus operaciones.
- La velocidad media (Posición 1) le da un alto torque (poder de torsión), lo que hace que la herramienta sea más rápida en sus operaciones.

Selección de rango de velocidad (velocidad mecánica)


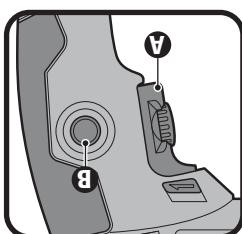


- Operación continua: Conecte la clavija a la tomacorriente. Presione el interruptor (A) y bloquéelo, apretando el botón de uso continuo (B).
- Encendido y control de operación: Conecte la clavija a la tomacorriente. Presione el interruptor (A) para hacer que el rotomartillo empiece a funcionar. Para interrumpir su uso, simplemente suelte el interruptor.
- Operación intermitente: Conecte la clavija a la tomacorriente. Presione la herramienta (A) para hacer que el rotomartillo empiece a funcionar.

Encendido y control de operación


Puesta en marcha

TRUPER INDUSTRIAL

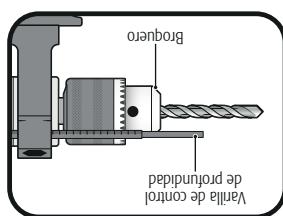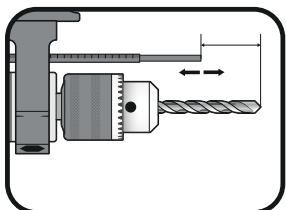

- Afloje el manijo auxiliar (Ver Página 6: ensamble de manijo auxiliar), para permitir el libre movimiento de la varilla.
- Mueva la varilla de profundidad de manera que la distancia entre el extremo de la varilla y el extremo de la broca sea igual a la profundidad deseada.
- Apriete el manijo auxiliar (Ver Página 6: ensamble de manijo auxiliar), para bloquear la varilla en posición.
- Cuando taladre con la varilla de profundidad, pare cuando el extremo de la varilla llegue a la superficie.


Ajuste de varilla de control de profundidad

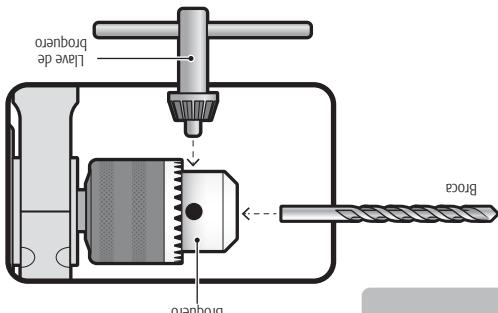

- Introduzca la broca dentro del broquero hasta que tope se sienta con la llave de broquero apretando el tornillo de sujeción.
- Afloje el tornillo de sujeción de la broca.
- Quite la broca y el tornillo de sujeción.
- Inserte la varilla de profundidad en la broca.
- Apriete el tornillo de sujeción.


Instalación de la broca

Preparación

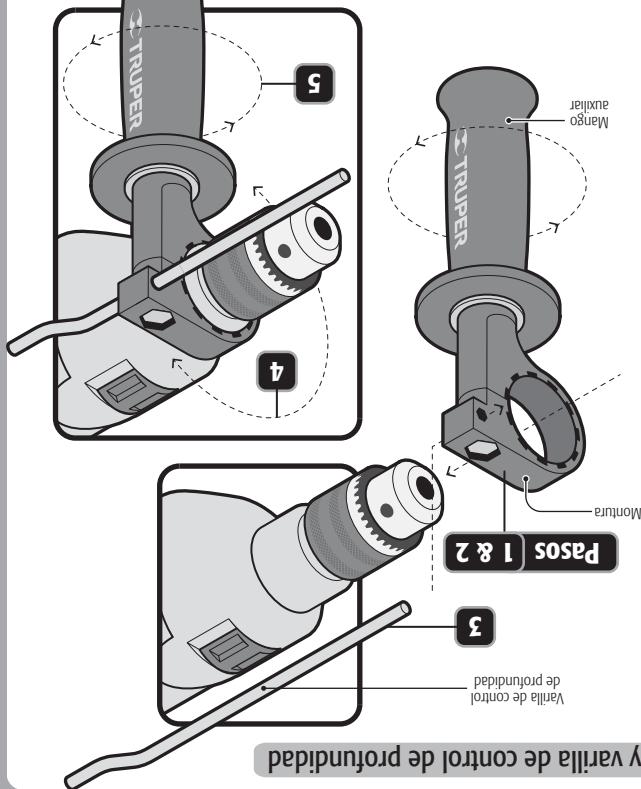

Ensamble de mango auxiliar y varilla de profundidad

Preparación

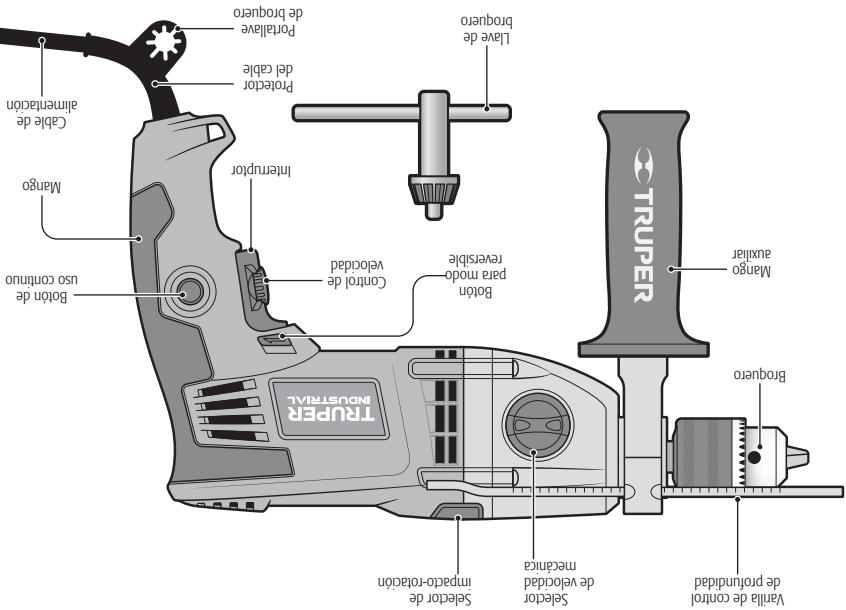

Partes

INDUSTRIAL
TRUPER




especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.

ADVETENCIÀ AI operar hermanamientos eléctricos en exteriores, utilice una extensión

* Se permite utilizarlo siempre y cuando las extensiones mismas cuenten con un artefacto de protección contra sobrecorriente.

de 0 hasta 10 A	18 AWG(*)	16 AWG	de 10 A hasta 13 A	16 AWG	14 AWG	de 13 A hasta 15 A	16 AWG	14 AWG	de 15 A hasta 20 A	8 AWG	6 AWG
-----------------	-----------	--------	--------------------	--------	--------	--------------------	--------	--------	--------------------	-------	-------

Individuado. Si tiene dudas use el siguiente Calidímetro.

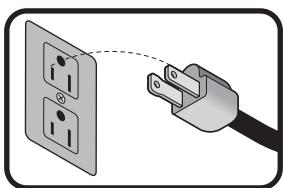

A) ADVERTENCIA Las herramientas de doble aislamiento y aislamiento reforzado están diseñadas para su uso en circuitos de potencia y solo pueden conectarse de esa forma. Si la conexión se hace en cualquier otro tipo de red, votiva, etc., se daña el dispositivo. Ambos tipos de aislamiento tienen la necesidad de un aislante de tierra.

ADVERTENCIA Las herramientas de doble aislamiento y aislamiento reforzado

Reducir los elementos eléctricos

A ADVERTENCIA Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.                              <img alt="Hazardous dust or mists icon" data-bbox="11605 81



AVERTENCIA Si es capaz de alimentación se daña, este debe ser reemplazado por el fabricante o lehmo de servicio autorizada TRUPER® con el fin de evitar la riesgo de desastre o accidente considerable.

El cable de alimentación tiene sujetacables tipo Y. La clase de construcción de la herramienta es: Aislamiento reforzado B. La clase de aislamiento térmico de los devanados del motor: Clase B.

ROT0-1/2N7

Especificaciones técnicas

- ATENCIÓN** Realice **MANTENIMIENTO** periódico a su máquina (página 9).
- ATENCIÓN** 50 min de trabajo por 20 min de descanso. Máximo diseño 6 horas.
- ATENCIÓN** No cambie los selectores mientras el broqueo esté girando.
- ATENCIÓN** Nunca use el cable para transportar, levantar o desconectar la herramienta.
- PARA PROLONGAR LA VIDA DE SU HERRAMIENTA.** Limpie con aire comprimido (sopletear), después de cada uso.

Recomendaciones de uso y cuidados

- 12** Poliza de garantía.
- 11** Centros de servicio autorizados.
- 10** Notas.
- 9** Mantenimiento.
- 8** Puesta en marcha.
- 7** Preparación.
- 6** Preparación.
- 6** Partes.
- 5** Para uso de taladros y rotomotorillos.
- 4** Advertencias de seguridad.
- 3** Advertencias generales de seguridad.
- 3** Requerimientos eléctricos.
- 3** Especificaciones técnicas.
- Guarda este instructivo para futuras referencias.
- Los gráficos de este instructivo son para referencia, pueden variar del asiento real de la referencia.
- Guarda este instructivo para futuras referencias.
- Para poder sacar el máximo provecho de la herramienta, probarla su vida útil, hacer validar la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

ATENCIÓN

Indice



Lea este instructivo por completo
antes de usar la herramienta.




¡ATENCIÓN!

ROTO-1/2N7

19324 ROTO-1/2N7

Codigo Modelo

Este instructivo es para:

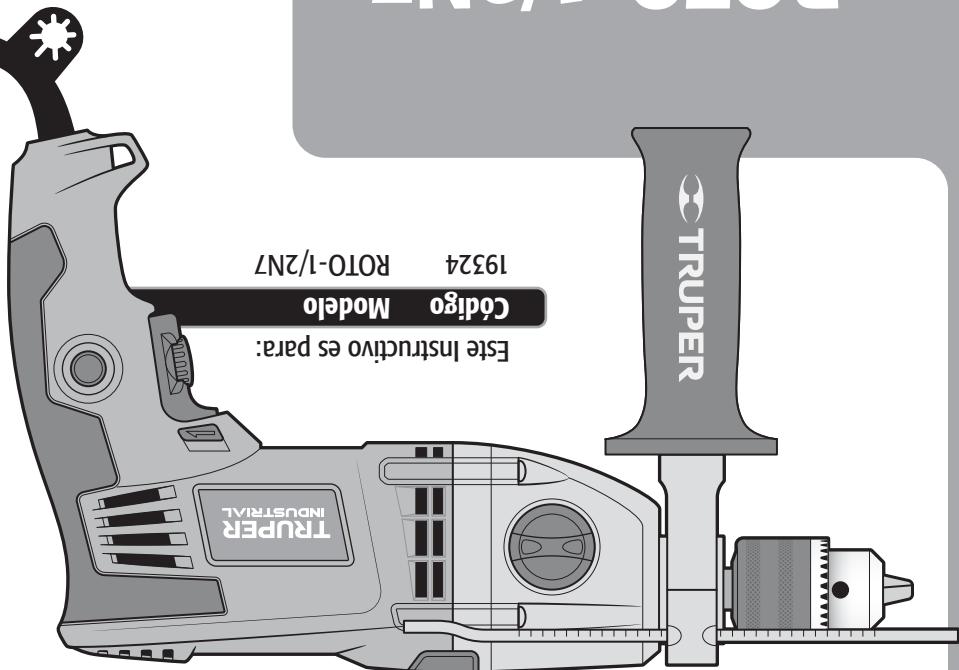

1/2" 900 W Potencia Broquero
13 mm

Rotomartillo

Instructivo de

INDUSTRIAL
TRUPER®

ESPAÑOL
ENGLISH