

**20055**  
**ASPRO-11**

**Clip de límite de riego**  
Irrigation limit clip

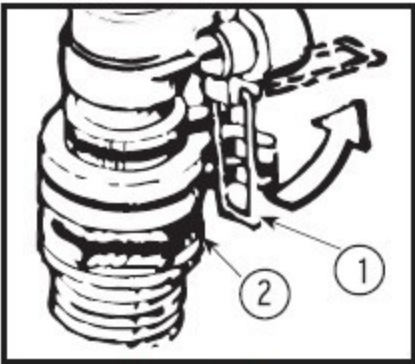


Imagen 1

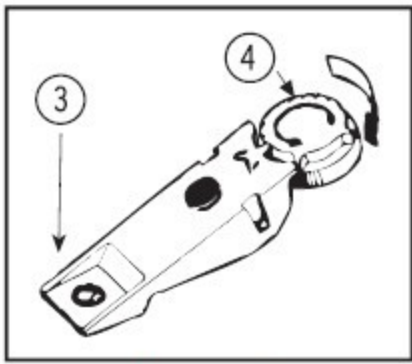


Imagen 2

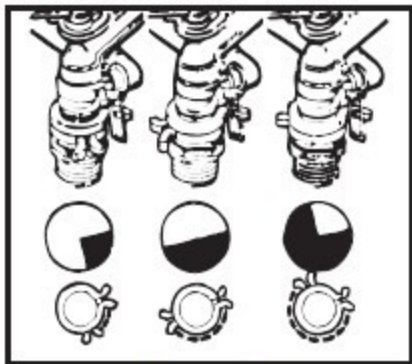


Imagen 3

**Instrucciones:**

1. Para que el aspersor gire en círculos completos, jale el clip hacia arriba (1).
2. Para que gire parcialmente, baje el clip.
3. Ajuste cada retén (2) de manera que el clip metálico limite el riego al área que desee. (Imagen 3)
4. Para seleccionar el alcance de riego, presione hacia abajo el seguro de ajuste de distancia (3) y gire la perilla de selección (4), de acuerdo a los indicadores MIN y MAX. (Imagen 2)

Presión de trabajo mínima:  
2 niveles de edificación  
10 PSI (68.95 kPa)  
Presión de trabajo máxima:  
equipo hidroneumático  
50 PSI (344.74 kPa)  
Nota: Se consideró una altura promedio de 2.5 m por nivel de edificación.

**Instructions:**

1. For full circle operation flip the lever to up position (1).
2. For partial circle operation flip lever to down position.
3. Adjust each notch (2) so that the metal clip limits the watering to the desired area. (Image 3)
4. For setting the area coverage, push down the adjustment distance lock (3) and turn the setting dial (4) according to the MIN and MAX indicators. (Image 2)

