

INSTRUCTIVE

FRONT

BACK



Extractores de aire industriales

Instructivo

Este instructivo aplica para los siguientes modelos:

Modelo	Tensión	Frecuencia	Potencia	Decibeles	Flujo de aire	Velocidad	Consumo de energía
EXA-101	127 V-	60 Hz	38 W	58 dB	750 m³/h	1300 r/min	912 Wh/día
EXA-121			42 W	65 dB	900 m³/h	1250 r/min	1 008 Wh/día

El cable de alimentación tiene sujeta-cables tipo: Y

LEA ESTAS INSTRUCCIONES ANTES DE INSTALAR:

APLICACIONES

Se puede instalar en paredes y ventanas. Sirve para eliminar polvo, humedad y olores. Con su gran diseño, se puede instalar con facilidad.

INSTRUCCIONES


1. El extractor de aire se debe instalar por personal calificado, a una altura de 2.3 m por encima del piso.
2. El tomacorriente se debe instalar según las normas locales.
3. Conectar los cables acorde al diagrama de instalación.
4. Mantener alejado del fuego y sitios calientes.
5. En caso de que el cable eléctrico tenga ruptura lo debe cambiar personal calificado.
6. El uso del extractor de aire debe ser supervisado por adultos.
7. No permitir que los niños jueguen con el extractor de aire.
8. No debe instalarse en ambientes donde existan materiales explosivos.
9. Después de conectar el extractor de aire confirme que no se emitan ruidos y olores extraños. En este caso, apague la unidad y haga que lo reparen.

INSTALACIÓN

- Desconecte el suministro eléctrico.
 - Realice un orificio en la pared acorde al área del extractor.
 - Retire la cubierta y desmonte las aspas del extractor.
 - Si usa pijas para fijar el extractor, marque con un lápiz los orificios de la base del extractor.
- Barrene acorde al diámetro del taquete, posteriormente fije firmemente y coloque la cubierta. Si utiliza el método de rin de presión, después de hacer el orificio, asegúrese de que esté bien fijado, si es necesario agregue algún pegamento como silicón o resina.

Volteck® pone su disposición su línea de extractores industriales

Modelo	Dimensiones del producto (cm)				Área de perforación para instalar (cm)	Área (m²)
	A	B	C	D	E	
EXA-101	34	34	12.5	8.5	30 x 30	35
EXA-121	39	39	12.5	8.5	35 x 35	45

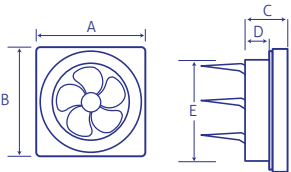


MANTENIMIENTO

- Limpie con regularidad.
- Desconecte el suministro eléctrico antes de limpiar. No utilice agua caliente sobre 60 °C


Clase de aislamiento: Clase I
Clase de aislamiento de los devanados del motor: Clase A

ADVERTENCIA Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio Autorizado **TRUPER** con el fin de evitar algún riesgo de descarga o accidente considerable.

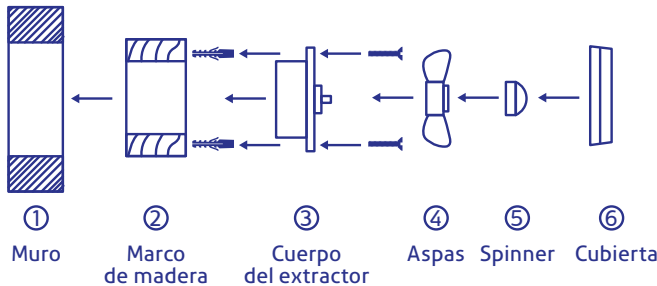

DIAGRAMA

AVISO Para conectar y desconectar el extractor se recomienda colocar un interruptor (no incluido)

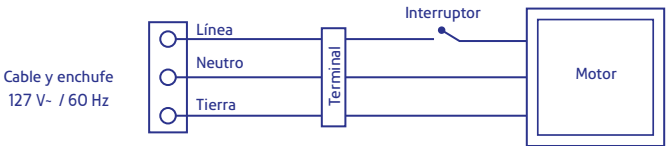

Importado por **Truper, S.A. de C.V.** Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257
Hecho en China, Tel.: 76 1782 9100. www.truper.com
07-2022



Industrial exhaust fans

Instructive

This instruction applies to the following models:

Model	Tension	Frequency	Power	Decibels	Air flow	Speed	Energy consumption
EXA-101	127 V-	60 Hz	38 W	58 dB	750 m³/h	1300 r/min	912 Wh/day
EXA-121			42 W	65 dB	900 m³/h	1250 r/min	1 008 Wh/day

The power cable has cable ties type: Y

READ THESE INSTRUCTIONS BEFORE INSTALLING:

APPLICATIONS

It can be installed on walls and windows. It serves to remove dust, moisture and odors. With its great design, it can be installed with ease.

INSTRUCTIONS


1. The exhaust fan must be installed by qualified personnel, at a height of 2.3m above the floor.
2. The outlet must be installed according to local regulations.
3. Connect the wires according to the installation diagram.
4. Keep away from fire and hot places.
5. In the event that the electrical cable breaks, it must be replaced by qualified personnel.
6. The use of the exhaust fan must be supervised by adults.
7. Do not allow children to play with the exhaust fan.
8. It should not be installed in environments where there are explosive materials.
9. After connecting the exhaust fan, confirm that no strange noises and odors are emitted. In this case, turn off the unit and have it repaired.

INSTALLATION

- Disconnect the power supply.
 - Make a hole in the wall according to the diameter of the extractor.
 - Remove the cover and remove the extractor blades.
 - If you use screws to fix the extractor, mark the holes in the base of the extractor with a pencil.
- Drill according to the diameter of the anchor, then fix firmly and place the cover. If you use the pressure rim method, after making the hole, make sure it is well fixed, if necessary add some glue such as silicone or resin.

Volteck® puts at your disposal its line of industrial exhaust

Model	Product dimensions (cm)				Area of drilling for install (cm)	Area (m²)
	A	B	C	D	E	
EXA-101	34	34	12.5	8.5	30 x 30	35
EXA-121	39	39	12.5	8.5	35 x 35	45

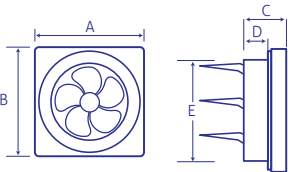


MAINTENANCE

- Clean regularly.
- Disconnect the power supply before cleaning. Do not use hot water over 60 °C


Insulation class: Class I
Insulation class of the motor windings: Class A

WARNING If the power cable is damaged, it must be replaced by the manufacturer or Authorized Service Center **TRUPER** in order to avoid any risk of shock or considerable accident.

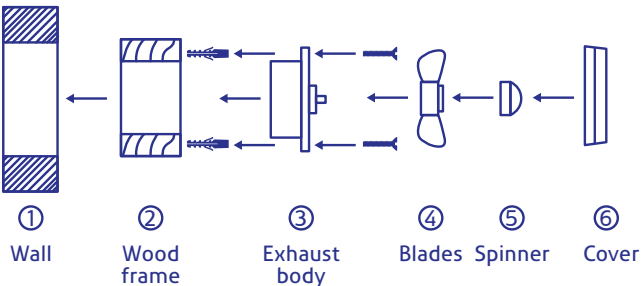

DIAGRAM

NOTICE To connect and disconnect the extractor it is recommended to place a switch (not included)

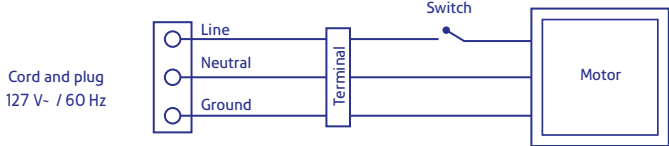

Imported by **Truper, S.A. de C.V.** Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257
Made in China, Tel.: 76 1782 9100. www.truper.com
07-2022

IMPORTANT:
INSTRUCTIVE MUST BE PRINTED ON REGULAR
PAPER IN PANTONE BLUE 072 C INK.

TECHNICAL DATA

Packaging: **Instructive**

Dimensions: **14 X 20 cm**

PANTONE Blue 072 C

INKS & die cuts

CUT-LINE
(Do not print)

IMAGES / LINKS

ARTWORK SET
Confidential Information
TRUPER®

SOFTWARE: Illustrator CC
MAC & PC Platform compatible



Fold the instructive
sheet and put it
inside the color box.

Instructive