

**Organizador para baño, 3 repisas**


**47907**  
OWC-3

**Incluye**


2 bases tubulares inferiores, 2 bases tubulares superiores, 2 bandejas chicas, 1 bandeja grande, 7 barras  
1 juego de accesorios y tornillería: 5 ganchos, 1 barra corta, 4 niveladores de piso, 4 tiras adhesivas, 2 topes de pared, 2 pares de tapones, 15 tornillos y 1 llave hexagonal

**Antes de instalar, lea las siguientes instrucciones.**


1. Inserte la base superior a la base inferior y el tapón de la base superior para completar ambos lados como se muestra en la figura.

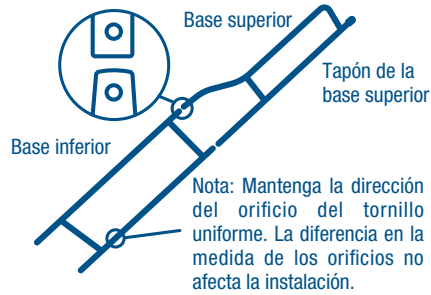

3. Repita el paso 2 para todas las barras transversales.

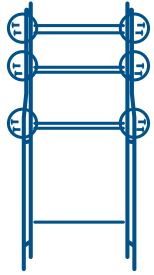


5. Tome la bandeja grande y las bandejas pequeñas y ensamble como se muestra en la figura.

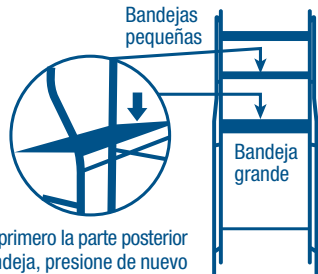


Asegure primero la parte posterior de la bandeja, presione de nuevo para asegurarla a la barra frontal.


2. Alinee la barra transversal y ensamble con un par de tornillos como se muestra en la figura.

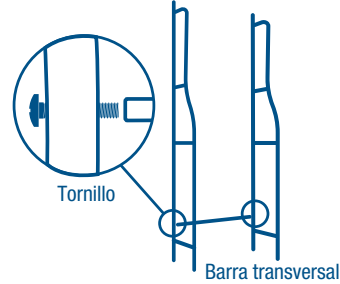

4. Tome la tuerca del nivelador de piso y presione en el agujero del tubo de la base inferior. Coloque el tornillo nivelador y atorníllelo, móntelo como se muestra en la figura.

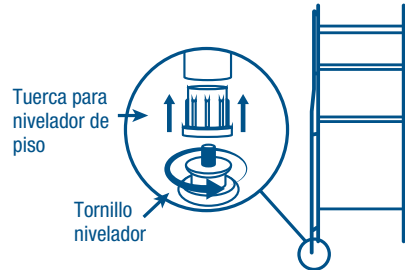

6. Monte los topes de pared y las tiras adhesivas 3M para fijar el organizador a la pared.

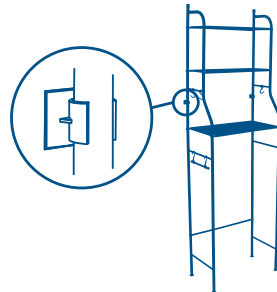

**Bathroom organizer, 3 shelves**


**47907**  
OWC-3

**It includes**


2 lower tubular bases, 2 upper tubular bases, 2 small trays, 1 large tray, 7 bars  
1 set of accessories and hardware: 5 hooks, 1 short bar, 4 floor levelers, 4 adhesive strips, 2 wall bumpers, 2 pairs of plugs, 15 screws and 1 hex key

**Before install, please read the following instructions.**


1. Insert the upper base to the lower base and the upper base cap to complete both sides as shown in the figure.

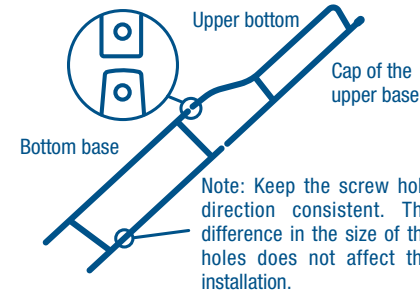

3. Repeat step 2 for all crossbars.

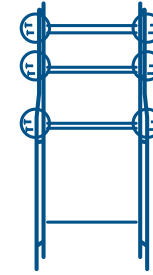


5. Take the large tray and the small trays and assemble as shown in the figure.

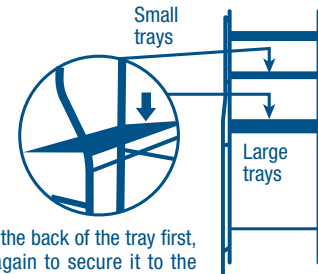


Secure the back of the tray first, press again to secure it to the front bar.

2. Align the cross bar and assemble with a pair of screws as shown in the figure.

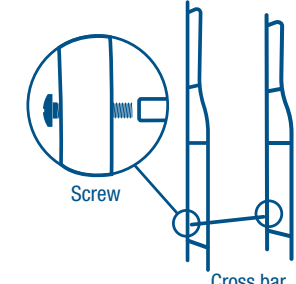

4. Take the nut on the floor leveler and press into the hole in the lower base tube. Position the leveling screw and screw it in, mount it as shown in the figure.

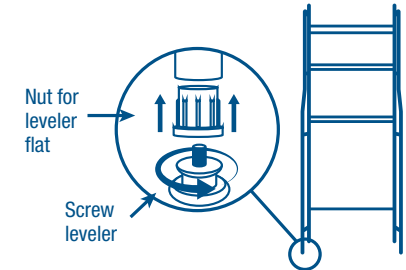

6. Assemble the wall bumpers and 3M adhesive strips to fix the organizer to the wall.

