

- El protector facial, evita lesiones, protege contra partículas extrañas, polvo, calor y es resistente al impacto
- Con acojinamiento interno para un buen ajuste en el frente
- Máxima protección para el rostro con excelente visibilidad
- Cuerpo fabricado en polipropileno y mica elaborada en policarbonato
- Ligera y confortable

Instrucciones:

- Desatornille las tuercas laterales de ajuste. (Fig. 1)
- Sin remover el tornillo de ajuste ensamble la mica y fije la tuerca. Verifique que la mica no quede separada de la visera. (Fig. 2)
- Colóquese el protector y tire de la cinta elástica hasta obtener un ajuste apropiado (Fig. 3)

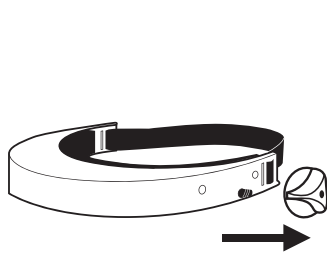


Fig. 1

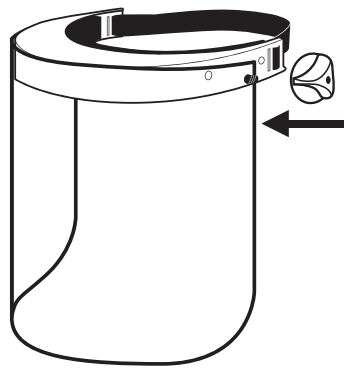


Fig. 2

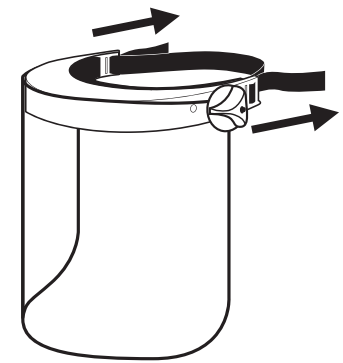


Fig. 3

⚠ IMPORTANTE

Puede provocar severos daños contra la salud del usuario, si no se toman en cuenta las limitaciones, precauciones, forma de uso y mantenimiento que aquí se indican.

⚠ ADVERTENCIA

- La mica del protector facial no es irrompible, no le protegerá contra impactos muy fuertes, explosiones o líquidos corrosivos.
- Las rayaduras en la mica reducen seriamente la visibilidad y la protección, reemplazarla inmediatamente.
- No protege contra salpicaduras de metal fundido, sólidos calientes o un peligro eléctrico.
- Este protector facial no proporciona protección ilimitada.
- Con este dispositivo se debe llevar los lentes o gafas adecuadas donde el peligro existe

MANTENIMIENTO

Revise periódicamente las condiciones de su protector facial. Es recomendable su limpieza esporádicamente. El protector y sus componentes deben ser lavados sumergiéndolos en agua, frotándolos con un cepillo suave (excepto el visor). Debe utilizarse un detergente neutro. No utilizar solventes para limpiar. Evite el perforado del protector facial y deséchela cuando la visibilidad no sea óptima.

- The face shield eliminates forehead injury, provides protection against foreign particles, dust, heat and is impact resistant
- With internal cushion an excellent fit
- Maximum face protection with excellent visibility
- Polypropylene body with polycarbonate visor
- Lightweight and comfortable

Instructions:

- Unscrew the side adjusting nuts. (Fig.1)
- Without removing the adjusting screw assembly and tighten the nut. Verify that the visor does not become separated from the shield. (Fig. 2)
- Place the shield and pull the headband to obtain a proper fit (Fig. 3)

⚠ IMPORTANT

Risk of serious health injury if limitations, warnings, instructions and maintenance are not considered.

⚠ WARNING

- The clear visor is not break-proof. It does not protect against strong impacts, explosions or corrosive liquids.
- Scratches on the visor greatly reduce visibility and protection. Replace then immediately.
- It does not protect against molten metal splash, hot solids or electrical hazard.
- This face shield does not provides unlimited protection.
- With this device appropriate glasses or lenses should be worn where danger exists.

MAINTENANCE

The face shield should be checked periodically. The face shield and its components should be cleaned with water and neutral soap. Rub with a soft brush (except the clear visor). Do not use solvents. Avoid puncturing the face shield.