


Manual

Reversible Air Drill

1/2"
Chuck

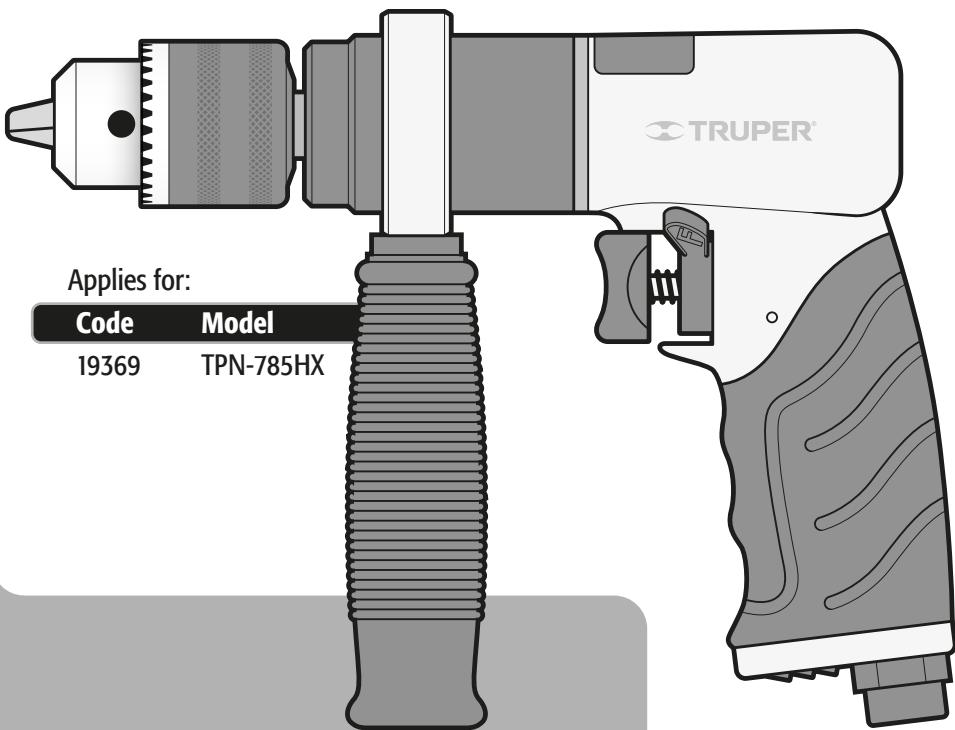

Applies for:

Code	Model
19369	TPN-785HX

TPN-785HX



WARNING

Use oil continuously and
dosed to lubricate the tool.



CAUTION



Read this manual thoroughly
before using the tool.




Technical Data	3
Filtering and Lubrication Requirements	3
 General Safety Warnings for Pneumatic Tools	4
 Risk control when using pneumatic tools	5
Parts	7
Assembly	7
Star Up	8
Maintenance	8
Authorized Service Centers	9
Warranty Policy	10

⚠ CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

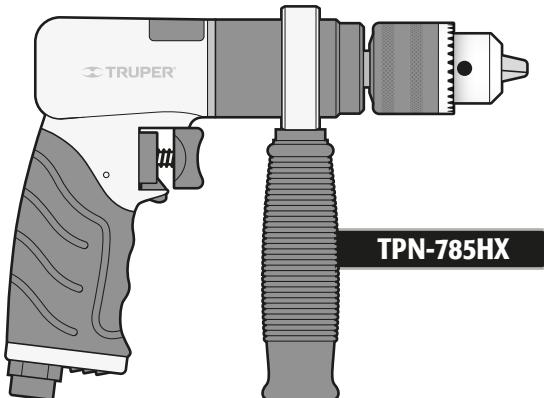

TPN-785HX

Code	•	19369
Description	•	Reversible air drill
Chuck	•	1/2"
Air Output	•	Bottom
Noise Level	•	83 dB
Vibration	•	< 2.5 m/s ²
Free Speed	•	800 RPM
Weight Without Accessories	•	3 lb
Total Length	•	8-1/4"
Air Pressure	•	90 PSI
Air Consumption	•	4 CFM
Air Input Connection	•	1/4 NPT
Hose Minimum Recommended Diameter	•	3/8"


CAUTION Please consider the increase in pressure in the line or the hose inside diameter to compensate the use of too long hoses (more than 26 ft). The hose minimum inside diameter shall be 3/8" and the connectors shall be 1/4 NPT. Use the right size and good quality couplers and accessories.

Filtering and Lubrication Requirements

CAUTION Dust, water and lack of oil specific for pneumatic tools are the main cause of potential flaws with the tool. We recommend installing a **TRUPER®** Brand **UNI-LL-1/4** centralized filter-oil feeder system. This system assures lubrication reducing 80% oil consumption significantly increasing the breathing air quality for the operator.

- The filter-oil feeder system must be regulated to administer 3 to 6 drops per minute.
- Drain the water in the air compressor tank and also condensation in the hoses before using the tool.

Consult the air compressor instructions.

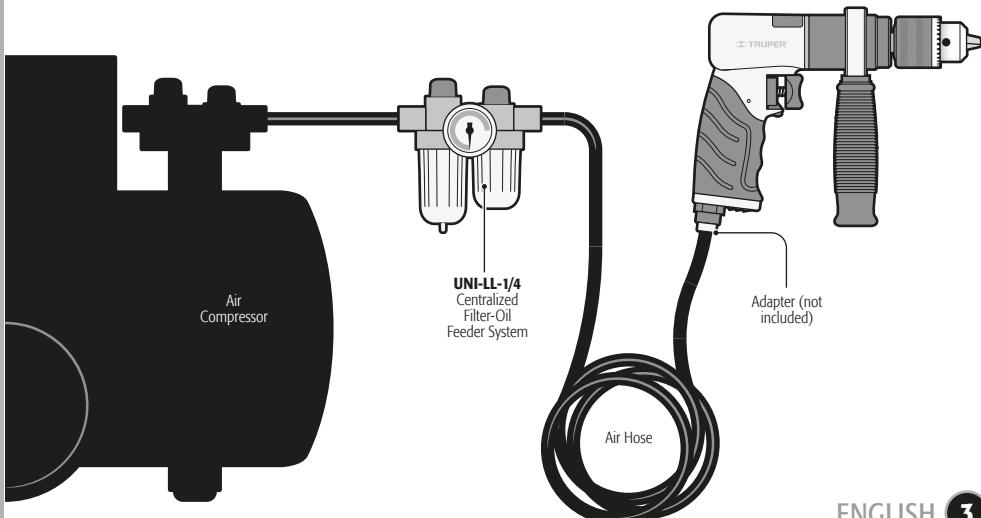

Keep your work area clean, tidy and well lit.

CAUTION Cluttered and dark areas may cause accidents.

Never use the tool in explosive areas or in the presence of flammable liquids or with no ventilation.

DANGER Sparks the tool generates could trigger an explosion or start a fire.

Keep children and passersby at a safe distance while operating the tool.

WARNING Distractions can cause losing control and cause accidents.

Avoid making contact with power lines and circuits.

DANGER Find and avoid power lines and circuits, especially hidden wiring as well as any grounded object.

Stay alert, use care and common sense.

CAUTION Familiarity with the tool operation could lead to distractions while using it. It could cause accidents.

Refrain from using the tool if tired or under the influence of drugs, alcohol or medication.

DANGER Being momentarily distracted while using the tool could cause severe personal injury.

Operate the tool with guards and protection devices in place and in good working condition.

WARNING Failure to comply with this warning is a hazard of severe personal injury.

Securely fasten and support the work piece.

CAUTION Use brackets and a stable work surface.

Never force the tool.

CAUTION Working within the tool's working design assures a better and safer job.

Keep the tool in a safe place and out of the reach of children.

WARNING Power tools are dangerous to inexperienced people.

Wear proper clothes.

WARNING Loose clothes, jewelry or long hair could get caught in the mobile parts.

Keep hands away from rotating and/or mobile parts.

WARNING Failure to comply with this warning is a hazard of severe personal injuries or crushing.

Wear adequate protective safety accessories.

CAUTION Wear eye protection, dust mask, non-skid safety shoes, helmet and ear plugs. In normal conditions, the risk of injury is reduced.

Unplug the air hose from the tool before carrying out maintenance or replacing accessories.

WARNING Prevent accidental startups that cause accidents.

Refrain from operating the tool if the switch is not working or is not properly assembled.

WARNING Failure to comply with this warning is a hazard of personal injury. Immediately send it to a **TRUPER®** Authorized Service Center.

Do not overreach.

CAUTION Good balance and support lead to better controlling the tool in unexpected situations.

Never pull the air hose.

WARNING Do not use it to carry or unplug the tool from the air outlet. Damaged or tangled hoses may burst and project residues towards the operator.

Prevent unintentionally starting the tool.

WARNING Double-check the motor is OFF before lubricating, setting up accessories or carry out maintenance.

Remove brackets before turning on the tool.

DANGER Additional tools or vices installed in a rotating part could cause severe personal injury.

Double-check maintenance and good working conditions before using the tool.

CAUTION Carefully check mobile parts, alignment and assembly. Do it periodically. Look for any damaged element or parts not working properly. Repair immediately in a **TRUPER®** Authorized Service Center.

Accessories.

CAUTION Use only accessories or spare parts indicated in this Manual or certified by **TRUPER®**.

Never leave a running tool unattended.

CAUTION Turn off and disconnect tool after using. Set it in a safe position to avoid severe injury.

Risk Control When Using Pneumatic Tools



Risk of injury in head and eyes



⚠ WARNING • Compressed air out of pneumatic equipment may be dangerous. Objects like brackets, burrs, splinters, dust and other residues may be impelled towards head and eyes due to high speed of the air flow. The air flow itself can only injure soft tissue such as eyes, ears, etc.

⚠ CAUTION • The tool attachments may get lose or break and project particles towards the operator or other operators in the work area.

To prevent head and eyes injuries

- Always, when operating pneumatic equipment wear protection glasses in compliance with the ANSI Z87.1 Standard. As additional protection, wear a mask.
- Never aim the air flow towards people or animals.
- Disconnect the air hose from the tool when not in use.
- Never set a tool unattended when connected to the air outlet.
- Before using the tool verify all the parts and accessories are perfectly secured.



Risk of explosion



⚠ WARNING • Incorrect handling of pressure in pneumatic equipment may cause an explosion causing severe injuries.

To prevent explosions

- Before using the tool double check the compressed air source is regulated to the tool specified pressure and must not exceed 1 380 kPa (200 PSI).

Risk of hearing loss



⚠ WARNING • Being exposed long periods of time to noise pneumatic tools produce may damage hearing permanently causing hearing loss.

To prevent hearing loss



- Always, when operating pneumatic equipment wear hearing protection in compliance with the ANSI S3.19 Standard

Risk of inhaling particles



⚠ WARNING • Abrasive tools like grinders, sanders and cutting tools generate dust and particles that damage the lungs and respiratory system.

- Some materials like resin or adhesive are made with chemicals and the vapors emitted may cause serious damage if the operator is exposed for long periods of time.

To prevent inhaling particles



- Always wear a face mask or breathing device when operating these types of tools.
- Always work in a clean, well ventilated area.

Risk of electric shock



⚠ WARNING • Pneumatic tools do not have electric insulation. If during the operation, the tool makes contact with a source of electricity, the energy will be conducted to the operator causing a fatal electrocution.

To prevent electric shock

- Never use pneumatic tools to work energized electric wiring.
- Before operating the tool find the possible hidden wiring in the work zone to prevent making contact.
- Avoid contact with grounded surfaces like pipes, radiators or refrigerators. The risk of electrocution increases if the operator's body gets grounded.

Risk of damaging the tool



⚠ WARNING • Pneumatic tools forced beyond the capacity and lacking of adequate lubrication or used to loosen rusted nuts (with impact guns) will get damaged and make the Warranty void.

To prevent damaging the tool

- Keep the tool duly lubricated.
- Do not force the tool.
- Apply "loose it all" liquid to rusted nuts or lugs before trying to loosen with the tool (impact gun).

Risk of injuries

WARNING • Damaged hoses may burst and cause serious injuries or deafness.

• Pneumatic tools connected to the compressed air source, if operated by untrained staff or underage people, will cause severe injuries.

• The compressed air used in pneumatic equipment may be dangerous. Objects like vices, burrs, splinters, dust and other residues may be impelled by the high-speed air flow towards the operator or other people in the work area.

• Using inflation nozzles to clean or torch blowing may cause severe injuries.

• Tools and accessories not suitable, damaged or low quality like grinding discs, chisels, contacts, drills, brad nailer, staplers, etc., may shoot out during the operation and project particles causing severe injuries.

• Brackets may get lose and be projected causing severe injuries or damage to property.

• Tools that accidentally start may cause severe injuries.

• Tools and accessories with no maintenance may cause severe injuries.

• Tools using accessories without  **TRUPER®** certification may cause severe injuries.

• Damaged or banged tools may cause severe injuries.



To prevent injuries

- Do not abuse the hose or the connectors.
- Keep the hose away from sharp or abrasive edges.
- Unplug the hose when setting up accessories like grinding discs or bits.
- Never use the hose to carry the tool.
- Never pull the hose to unplug it.
- Do not expose the hose to heat, oil or solvents.
- Before operating the tool, verify the hoses are not damaged.

• Unplug the air hose when the tool is not in use. Store the tool in a safe place away from children or untrained people. Keep children and untrained people away from the work area.

• Keep the work area clean, tidy and with good lighting.
• Remove any wrench or plier form the tool before operating.

• Do not use inflation nozzles to clean or to torch blowing.

• Use only parts, vices and accessories recommended by  **TRUPER®**.


• Double check all connections are correctly installed.

• Never carry the tool by the trigger.
• Disconnect the air hose out from the tool when not in use.
• Never leave the tool unattended when connected to the air outlet.

• Keep the tool handle clean and dry, free of oil or grease.
• Keep tools clean. A meticulously cleaned and oiled tool delivers a more effective performance and is easier to control.
• Any type of repair can only be carried out in a  **TRUPER®** Authorized Service Center.

• Use always accessories matching the tool speed.
• Use only  **TRUPER®** certified accessories.


• Do not use damaged or banged tools.

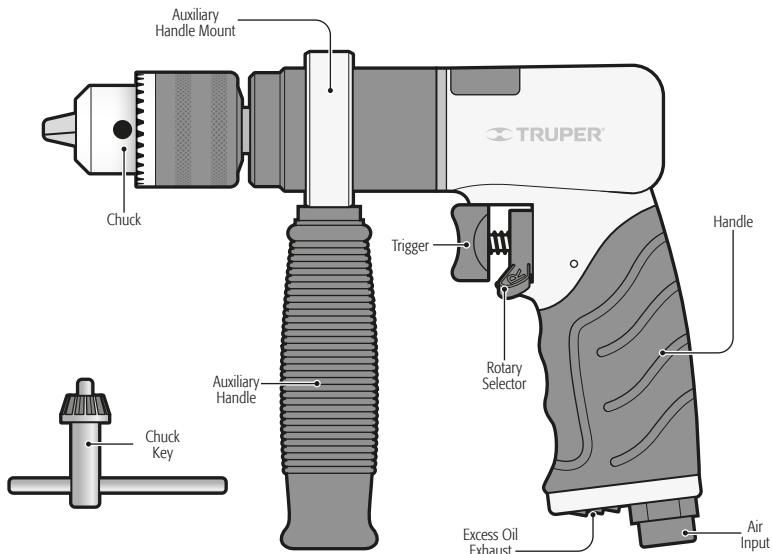

Assembly


Auxiliary Handle Set Up

1. Screw the auxiliary handle to the mount by turning it just a little.
2. Insert the drill head through the auxiliary handle mount.
3. Rotate the auxiliary handle together with its mount until is set up in an adequate position to operate the tool.
4. Turn the auxiliary handle to tighten the mount firmly into the drill head and prevent from moving.

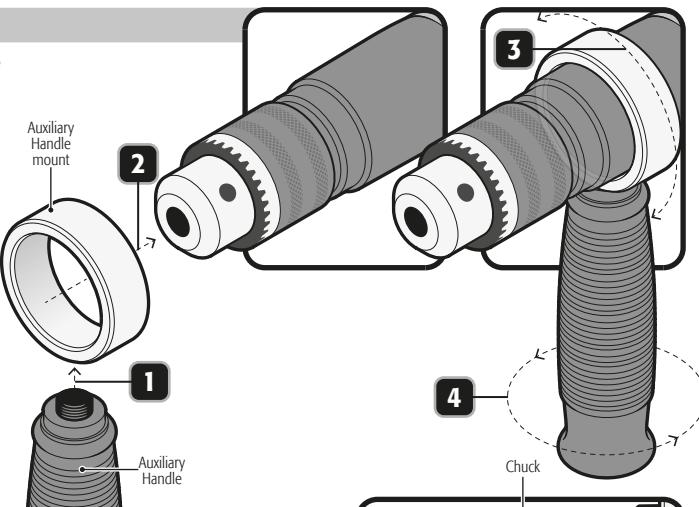

Bit Installation

- Set the bit into the chuck until it stops. Secure it with the chuck key tightening the chuck in each one of the orifices alternately.

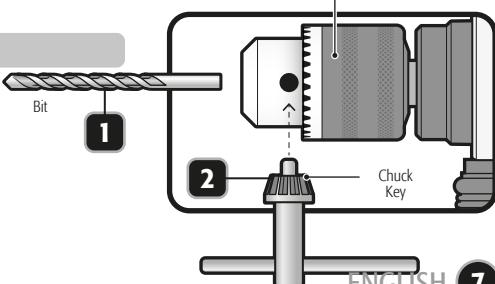

Air intake connection

- Remove the plastic cap that covers the air inlet at the base of the handle.
- Connect the air hose to the tool using an adapter (not included) by screwing the adapter into the tool's air inlet.
- If working with different pneumatic tools and only one compressor, it is recommended to use a quick coupling (not included) together with the adapter to connect and disconnect the tools and interchange them easily.

Turning On

- Turn ON the compressor and let it fill up.
- Regulate the air compressor output pressure from 90 PSI – 115 PSI.

WARNING The tool operates at this pressure range. Operating in the higher-pressure range will result in a shorter tool life.




- Press the trigger to make the chuck rotate.
- Release the trigger to stop the chuck.

Rotation Direction

- So that the drill bit rotates forward and can drill, move the rotation selector upwards into the "F" Forward direction (A).
- To rotate in reverse, move the rotation selector downwards into the "R" Reverse position (B).

Operation

- Locate the point to be drilled and mark it with a punch to give better support to the drill.
- Place the drill bit on the mark you made with the punch and press the trigger. Do not make contact with the point to be drilled with the moving drill. Do not press the trigger unless the tool is making contact with the work piece.
- Apply firm and constant pressure while drilling. Do not force the tool, otherwise it can get damaged.
- If making deep perforations retrieve the bit regularly to remove residues.

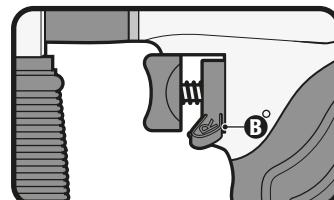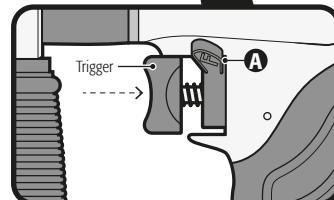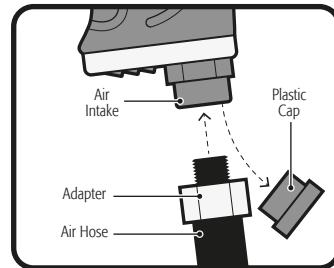

Maintenance

Lubrication

Pneumatic tools need constant lubrication along their useful life and during the operation. The compressed air needed in the tool to run carry humidity which could oxidize the motor and bearing in the tool. To prevent this possibility, it is necessary to constantly deliver lubricating oil through a **TRUPER**® Brand **UNI-LL-1/4** centralized filter-oiler system installed between the air compressor and the tool.

WARNING • Any excess of oil in the motor is immediately expelled through the exceeding oil escape. Keep the escape free of obstructions and never point it towards people or objects.

- If not using the tool for long periods of time, it shall need to be lubricated with care.
- After 60 hours' operation, the tool mechanism need a little greasing. Excessive grease may diminish power.

Service

• Servicing the tool shall be carried out every 3 months only in a **TRUPER**® Authorized Service Center. Service and maintenance carried out by not certified people may be dangerous and can cause severe personal injuries as well as making the product Warranty void.

- Malfunction in the tool caused by not using the recommended dose of lubrication, or not complying with this Instructions, or repairs carried out by people not certified by **TRUPER**® will not be covered with the Warranty. We reserve the right to carry out technical improvements without notice.

Authorized Service Centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-8737** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. CREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCRASAL TIJUANA AV. LA ENCANTADA, LÓTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 152 1115	NUEVO LEÓN	SUCRASAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUTXEPIC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCRASAL PUEBLA AV PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUATLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRASAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREDOR, CORREDOR # 22, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL.: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCRASAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 6823	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 352 1986 / 352 8013	SINALOA	SUCRASAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCRASAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL.: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCRASAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 995 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAVAL, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA S/N, HORTENSIA S/N, COL. PRIMAVERA C.P. 93508, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRASAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCRASAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MERIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #5140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code

19369

Model

TPN-785HX

Brand **TRUPER®**

This product is guaranteed for 2 years. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in www.truper.com . Transportation costs resulting from compliance of this warranty will be covered by 

For questions or comments, call **800-690-6990**. Made in Taiwan. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date: