


Manual

Vertical lubricated air compressor

116 PSI
Pressure

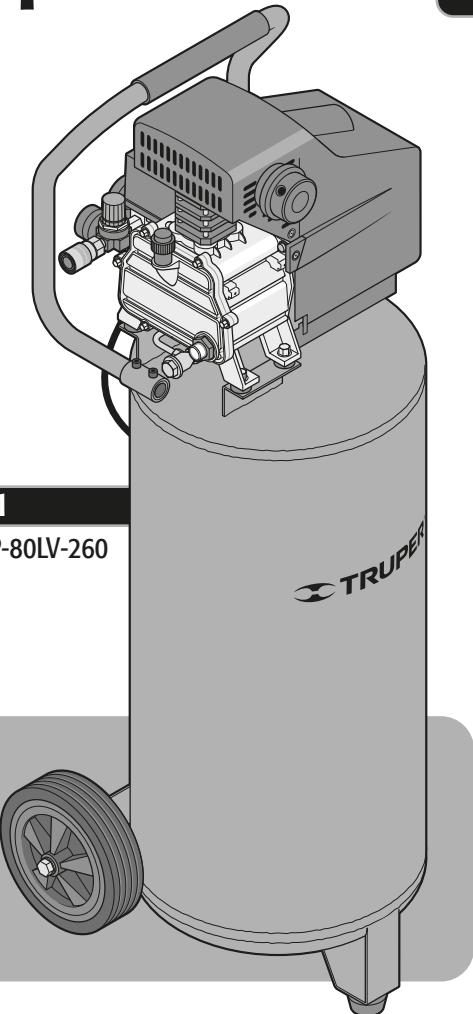

Applies for:

Code	Model
102116	COMP-80LV-260

CAUTION



Read the user's manual thoroughly
before operating this tool.




Technical Data	3
Power Requirements	3
 General Power Tool Safety Warnings	4
 Safety Warnings for the use of pneumatic compressors	5
Parts	6
Preparation	7
Start Up	8
Maintenance	9
Troubleshooting	10
Authorized Service Centers	11
Warranty Policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

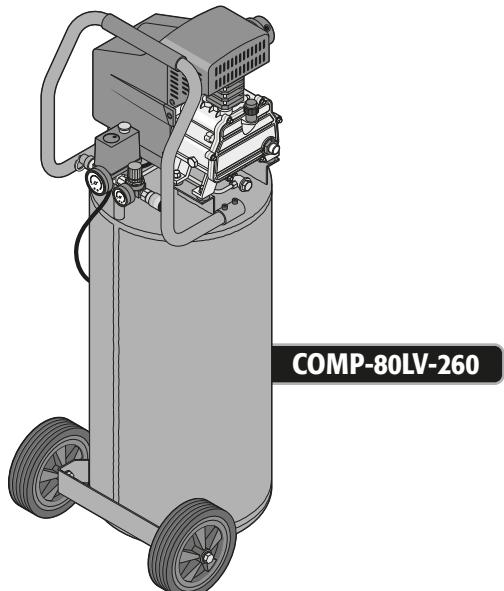

Technical specifications

 TRUPER®

COMP-80LV-260

Code	•	102116
Description	•	Vertical lubricated air compressor
Voltage	•	220 V~
Engine power	•	Nominal: 2- 1/2 Hp Maximum: 3-1/2 Hp
Frequency	•	60 Hz
Maximum pressure	•	116 PSI
Continuous air flow	•	4.4 CFM - 40 PSI 3.4 CFM - 90 PSI
Tank capacity	•	20 gal
Conductors	•	H05VV-E 3G1.5mm ²
Insulation	•	Class I

The power cable has cable clamps type: Y

The construction class of the tool is: Basic insulation.

The thermal insulation class of the motor windings is: Class B


WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a  TRUPER® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power Requirements

WARNING In the event of faults or malfunctions, grounding provides a path of least resistance for electric current, reducing the risk of electric shock. This tool is equipped with an electrical cord that has a grounding conductor and a grounding plug. The plug must be connected to an outlet that is installed and grounded in accordance with all local codes.

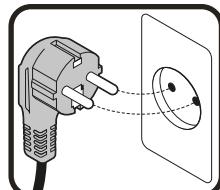

CAUTION The use of electrical extensions for compressors is not recommended, as they cause overvoltage, loss of motor power and overheating. Instead of using an extension, increase the compressor's range of action by connecting a longer length of hose to the outlet. Connect additional lengths of hose as required. Likewise, in case you need to use a pneumatic tool outdoors in humid environments or even rain, you can operate the compressor from inside sheltered from humidity and operate the pneumatic tool connected to the compressor by the additional hose lengths without risk of electric shock.

- In case of connecting the compressor to a fuse-protected circuit, use Type "D" time-delay fuses.



⚠️ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. Save all warnings and instructions for future references.

Work area**Keep your work area clean, and well lit.**

Cluttered and dark areas may cause accidents.

**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

Sparks generated by power tools may ignite the flammable material.

**Keep children and bystanders at a safe distance while operating the tool.**

Distractions may cause loss of control.

**Electrical Safety****The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.

**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety**Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.

**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

**Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.**

Loose clothes or long hair may get caught in moving parts.

**If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.**

Using these devices reduce dust-related risks.

Power Tools Use and Care**Do not force the tool. Use the adequate tool for your application.**

The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

**Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.**

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.

**Keep the cutting accessories sharp and clean.**

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service**Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.

**Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.**

Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



Safety Warnings for Pneumatic Compressors



Before using the compressor

⚠ CAUTION • The pressurestat produces sparks when working. If sparks make contact with gasoline vapors or other solvents they can ignite causing fire or explosion. Always operate the compressor in a properly ventilated area. Do not operate in closed spaces. Do not smoke while spraying. Do not spray in flammable environments. Keep the compressor as far away as possible from the spraying area.

⚠ CAUTION • Solvents like trichlorethane and methylene chloride can suffer a chemical reaction with the aluminum used in the spraying guns, paint pumps, etc., and can cause an explosion. If using these solvents use only stainless steel spraying materials. This will not affect the air compressor but can have an effect on the equipment being used.

⚠ DANGER • For no reason at all carry out soldering jobs in the air compressor tank. It creates an extremely dangerous condition. Carrying soldering jobs in the tank will void the warranty.

⚠ DANGER • Never use the compressor outdoors when raining or onto wet surfaces. An electric shock can strike.

⚠ CAUTION • Check the maximum pressure specified by the manufacturer for pneumatic tools and accessories. The compressor's output pressure shall be regulated so that will never exceed the maximum specified pressure. • Save the labels and nameplates. On them there is important safety information. If the information on those labels cannot be read or is missing contact a

TRUPER® Authorized Service Center to get spares.

⚠ CAUTION • For no reason at all modify the pressurestat or the pressure release valve. Doing it makes the warranty void. Were adjusted in the factory to the maximum pressure for this unit.

⚠ CAUTION • Be sure you read all the labels in the paints or toxic materials you spray. Follow the safety instructions. Wear a breathing mask if there is any possibility to inhale the material being sprayed. Read the breathing mask instructions to double check it will provide the necessary protection.

⚠ CAUTION • Always wear safety glasses when using the air compressor.

• To allow an adequate cooling ventilation, the compressor shall be kept at a minimum 12" away from the nearest wall in a well-ventilated area.

• Environment temperature recommended to operate the compressor is from 32 °F a 95 °F

When using the compressor

⚠ CAUTION • Do not aim nozzles, sprayers or the air jet towards people or animals.

⚠ WARNING • Never inhale directly the compressed air produced by the air compressor. Is not suitable as breathing air.

⚠ WARNING • Do not adjust the regulator above the maximum pressure labeled in the accessory. Otherwise the compressor might burst.

• Operate the compressor in a leveled surface.
• Keep the compressor well ventilated. Do not cover it while in use.

⚠ CAUTION • The compressor gets hot while operating. Do not touch it or allow children get close while or immediately after is been used. Do not use it without the motor cover in place. Work as far away as possible from flammable objects or liquids.


• The air hose components may get hot while being used. Allow the components to cool down before disconnecting.
• Do not use the air hose to carry or move the compressor.
• Do not leave the compressor connected into the power supply when unattended for long periods of time. Disconnect the tool after using it.

• Using accessories not recommended by TRUPER® can result in personal injuries.
• High temperatures are produced under the compressor cover and there are also parts in movement. To prevent burns or other kind of injuries do not operate with the cover removed from its place. Allow the compressor parts to cool down before handling or servicing.
• Do not release any connections when the tank is under pressure.

After using the compressor

• Keep in mind the compressor starts automatically. Always turn off the compressor. Remove the plug from the power outlet, purge and release all the pressure from the system before servicing the compressor and when it is not in use.


• Drain humidity from the tank often. A dry and clean tank will help against corrosion.
• Pull the pressure release valve ring daily to ensure the valve works properly and to remove any obstruction.
• If transporting the compressor fasten it correctly. Release the tank pressure before carrying.
• Protect the air hose and power cable from damage or punctures. Inspect weekly to detect any weak or worn out points. Replace if necessary.

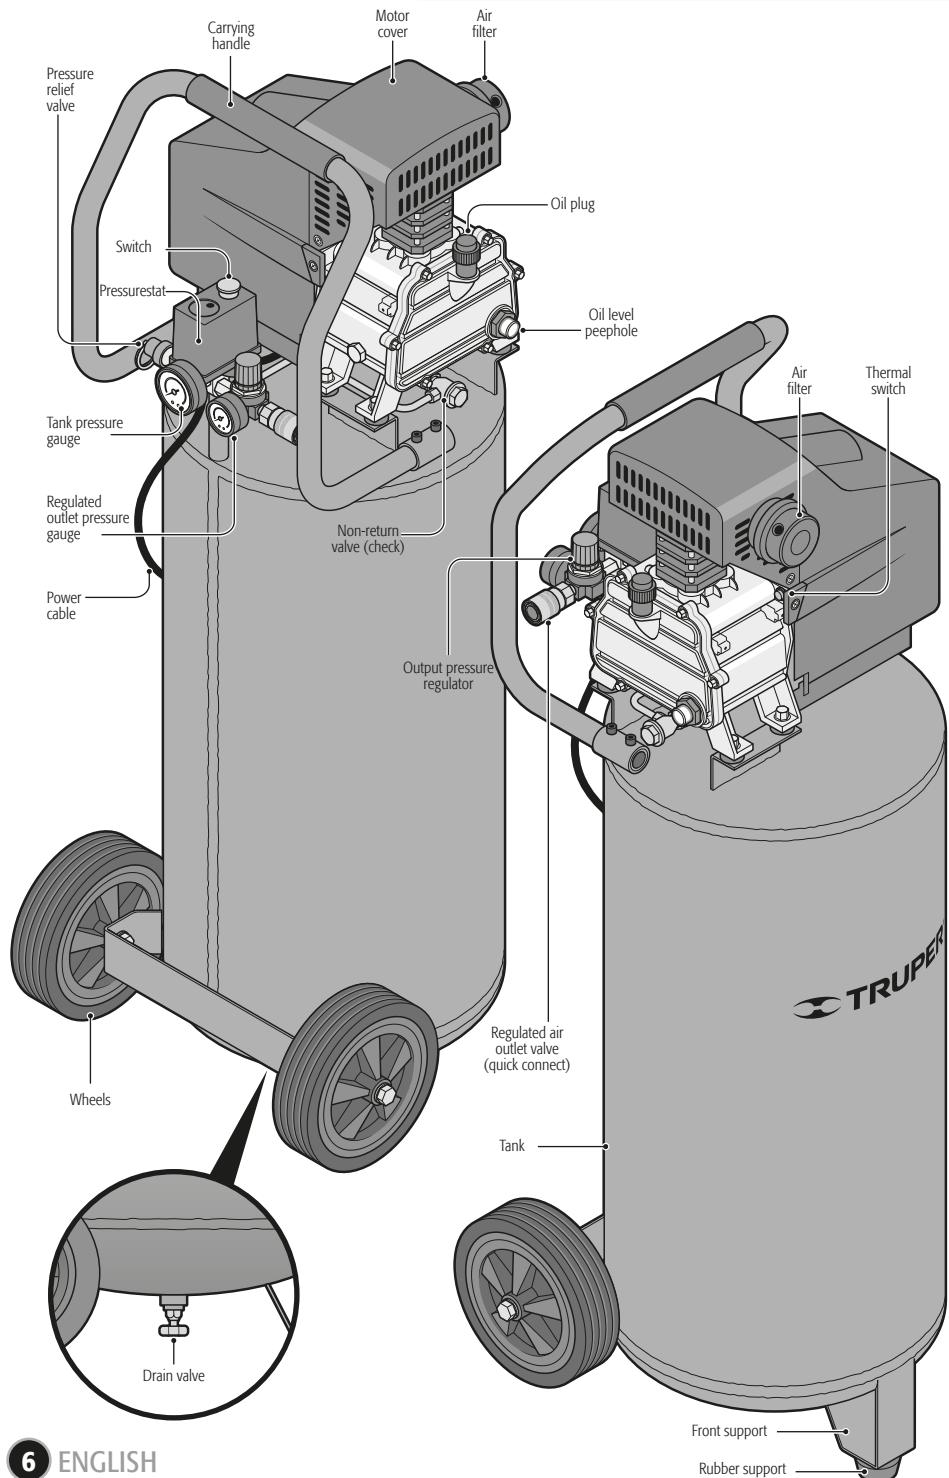

- The air compressor is used to power pneumatic tools, which are as versatile as electric tools, so they can be used for drilling, screwing, nailing, riveting, stapling, chiseling, polishing, blowtorching, cleaning, painting, etc.
- Operation of the compressor is fully automatic, controlled by its pressure switch, which stops the motor when the tank pressure reaches the maximum level and restarts when it drops below 551.6 kPa (80 PSI).
- The compressor must be connected to an outlet protected by a suitable differential switch (thermomagnetic).

Assembly

- Screw the air filter (A) to the side of the crankcase as shown in the picture.

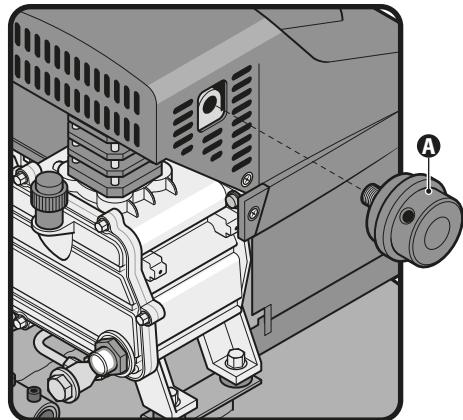


Oil

CAUTION • Replace the transport plug (B) with the working plug (B¹) included.

• Check the oil level window (C). If the oil level does not reach the middle point (red circle), remove the tank cap (B¹) and fill the tank with SAE-10W 30 compressor lubricating oil up to the indicated level.

CAUTION • Check the oil level before each use.



• Before starting to work, leave the compressor ON for several minutes with the air valve fully open to allow the lubricant to be properly distributed.

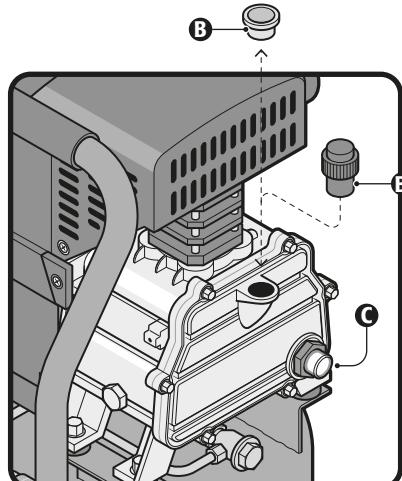

Switching ON and OFF

- Before operating the compressor, place it on a flat, level, solid surface with good ventilation and away from flammable objects, such as curtains, etc. Leave a space of at least 12" (30 cm) around the compressor for air circulation.
- Connect the plug to the power outlet. Make sure the cord does not become an obstacle to avoid tripping over or damaging it.
- Lift the switch (A) to turn on the compressor. The motor will start and fill the tank to its maximum pressure, then shut off automatically. It will start again when the pressure switch detects the pressure drop during the use of the compressor, to maintain the constant pressure, indicated on the pressure gauge (B).
- To turn off the compressor, press the switch, then release the air remaining in the tank by pulling the pressure release valve ring (C).

- CAUTION** • Never disconnect the compressor from the power supply to turn it off. If the power supply is accidentally cut off, do not forget to press the switch to shut down the compressor properly.
- The compressor has a thermal switch (D) that prevents the motor from overheating. The motor shuts off when the switch is activated. To reset the motor, press the thermal switch located on the side of the motor crankcase.

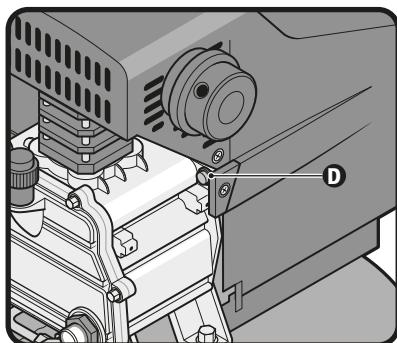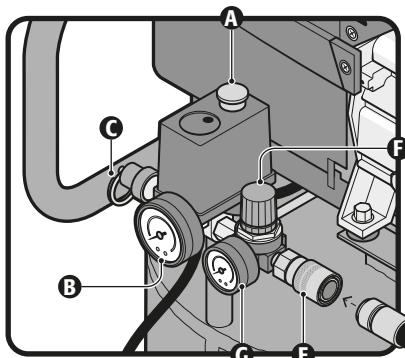

Operation


- Connect the end of the air hose to the compressor outlet (E).
- Connect the other end of the air hose to the inlet of the pneumatic tool (not included). Make sure the connections match each other.
- Adjust the air outlet pressure with the pressure regulator (F), turn the knob clockwise to increase the outlet pressure, turn it counterclockwise to decrease it until the desired pressure indicated on the outlet pressure gauge (G) is reached.

- CAUTION** • The pressure adjustment must be made with the regulated air outlet valve open.
- After connecting the compressor to the air line, run it under load at maximum pressure and make sure it is operating properly.
 - Check for leaks in the air line. Turn off the compressor to repair any detected leaks.

- CAUTION** • The motor and its housing can reach high temperatures. When working with the compressor avoid touching this area to prevent burns.




Oil change

- After the first 50 hours of operation, change the oil by removing the drain plug (**A**). Reinstall the plug and fill the oil tank as instructed on page 7. Subsequent oil changes should be performed every 150 hours of operation.

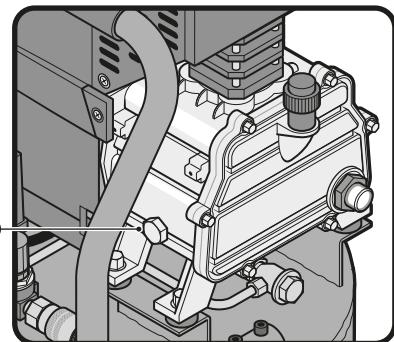


Cleaning and care

- Always keep the vents clean and free of obstructions to ensure proper cooling of the motor.
- Regularly inspect all mounting bolts and make sure they are tightened properly. If any of the screws are loose, tighten them immediately.
- Once a week open and clean the inside of the air filter (**B**) with compressed air. Replace the filter cartridge (**b**) after 50 operating hours.

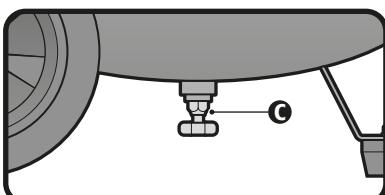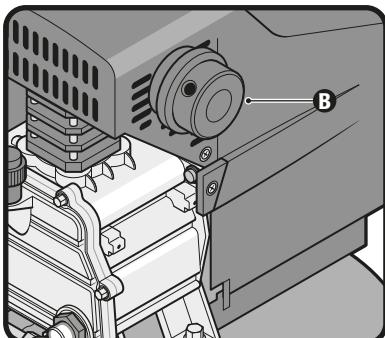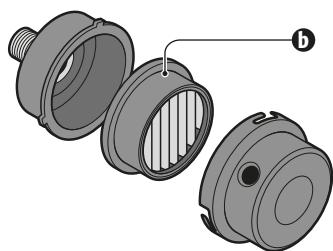

- After operating the compressor for 16 hours, open the drain valve (**C**) to remove water stored in the tank from condensation.
- After each use disconnect the compressor and release the air pressure in the tank by pulling the pressure release valve ring (**E**).

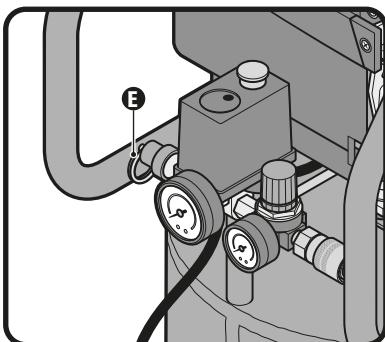

Service

- Any other service or repair of the compressor should only be performed by a  **TRUPER®** Authorized Service Center. Service and maintenance performed by unqualified persons may be dangerous and may result in personal injury and void the product warranty.

Problem	Cause	Solution
The motor is not working.	<ul style="list-style-type: none"> • No power. • Fuse is blown . • Thermal fuse is activated. • Pressurestat is faulty . 	<ul style="list-style-type: none"> • Be sure the cable is connected. Check the fuse-circuit switch. • Replace the blown fuse. • Press the thermal switch button to restart. • Go to a C TRUPER® Authorized Service Center.
The motor is buzzing but is not running or runs slowly.	<ul style="list-style-type: none"> • Tension Drop. • Motor winding in short or open. • Check valve or faulty pressurestat. • Compressed air in the cylinder. 	<ul style="list-style-type: none"> • Check with a voltmeter. Minimum tension shall be 200 V~ • Go to a C TRUPER® Authorized Service Center. • Go to a C TRUPER® Authorized Service Center. • Press the switch 15 seconds into the OFF position. Then, lift to the ON position .
Fuses blow up. The circuit switch is triggered repeatedly.	<ul style="list-style-type: none"> • Wrong fuse capacity, overloaded circuit. • Fault in the check valve or pressurestat. 	<ul style="list-style-type: none"> • Check the right fuse is being used. Use a time delay fuse. Disconnect other devices using the same circuit or operate the compressor using an independent circuit. • Go to a C TRUPER® Authorized Service Center.
Thermal overload protection causes interruptions repeatedly.	<ul style="list-style-type: none"> • Tension drop. • Clogged air filter. • Lack of adequate ventilation. • Environment temperature is too high. 	<ul style="list-style-type: none"> • Check with a voltmeter. Minimum tension shall be 200 V~ • Clean the air filter. • Move the compressor to an area with adequate ventilation. • Move the compressor to an area with adequate temperature.
Pressure in the tank drops when the motor stops.	<ul style="list-style-type: none"> • Loose connections (couplings, pipes, etc.). • Purge tap is open. • Check valve leaks. 	<ul style="list-style-type: none"> • Check to detect air leaks. Use sealant tape in all the leaky connections. • Tighten the purge key. • Disassemble the unidirectional valve. Clean or replace. <p>DANGER DO NOT DISASSEMBLE THE CHECK VALVE WITH AIR IN THE TANK. PURGE THE TANK FIRST TO RELEASE ALL THE PRESSURE.</p>
Excessive humidity in the discharge air.	<ul style="list-style-type: none"> • Excessive water in the tank. • High humidity. • Clogged entry filter . 	<ul style="list-style-type: none"> • Drain the tank opening the drain valve. • Move the compressor to an area with less humidity. Use a filter in the air pipes. • Clean or replace filter.
The motor runs continuously without stopping.	<ul style="list-style-type: none"> • Faulty pressurestat. • Excessive air use. 	<ul style="list-style-type: none"> • Go to a C TRUPER® Authorized Service Center to replace the pressurestat. • The compressor is not big enough to satisfy the CFM of the pneumatic tool requirements being used.
The compressor vibrates.	<ul style="list-style-type: none"> • Loose mounting bolts. • The tank rubber bases are not installed or are worn. 	<ul style="list-style-type: none"> • Tighten all the bolts and screws. • Install or replace the rubber bases.
Air output lower to normal.	<ul style="list-style-type: none"> • The purge tap is open. • Admission filter is dirty. • Leak in a connection. 	<ul style="list-style-type: none"> • Tighten the purge tap. • Clean or replace the admission filter. • Tighten the connections. Check to detect air leaks. Use sealant tape in all the leaky connections. Replace the damaged or broken hoses.

Authorized Service Centers



In the event of any problem contacting a **TRUPER®** Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-8737** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0557	MORELOS	FIX FERRETERÍAS CAPITAN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCRAL SJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL PACIFICO II, C.P. 22244, Tijuana, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCRAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCRAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUATLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
MEXICO CITY	FIX FERRETERÍAS EL MONSTRUO DE CORREDOR, CORREDOR # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77100 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCRAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 6823	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 2013	SINALOA	SUCRAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCRAL CENTRO JILOTEPEC AV. PARQUE INDUSTRIAL 1, PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDÓ. DE MÉX. C.P. 54257, TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCRAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRESOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P. 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCRAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code	Model	Brand
102116	COMP-80LV-260	 TRUPER®

This product is guaranteed for 1 year. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in www.truper.com. Transportation costs resulting from compliance of this warranty will be covered by .

For questions or comments, call **800-690-6990**. Made in China. Imported by Truper S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257



1
YEAR

Stamp of the business. Date of purchase:

AÑO



Sello del establecimiento comercial. Fecha de compra:

Industria 1, Parque Industrial Jilotpec, Jilotpec, Edo. de Mex. C.P. 54257
Para dudas o comentarios, llame al 800-690-6990. Hecho en China. Importado por Truper S.A. de CV. Parque
señal cubiertos por **TRUPER**.
poliza de garantía y/o en www.truper.com. Los gastos de transportación que resulten para su cumplimiento
establecimiento donde lo compre, o en algún Centro de Servicio Truper® de los establecidos en el anexo de la
serán cubiertos por **TRUPER**.

Este producto es garantizado por 1 año. Para hacer válida la garantía o adquirir piezas y componentes debereá
presentar el producto en Corredora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 o en el
Centro de Servicio Truper® de su localidad.

Código	Modelo	Marca	102116	COMP-80LV-260	TRUPER®
--------	--------	-------	--------	---------------	---------

Garantía
Poliza de





TRUPER®



En el caso de tener algún problema para contactar un Centro de Servicio Autorizado **TRUPER**, consulte nuestra página www.truper.com donde obtendrá su listado actualizado, o llame al:

800 690-6990 ó **800 0187-8737** donde le informarán cuál es el servicio más cercano.


MEXICO DE TODO PARA LA CONSTRUCCION SCURSAL TIJUANA AV. LA ENCANTADA LOTE #5, PARRA INDUSTRIAL ACUACALIENTES, AGS. TEL.: 449 994 0537	BAJA SCURSAL MONTERREY NARRAT HERMANIENTES DE TEPIC MEZQUITAL #111, COL. CARMELA, CP 20030, TEL.: 311 288 0540	CAMPACHE TORNIERIA Y FERRETERIA AAA COLONIA EL TECO #10, COL. CENTRO, CP. 68300, A. 20 DE NOVIEMBRE #910, COL. CENTRO, CP. 68300, TAXPEC, OAX. TEL.: 287/106 5092	CHIAPAS FIX FERRETERIAS AV. CENTRAL SUR #27, COL. ESPERANZA CP. 27070, CHIAPAS, CHI. TEL.: 961 181 5208	COAHUILA SUCURSAL TORREON AV. SILENTIAZARTE #24, COL. CENTRO CP. 27000, TORREON, COAH.	COLIMA BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, CP 28285, MANZANILLO, COL. TEL.: 311 323 1986 / 332 3205	DURANGO TORNILLOS AGUILA S.A. DE C.V. MAZARO #200, COL. LUIS ENFREIDIA DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844	MEXICO PARQUE INDUSTRIAL #1, COL. PROYECTO INDUSTRIAL TEL.: 761 782 910 / 7528 6605	GUANAJATO CLH SERVICIOS S.A. DE C.V. AV. MEXICO, APARTADO #225, CD. INDUSTRIAL, CP. 38010, CELAYA, GTO. TEL.: 461 677 758 / 79 / 80 / 88	HIDALGO CLH SERVICIOS S.A. DE C.V. CHILPANCINGO, MZ. 1, COL. SANTA FE, CP. 39010, TEL.: 747 478 9393	
MICHOACAN EX-HACIENDA DE LA REPUBLICA #310-A, COL. SANTA CRUZ DEL VALLE, CP. 45655, TLAJOMULCO DE ZUNIGA, JAL. 	VERACRUZ LA CASA DISTRIBUIDORA TRUPER PRIMERAS #358, HORNETOS S/N, COL. TEL.: 222 71 7502	TAMAULIPAS WOM DIREXIS Y PERCIONES PERDIDA SIRIA #173, COL. BARRIO DE SAN BARTOLOME, C.P. 89097, SAN PABLO DEL MONTE, TAMAULIPAS TEL.: 222 71 7502	TAJINACUA SERVICIOS Y REPARACIONES EDIFICIO ROSITA #525 ENTRADA 20 DE NOVIEMBRE G.R.A.L. R.D.R.D.G.U.E., PRIMERAS #80, RENSONA, C.P. 88780, RENSONA, TEL.: 999 265 7552	TABASCO SCURSAL VILLAHERMOSA CLL. 100 E/ 88 Y 89, COL. VILLAHERMOSA, TAB. TEL.: 993 355 2744	TAMAULIPAS WOM DIREXIS Y PERCIONES PERDIDA SIRIA #173, ENTRADA 20 DE NOVIEMBRE G.R.A.L. R.D.R.D.G.U.E., PRIMERAS #80, RENSONA, C.P. 88780, RENSONA, TEL.: 999 265 7552	TAJINACUA SERVICIOS Y REPARACIONES EDIFICIO ROSITA #525 ENTRADA 20 DE NOVIEMBRE G.R.A.L. R.D.R.D.G.U.E., PRIMERAS #80, RENSONA, C.P. 88780, RENSONA, TEL.: 999 265 7552	TAJINACUA SERVICIOS Y REPARACIONES EDIFICIO ROSITA #525 ENTRADA 20 DE NOVIEMBRE G.R.A.L. R.D.R.D.G.U.E., PRIMERAS #80, RENSONA, C.P. 88780, RENSONA, TEL.: 999 265 7552	TAJINACUA SERVICIOS Y REPARACIONES EDIFICIO ROSITA #525 ENTRADA 20 DE NOVIEMBRE G.R.A.L. R.D.R.D.G.U.E., PRIMERAS #80, RENSONA, C.P. 88780, RENSONA, TEL.: 999 265 7552	TAJINACUA SERVICIOS Y REPARACIONES EDIFICIO ROSITA #525 ENTRADA 20 DE NOVIEMBRE G.R.A.L. R.D.R.D.G.U.E., PRIMERAS #80, RENSONA, C.P. 88780, RENSONA, TEL.: 999 265 7552	TAJINACUA SERVICIOS Y REPARACIONES EDIFICIO ROSITA #525 ENTRADA 20 DE NOVIEMBRE G.R.A.L. R.D.R.D.G.U.E., PRIMERAS #80, RENSONA, C.P. 88780, RENSONA, TEL.: 999 265 7552
MICHOACAN EX-HACIENDA DE LA REPUBLICA #310-A, COL. SANTA CRUZ DEL VALLE, CP. 45655, TLAJOMULCO DE ZUNIGA, JAL. 	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451	YUCATAN SCURSAL MERIDA CALE 33 #600 Y 602, LOCALIDAD TIZNACAB Y MULAS, TEL.: 999 192 2451

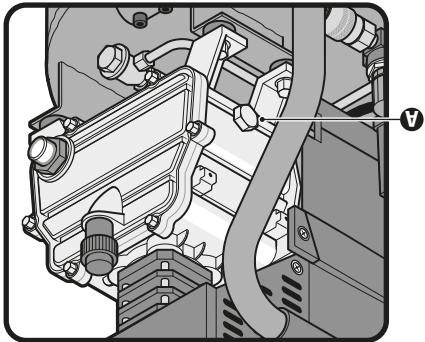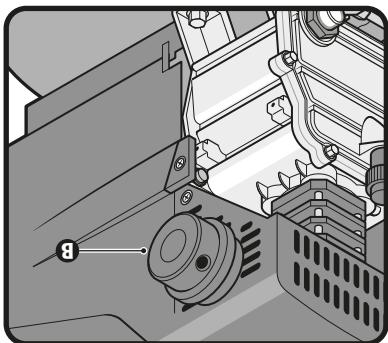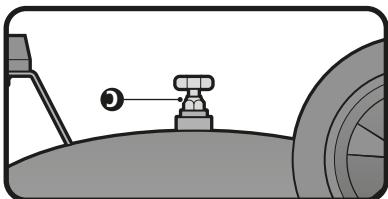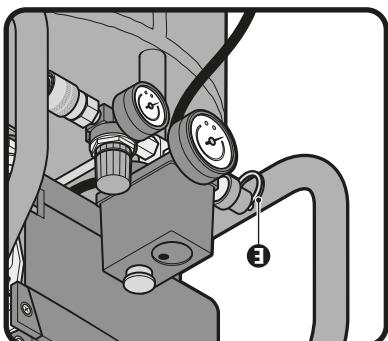

- Despues de las primeras 50 horas de operacion, cambie el aceite y el filtro de aceite.
- Despues de cada uso descargue el acumulador de compresor y libere la presion de aire del tanque si quedo en el tanque.
- Realizade un mantenimiento en un Centro de Servicio autorizado o servicio de taller profesional para garantizar la seguridad del producto.

Servicio

- Despues de operar el compresor durante 16 horas, abra la válvula de drenaje (C) para eliminar el agua almacenada en el tanque por la condensacion.
- Despues de liberar la presion de aire del tanque (B), desenmeye la válvula de drenaje (C) para liberar la presion de aire del tanque.

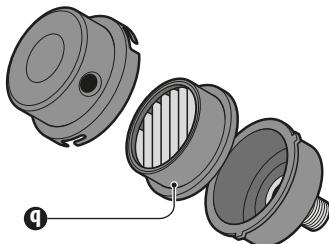

- Una vez por semanaabra y limpie con aire comprimido el interior del filtro de aire (B). Despues de 50 horas de uso de aire comprimido cambie el cartucho del filtro (B).
- Una vez por semanaabra y limpie con aire comprimido el exterior del filtro de aire (B). Despues de 50 horas de uso de aire comprimido cambie el cartucho del filtro (B).
- Inspeccione regularmente todos los tornillos de montaje y asegúrese de que estén apretados correctamente. En caso de que alguno de los tornillos esté suelto, apriételo estrictamente.
- Siempre mantenga las ventilas limpias y libres de obstrucciones para garantizar un enfriamiento adecuado del motor.

Limpieza y cuidados



- Despues de las primeras 50 horas de operacion, cambie el aceite refrigerante de tapón de drenado (A). Verla a en la página 7. Los cambios de aceite posteriores se deben realizar cada 150 horas de trabajo.
- Cambie el aceite refrigerante de tapón de drenado (A) cada 150 horas de trabajo.

Cambio de aceite

Mantenimiento

CTRUPER®

Puesta en marcha

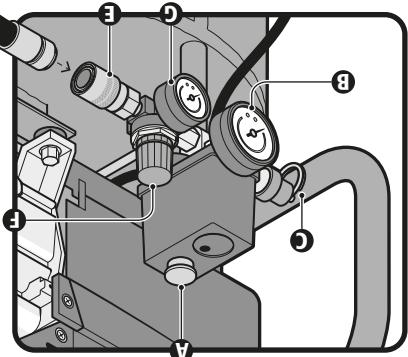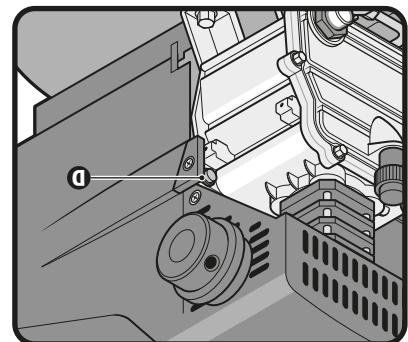


Encendido y apagado

- Antes de operar el compresor coloquelo sobre una superficie plana, nivelada y sólida, con buena ventilación y alejado de objetos inflamables, como cartóns, etc. Deje un espacio de al menos 30 cm (12") alrededor del compresor para que circule el aire.
- Conecte la manguera en un objeto sólido para evitar cable no se convierta en un obstáculo para evitar tropiezos con el derrame.
- Levante el interruptor (A) para encender el compresor.
- El motor arrancará automáticamente y llenará la tanque a su máxima presión, luego se apagará automáticamente. Si el suministro eléctrico se corta accidentalmente o se apaga de nuevo, el compresor se encenderá de inmediato.
- El compresor cuenta con un interruptor térmico (E) que evita que el motor tangüe un calefamiento excesivo. El interruptor para apagar de inmediato el compresor, no quite el interruptor térmico (E).
- Conecte el otro extremo de la manguera de aire a la del compresor (E).
- Conecte el extremo de la manguera de aire a la salida del compresor (G).
- Encienda el compresor (F), gire la perilla hacia la izquierda para disminuir hasta asegurar la presión deseada incrementar la presión de salida, gire la perilla hacia la derecha para desgajarse de que funcione correctamente.
- Después de conectar el compresor a la línea de aire, con la válvula de salida regulada de aire libre.
- Revise que no haya fugas en la línea de aire. Apague el compresor evite tocar esa zona para evitar quemaduras.

Opracación

- Nunca desconecte el compresor de la corriente eléctrica que alimenta el motor.
- El compresor cuenta con un interruptor térmico (D) que evita que el motor tangüe un calefamiento excesivo. El interruptor para apagar de inmediato el compresor, no quite el suministro eléctrico.
- El compresor se apaga de inmediato en el interruptor (E).
- Asegúrese de que las conexiones continúan entre sí.
- Afloje la tuerca de la conexión del aire con el regulador de presión (F).
- Encienda el compresor para apagarlo. Para desgajarse de la salida regulada de aire libre.
- Quite la perilla de la salida regulada de aire.
- Desconecte la manguera de aire de la salida del compresor.
- Conecte el otro extremo de la manguera de aire a la salida del compresor (E).
- Conecte el extremo de la manguera de aire a la salida del compresor (G).

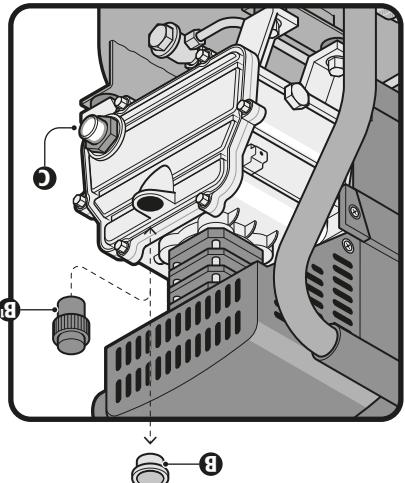


- El compresor de aire sirve para proveer de energía a herramientas neumáticas, tan versátiles como las herramientas eléctricas, por lo que se puede utilizar para taladrar, desmolillar, clavar, remachar, engrapar, chispear, pulir, soplar etc.
- El funcionamiento del compresor es totalmente automático, controlado por su presostato, que detiene el motor cuando la presión del tanque alcanza un nivel máximo y vuelve a arrancar cuando baja a un nivel menor de 55.6 kPa (80 PSI).
- El compresor debe conectarse a un tomacorriente protegido por un interruptor diferencial adecuado (termomagnético).

A ATENCIÓN • Revise el nivel de aceite antes de cada uso. Ilégar al nivel indicado.

- Verifique la cantidad de aceite en el depósito (B) y llene el depósito con aceite lubricante para compresores SAE-10W30 hasta el nivel de aceite que se indica en la tapa del recipiente (C). Si el aceite es demasiado seca la bomba de aceite no absorbe el aceite (G).
- Añada aceite a través de la tapa (B) incluida.


ACEITE

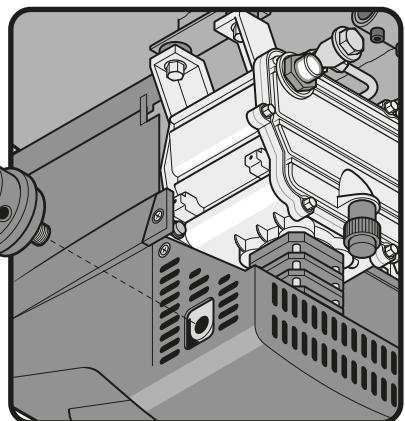

- Automilie el filtro de aire (A) a un costado del centro como se indica en la imagen.

ENSEAMBLE

- El compresor debe conectarse a un tomacorriente protegido por un interruptor diferencial adecuado (termomagnético).
- El funcionamiento del compresor es totalmente automático, controlado por su presostato, que detiene el motor cuando la presión del tanque alcanza un nivel máximo y vuelve a arrancar cuando baja a un nivel menor de 55.6 kPa (80 PSI).
- El compresor de aire sirve para proveer de energía a herramientas neumáticas, tan versátiles como las herramientas eléctricas, por lo que se puede utilizar para taladrar, desmolillar, clavar, remachar, engrapar, chispear, pulir, soplar etc.

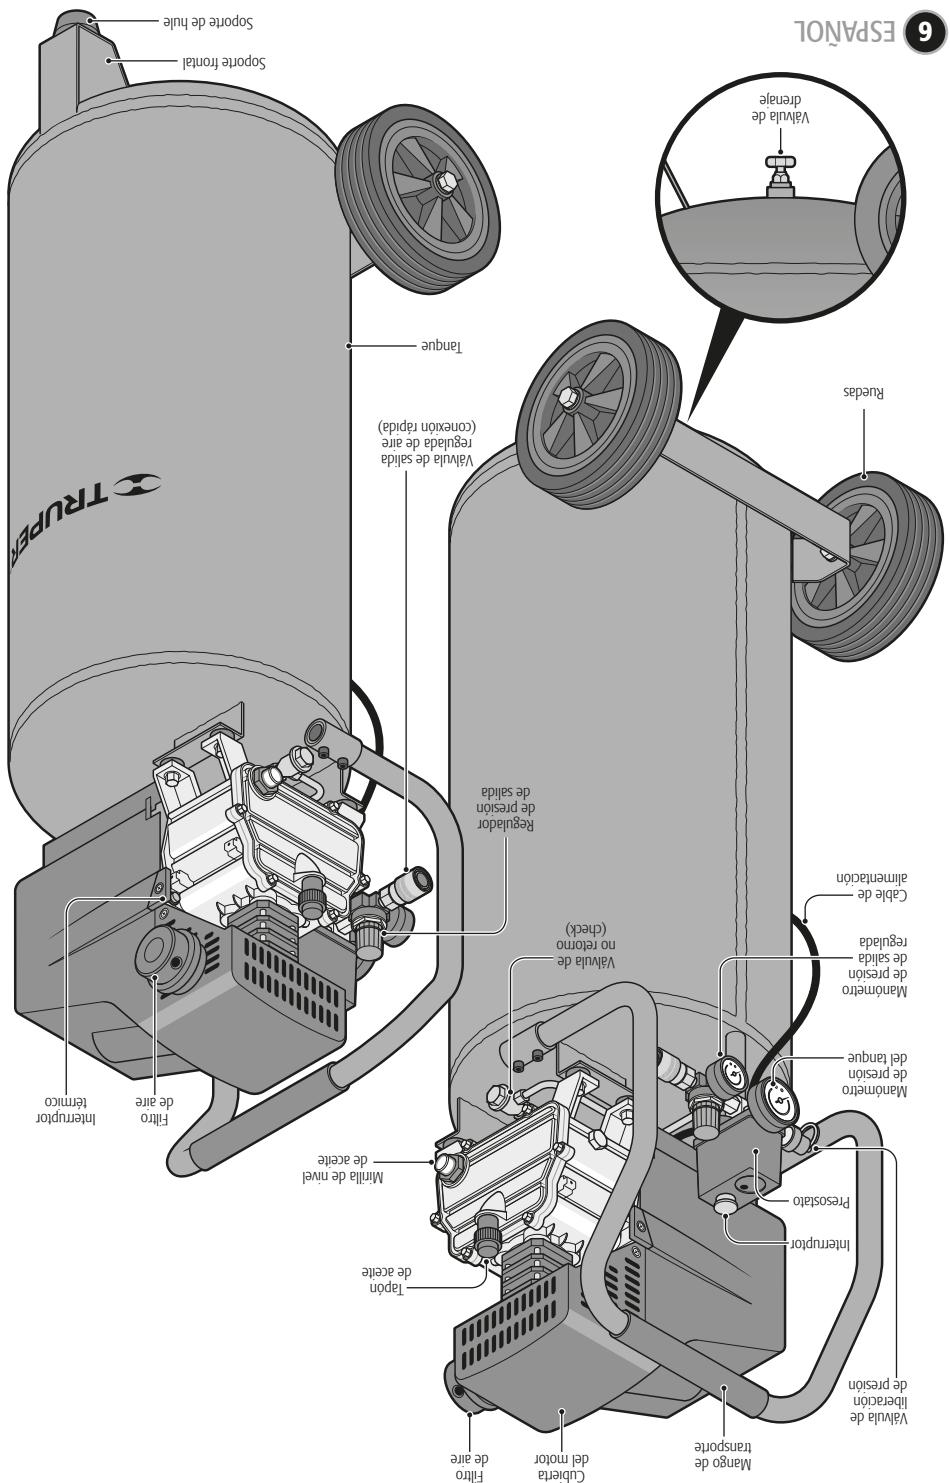


Partes

TRUPER®



- En caso de conectar el compresor a un circuito protegido con fusibles, use fusibles de acción retardada Tipo "D".
- herramientas húmedas o incluso lluvia. Puede operar el compresor por los tramos de manguera adicionales sin riesgo de choque eléctrico.
- confórmese lo requiere. De la misma forma, no use el interruptor utilizar una herramienta neumática en exteriores con pedida de potencia en el uso de extensiones eléctricas para compresores. Su uso provoca calida de tensión.

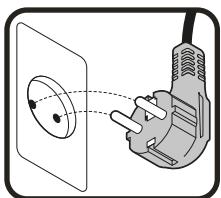A ATENCIÓN

En el caso de fallas o averías, la conexión a tierra prueba una conexión local. Los cables que se encuentren instalados y almacenados de acuerdo con todos conectados a una red de tierra y una clavija con conexión a tierra. La clavija debe estar tiene un cable eléctrico que sufre una descarga eléctrica. Esta herramienta es la equipada con un cable eléctrico que tiene una conexión de tierra. La conexión a tierra es la conexión de tierra de la herramienta con la conexión de tierra de la extensión, lo que reduce el riesgo de descarga eléctrica.

A ADVERTENCIA

- Autrizado TRUPER, con el fin de evitar algún riesgo de descarga o accidente considerable.
- Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio de la herramienta eléctrica que es alterado por salpicaduras o derriamamiento de líquidos durante su operación. No la expone a la lluvia, líquidos y/o humedad.




La clase de aislamiento térmico de los devanados del motor: Clase B
La clase de construcción de la herramienta es: Aislamiento básico.
El cable de alimentación tiene sujetacables tipo: Y

Código	•	Aislamiento
Tensión	•	Conductores
Potencia del motor	•	Capacidad del tanque
Fujo continuo de aire	•	Maxima presión
125 l/min (4.4 CFM) - 276 kPa (40 PSI)	•	Freuencia
800 kPa (116 PSI)	•	Nominal: 1/2 Hp (1875 W) Máxima: 3-1/2 Hp (2625 W)
220 V~	•	10216
Descripción	•	Compresor de aire lubricado vertical
•	•	10216

COMP-80LV-260

C TRUPER®

Especificaciones técnicas

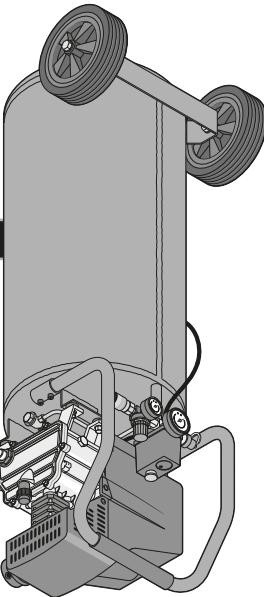

COMP-80LV-260

Para poder sacar el máximo provecho de la heramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.


- 12 Poliza de Garantía.
- 11 Centros de Servicio Autorizados
- 10 Solución de problemas
- 9 Mantenimiento
- 8 Puesta en marcha
- 7 Preparación
- 6 Partes
- 5 Advertencias de Seguridad para uso de compresores neumáticos
- 4 Advertencias generales de seguridad para herramientas eléctricas
- 3 Requisitos eléctricos
- 3 Especificaciones técnicas

ATENCIÓN**Indice****TRUPER®**



Lea este instructivo por completo
antes de usar la herramienta.

ATENCIÓN

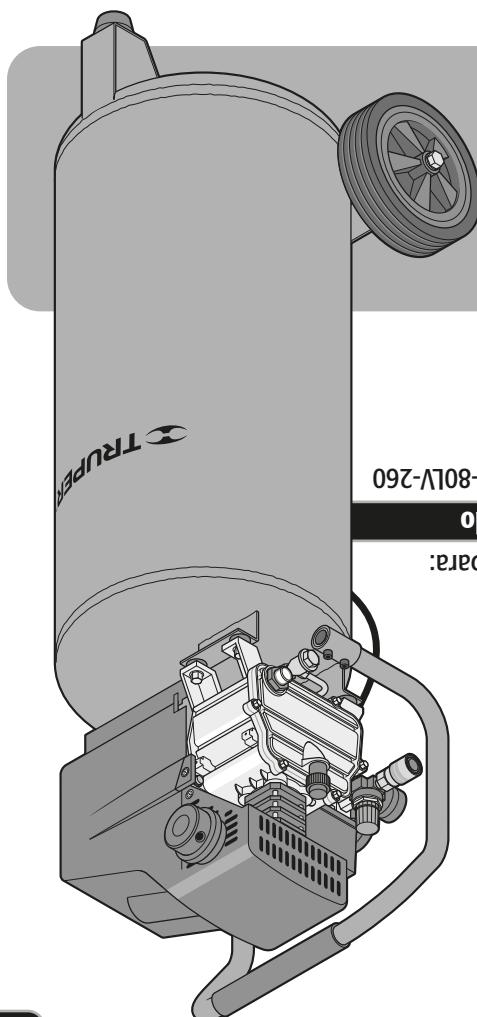

Este instructivo es para:

Código Modelo

102116 COMP-80LV-260

800 KPa
(116 PSI)
Presión

Compressor de ar lubricado vertical

Instructivo de

TRUPER®

ESPAÑOL
ENGLISH