


Manual

Gas pressure washer

4 000 PSI
Pressure

Applies for:

Code	Model
12910	LAGAS-4000

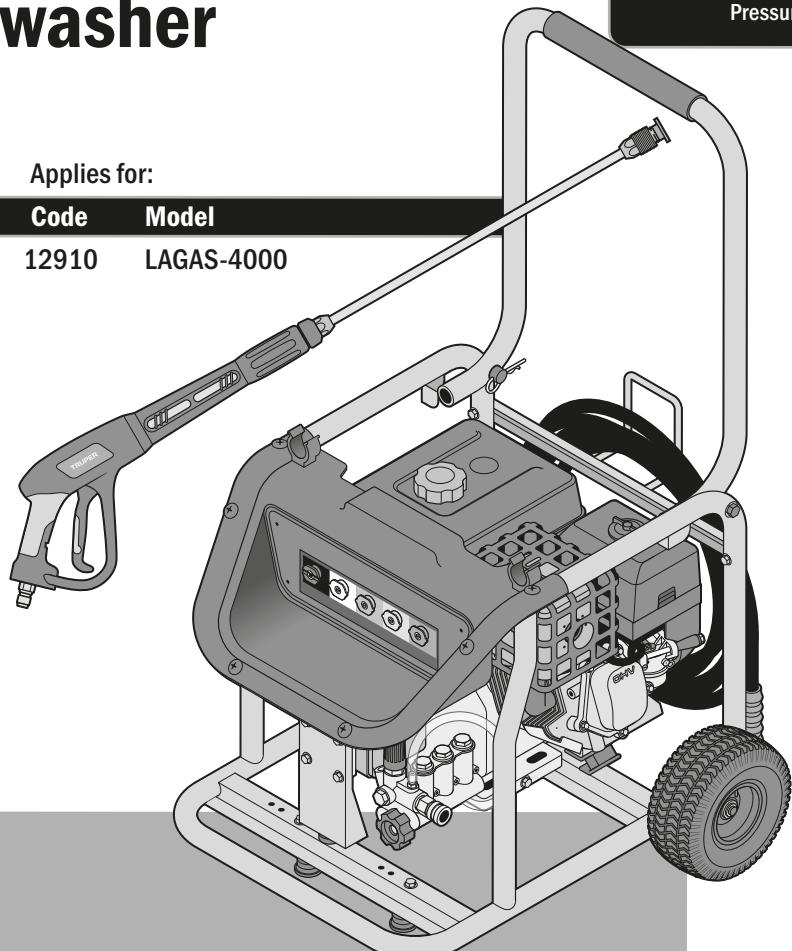

LAGAS-4000



CAUTION



Read this manual thoroughly
before using the tool.

YEAR WARRANTY
1
YEAR WARRANTY

Technical Data	3
Fuel Specifications	3
 General Safety Warnings for Motor tools	4
 Safety Warnings for Gas Pressure Washers	5
Parts	6
Assembly	7
Fuel and Oil	8
Startup	9
Operation	11
Maintenance	13
Accessories and replacement	14
Troubleshooting	14
Authorized Service Centers	15
Warranty Policy	16

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations



DO NOT start the pressure washer **WITHOUT OIL** or the engine will suffer severe damage due to lack of lubrication.



Use high-octane gasoline for optimal performance and durability. In Mexico, we suggest using premium gasoline. **AVOID USING** contaminated gasoline or gasoline mixed with additives or oil.



Keep the engine ventilation slots **CLEAN**.



Perform regular **MAINTENANCE** on your machine (page 13).

LAGAS-4000

Code	•	12910
Description	•	Gas power washer
Engine Capacity	•	420 cc 4-stroke
Motor Rated Power	•	10.5 Hp
Speed	•	3 600 RPM
Type of Fuel	•	Gasoline
Fuel Tank Capacity	•	169 oz
Oil Deposit	•	37.1 oz
Maximum Pressure	•	4 000 PSI
Maximum Flow	•	3.6 GPM
Water Flow Maximum Temperature	•	104 °F
Noise Level	•	86 dB
Duty cycle	•	20 min of rest per consumed tank. Maximum 8 hours daily.

Fuel specifications



For optimal **PERFORMANCE** and durability, use high-octane gasoline. In Mexico, we suggest using **PREMIUM** gasoline.

- The equipment has a 4-stroke, air-cooled engine that runs on pure unleaded gasoline.
- Never mix oil with the fuel.

⚠ WARNING • Do not use fuels mixed with ethanol (gasohol), methanol, or ethyl alcohol, as they can attract moisture, which causes separation and acid formation during storage. The acidity may damage the engine's fuel system when stored.

- To prevent engine issues, empty the fuel system before storing the equipment for 30 days or more. Drain the gasoline tank, start the engine, and let it run until the fuel lines and carburetor are empty. The next time you use it, fill it with fresh gasoline.
- Never put engine or carburetor cleaning products in the gasoline tank, which could cause permanent damage.



Keep your work area tidy and with good lighting.

CAUTION Cluttered and dark areas can cause injuries.



Never use the mixer in explosive environments or where there are flammable liquids present.

DANGER Set the mixer 30 ft. away from the fuel filling up area before starting the motor.



Keep children and passersby at a safe distance while the mixer is operating.

WARNING Distractions can make you loose control and cause accidents.



Avoid making contact with power lines and circuits.

DANGER Find and avoid all power lines and circuits, especially hidden wiring. Also keep away from grounded objects.



Stay always alert, be prudent and use common sense.

CAUTION Even tough you are familiar with the use of the mixer do not get distracted while operating the machine. It can cause accidents.

Do not operate the mixer when tired or under the influence of drugs, alcohol or medication.

DANGER A moment of distraction while operating the mixer can cause severe personal injury.

Use the mixer with the guards and protector installed and in good repair.

WARNING Failure to comply with this warning leads to severe personal injury.

Never force the concrete mixer.

CAUTION Working within the range designed assures a better job and is safer.



Store the mixer is a safe place away from the reach of children.

WARNING Motor concrete mixers are dangerous near inexperienced hands.



Wear the right clothes.

WARNING Loose clothes, jewelry, or long hair may get caught in moving parts.



Keep your hands away from the rotating or moving parts.

WARNING Failure to comply with this warning leads to severe personal injury.



Do not use the mixer in enclosed areas.

DANGER To prevent accumulation of carbon monoxide, an odorless toxic gas potentially deadly.



Use the right personal protection equipment.

CAUTION Using eye protection, anti-dust masks, non-skid safety shoes, helmet, hearing protection and safety gloves considerably reduce the risk of injury.



Turn off the mixer before adjusting, changing accessories or storing.

WARNING Double-check the mixer motor switch is in the OFF position.

Never run the mixer if the switch is not working or is not duly assembled.

WARNING The operator is exposed to severe injury. Take it to repair immediately to a TRUPER Authorized Service Center.

Do not overreach.

CAUTION Good footing and balance give better control of the mixer in unexpected situations.

Prevent unintentional starting.

WARNING Double-check the mixer motor is OFF before leaving or servicing.



Remove any vise fixed in the mixer before starting it.

DANGER Additional tools or wrenches fixed in a rotating part in the mixer can cause severe personal injury.

Service the mixer and double-check it is in the best conditions before starting it.

CAUTION Check carefully the moving parts. See alignment and assembly. Do it periodically. Look for damaged elements or part that is not functioning correctly. Repair immediately in a TRUPER Authorized Service Center.



Accessories.

CAUTION Use only accessories or spare parts indicated in this Manual o certified by TRUPER.

Never leave the concrete mixer running and unattended.

DANGER To prevent severe accidents turn off the mixer after operating and before setting it in a safe place.

Never smoke near fuel.

DANGER Do not smoke near the area where fuel is being supplied or when operating the mixer.



Fuel Handling

- Never smoke near the fuel, nor the supply area or when operating the tool.
- Reduce the risk of fire or burns. Handle fuel with care. It is extremely flammable.
- Prevent gasoline or oil come into contact with your skin.
- Protect your eyes. Prevent gasoline or oil spilling into your eyes. In case of accidental contact wash your eyes immediately with clean water. If irritation persists, visit your doctor.
- Store fuel in an approved container.



WARNING • Before refueling the tool turn off the motor, set it on clear floor and wait for the motor to cool down.

CAUTION • Wipe clean all the fuel that dripped in the tool before operating.

CAUTION • To prevent fire or burns look for fuel leaks. If there are any correct them before using the tool.
• Set the tool at least 30 feet away from the refueling site before starting the motor.
• Never ever burn spilled fuel to eliminate it.
• Under no circumstance use a different type of fuel different to the one specified in these instructions.

Before Operating the Pressure Washer

- To assure it is perfectly assembled double-check the tool is in perfect conditions. Do not start it if is not well adjusted or not fully assembled, or if the fuel tank shows leaks or loose screws.
- Double-check the tool surface is clean, dry and free of oil or fuel.
- Verify the work area is open and well ventilated.
- During extreme temperatures inspect there is no ice build-up or condensation in the tool.
- Visibility and light conditions shall be adequate. Otherwise do not operate the tool.

CAUTION • Bear in mind that pressure spraying is very powerful. It is not recommended using onto painted or wooden surfaces or on things stuck with adhesive.
• Check instructions and warnings regarding chemical products. Do not use bleach, chlorine or any other cleaning product containing acid.
• To minimize the amount of water that could enter into the pressure washer while running, set the machine as far as possible from the area about to be washed.
• Check the high-pressure hose. If damaged, please replace it immediately.
• To prevent water flow to be cut due to twisting untangle and straighten the hoses in full.

When Operating the Power Washer

WARNING • Wear eye protection.

CAUTION • Before starting the or when operating the tool verify the nozzle is not pointing towards people or animals.

- Keep all body parts away from the muffler. It produces severe burns.
- Keep the tool away from flammable materials.
- Do not try to make adjustments to the tool while the motor is running.
- Stay alert of everything around you. The tool noise could prevent you to make out hazards.
- When spraying always use both hands to gain total control over the high-pressure gun.

WARNING • Never touch the nozzle or the water jet while the machine operating.

• To allow free air circulation while the tool is running DO NOT cover the pressure washer.

CAUTION • Never aim the water jet towards the tool.
• Prevent the high-pressure hose getting tangled, make contact with sharp edges or hot surfaces, crushed or stepped on.

• Do not drag the pressure washer on top of the hoses.

After Operating the Tool

CAUTION • Always move the Tool with the motor OFF and the muffler away from the body. Before loading into the back of a vehicle empty the fuel tank.

WARNING • Turn off the motor before setting it idle. DO NOT leave the motor running unattended. Leave the tool cooling-off before storing.


CAUTION • The tool service and repairs shall only be carried out by highly trained personnel.

Assembly Recommendations

WARNING • In the event there are some parts missing, do not run the tool until they are replaced. Otherwise can cause severe personal injury.

WARNING • Do not try to modify the tool or produce accessories not recommended for this machine. Otherwise severe personal injuries can happen and makes the warranty void.

WARNING • Whenever you need to gain access to the mobile parts disconnect the spark plug cable to prevent an accidental start causing severe personal injury.

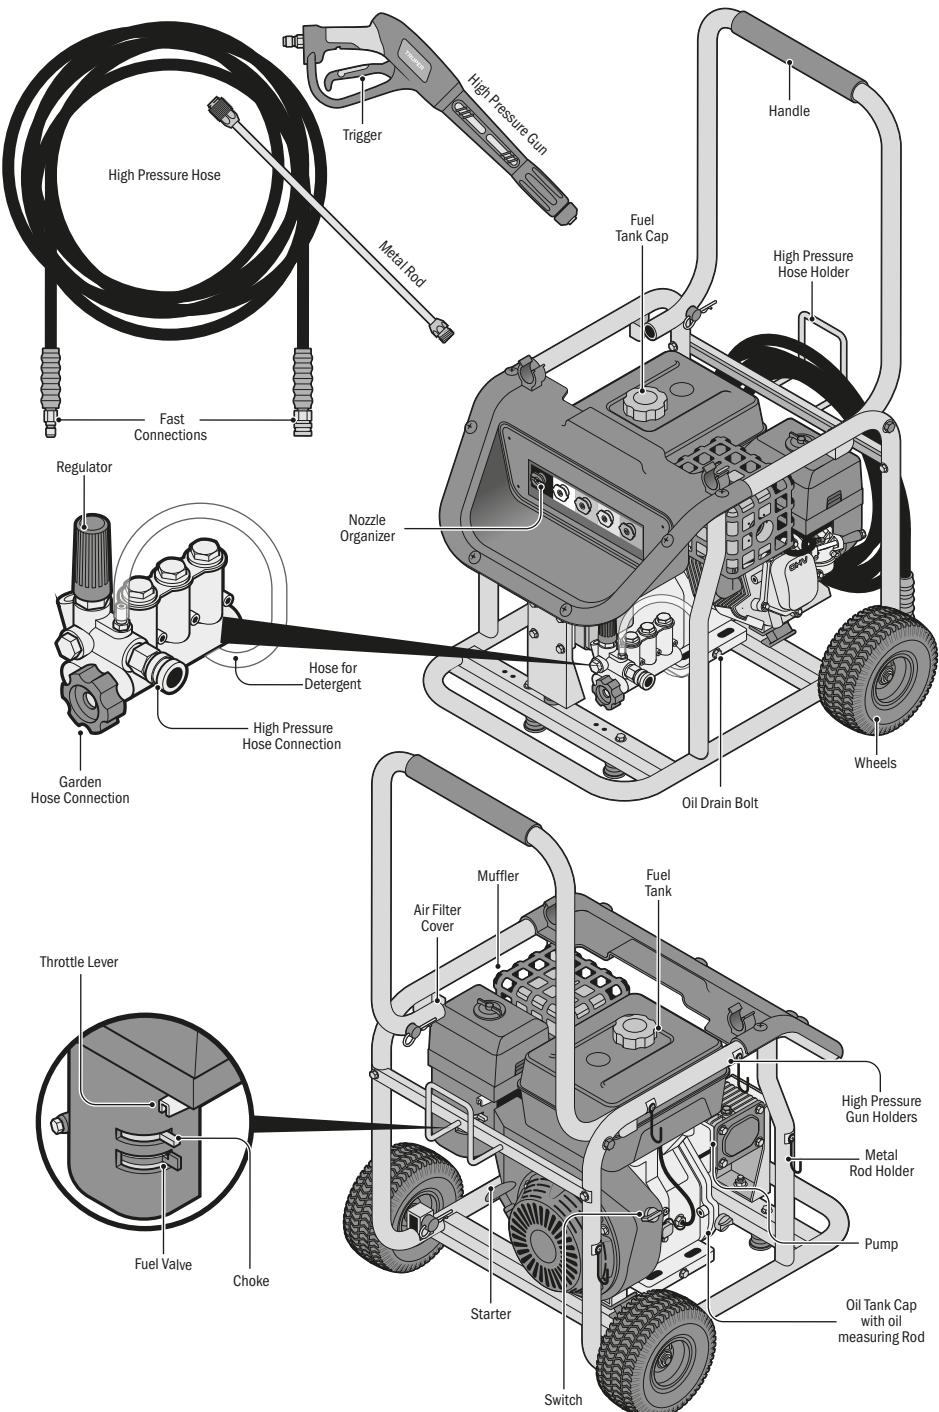

- Install the wheel kit by passing the axle (A) through the washer (E) and each wheel (B) and its respective mounting hole (C) in the frame. Secure the shaft with the pin (D).

- Install the high pressure gun and metal lance supports on the equipment chassis as shown in the image.

- Assemble the metal rod (F) to the high-pressure gun (G) threading in a clockwise direction, the gun to the high-pressure hose (H) and the hose to the pump (I).



These as fast connections.

- Close the garden hose faucet (J) fully. Connect the garden hose to the garden hose inlet (K). To connect and prevent kinking the garden hose turn the connection knob.

CAUTION • Use care no to thread the connections unevenly to prevent pressure loss.


- Once the connection is set and WITHOUT touching any nozzle (L) in the metal rod open all the way the garden hose faucet. Tighten the high-pressure trigger until a constant water flow is out from the metal rod. The purpose of this movement is to purge the system from air bubbles.

- If using detergent into the pressure washer, connect the detergent hose to the connection (M).

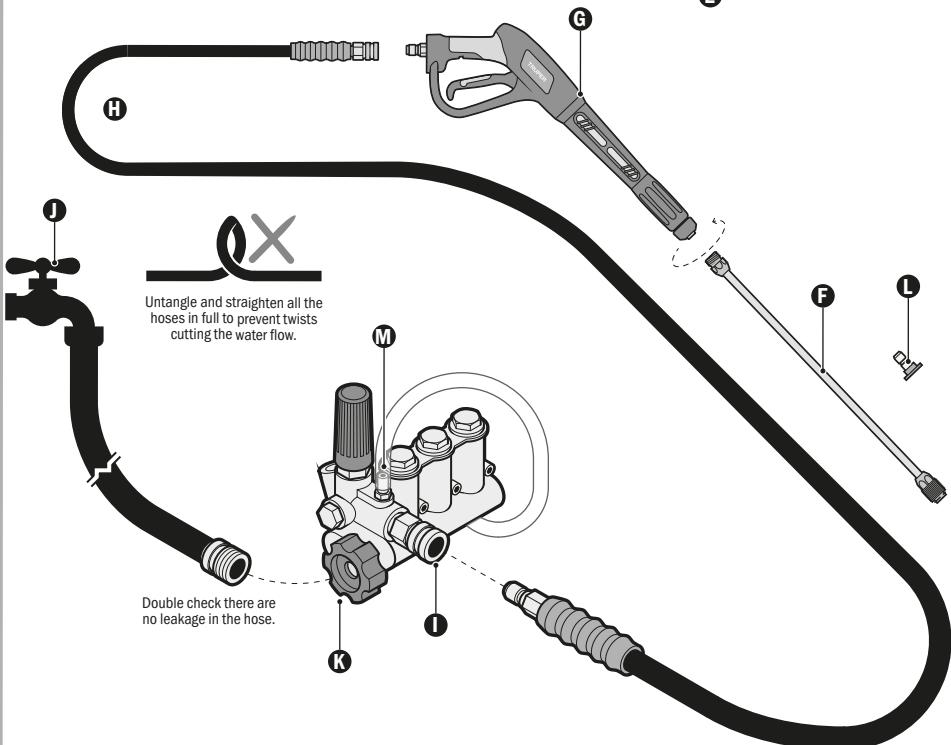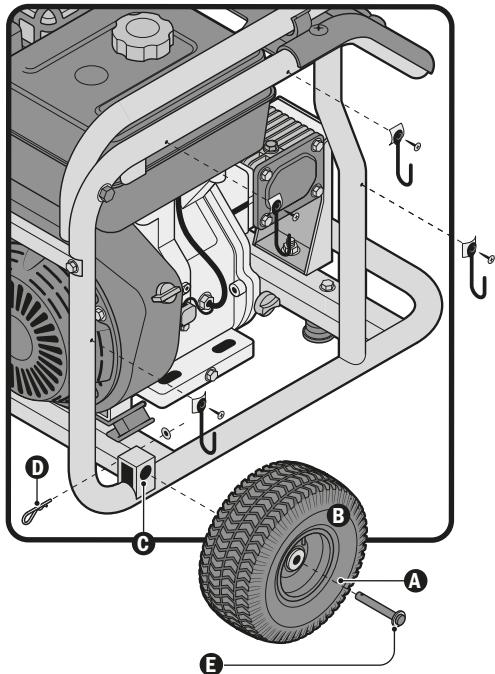

Oil Supply

- Set the Pressure Washer on a flat and leveled surface.
- Close the fuel valve (A).
- Turn and remove the oil cap (B).
- Use four-stroke motor oil. Using SAE 10W-30 oil for general use and for all temperatures. As is indicated in the following table other viscosities can be used when the average temperature in your vicinity is within the indicated range.

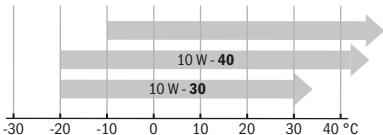


- Clean the oil measuring rod (B) with a clean cloth to check oil level.
- The oil deposit has an approximate capacity of 37.1 oz Pour oil gradually and wait a couple of minutes to allow the oil to settle into the motor.
- Insert the oil level measuring rod into the orifice and check if the oil is in the maximum level.
- In the event the level is below the minimum level add oil until it reaches the maximum level in the rod.

⚠ CAUTION • Checking oil level regularly is advisable.
• When the oil in the tank reaches the right level indicated in the rod, set the cap back (B) and tighten to prevent leaks.

⚠ CAUTION • Do not exceed the maximum oil level because it causes smoke coming out through the muffler that the motor starts.


⚠ CAUTION • Check oil level before each use. Add oil if necessary when it is between the limits in the oil measuring rod.

⚠ CAUTION • Change the oil after the first 20 hours of first use, then change every 100 hours. In very dusty or dirty conditions it may be necessary to change the oil more often.

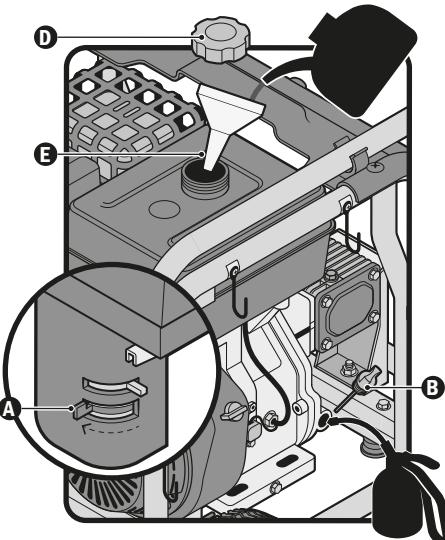

Fuel Supply

- Set the Pressure Washer on a flat and leveled surface.
- Clean and dry the area around the fuel cap.
- Remove the fuel cap (D).
- Using a funnel fill slowly the fuel tank up to the lower part of the tank neck. Do not overfill to allow fuel expansion and prevent spillage (E).
- Clean any fuel spills.
- Cover the tank rotating the cap until hearing a click.
- Clean any spilled fuel before starting up.

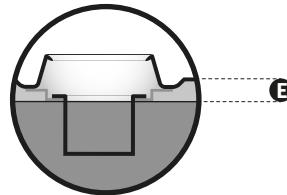


Switch ON

⚠ CAUTION Before starting the gas pressure washer please pay attention to the following. Failure to comply with this note could damage the machine and make the warranty void:

- All the hoses shall be connected, completely untangled and not presenting kinks.
- Water supply shall be connected and fully open.
- Gasoline and oil levels shall be the correct ones.
- The system shall be purged out of air bubbles (see page 7).

- Open the fuel valve (**E**).
- Switch it on (**F**).
- Move the choke lever to the "START" position (**G1**).
- Move the throttle lever (**I**) to the left, to the high-speed position.
- Pull the jack-line (**H**) until the motor starts but no more than 6 times. Whenever pulling the jack-line release it gently into its original position. Do not allow it to snap back.
- After the motor runs a couple of seconds. Then move the choker lever into the "RUNNING" position (**G2**).

⚠ CAUTION • In case the motor is not starting after pulling out the jack-line, tighten the high-pressure gun trigger to release water pressure before trying to start the motor again.

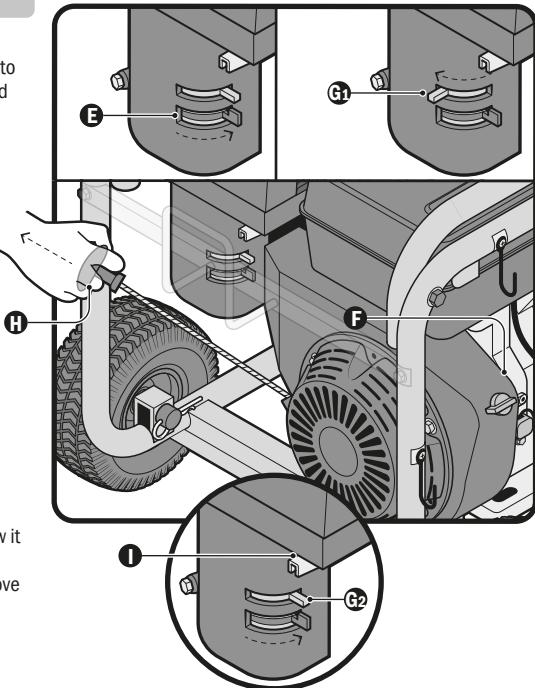


Switch OFF

- Release the gun trigger to stop the pressure jet.
- Move the accelerator lever (**I**) to the right into the low speed position.
- Switch off the switch.
- Close the fuel valve.
- Close the garden hose faucet.
- Press the high-pressure gun trigger to release pressure.

High Pressure Gun Operation

- To open the water flow keep the high-pressure trigger (A) depressed.
- To stop the water flow release the trigger.
- To prevent accidentally starting the machine separate the trigger lock until is blocked in the slot (B). To release the lock turn it to its original position.

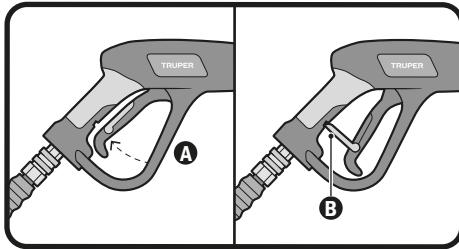

Nozzle Selection

- Depending on the job to carry out, the gas pressure washer carries different nozzles for different flow openings:

Nozzle	Flow	Abrasion	Cement, Brick, Masonry	Exteriors, Hedges, Patios, Terraces	Boats, RV's, Gardening Gear
High Pressure	Red	0°	✓		
	Yellow	15°	✓	✓	✓
	Green	25°	✓	✓	✓
	White	40°	✓	✓	✓
	Black	soap	✓	✓	✓


✓ Recommended Nozzle ✓ Use with Caution

Spray Nozzle Assembly

CAUTION • Before assembling or removing a nozzle in the metal rod, turn off the Pressure Washer, close the water supply, press the trigger to release the pressure and lift the gun trigger lock. Failure to comply with one of these points exposes the operator to severe injury.

CAUTION • When assembling nozzles prevent from pointing the metal rod towards your face. The nozzles fast connection system could accidentally throw it and injure the operator.

- To assemble the nozzles pull the fast connection ring (J).
- Set the nozzle in the metal rod.
- Push the fast connection ring to secure the nozzle in place (K).
- To disassemble the nozzle, pull the fast connection ring and pull the nozzle to release it.

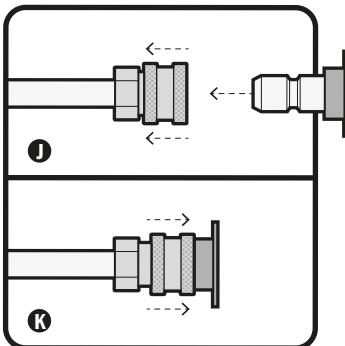

Use of Detergent

- The Pressure Washer is built to use detergents specified for "descending flow" gas pressure washers.

⚠ CAUTION • Use only detergents designed for gas pressure washers. Household detergents, acid, alkaline, bleach, solvent flammable or industrial grade solutions can damage the pump. Many detergents call for mixing before using. Prepare the mix following the instructions in the bottle. Always test in a less noticeable area before starting to pressure wash.

- Connect the detergent hose as indicated in page 7.
- Remove the detergent container cap and insert the detergent hose end with the container filter.

NOTE The gas pressure washer uses a 20:1 proportion of detergent. It usually is a 1 gallon undiluted detergent. See the instruction in your detergent to verify if is necessary to make an additional dilution.

- Set the detergent nozzle (black) in the spraying pipe.
- Press the trigger and wait approximately 5 seconds for the detergent to start being sprayed.
- Spray the detergent in a dry surface using long, uniform and overlapped passes. To prevent stripes to appear, do not leave the detergent drying in the surface.
- After spraying detergent in the work surface and before rinsing, set the end of the detergent hose with the filter into a bucket with clean water and expel the water with the high-pressure gun during two minutes to remove from the system all the detergent residues.
- Turn off the motor and press the trigger to pressure-purge the water.

Moving the Gas Pressure Washer

⚠ CAUTION • Never use the handle to lift the gas pressure washer. Never set the unit in a position other than vertical and sitting on its wheels.

- Turn off the gas pressure washer.
- Tilt the unit towards you until is balanced on its wheels. Then, push it to the desired position. Do not tilt forward or sideways while moving it.

⚠ CAUTION • DO NOT try to move the unit pulling from either of the hoses.

High Altitude Operation

• At high altitude the air fuel mix in the standard carburetor will be rich in fuel. Performance will be lower and fuel consumption will increase.

- Performance while in a high altitude can be increased if the carburetor is regulated adjusting the main knob. The equipment is set to operate at heights above 6 000 feet above sea level. If the tool is not working efficiently call a TRUPER Authorized Service Center to have them carry out modification in the carburetor.
- Even though the carburetor has an adequate injection the potency in the motor will decrease 3.5% approximately per each 1 000 feet increment, after 6 890 feet above sea level. Decrease in potency will be higher if there are no modifications in the carburetor.

⚠ WARNING • If the equipment is operated in a height that is inadequate to the carburetor setting, low performance, over-heating and severe damage to the motor caused by the excessive air mix in the fuel may be obtained

Rinsing

- Remove the detergent nozzle and replace it with the high-pressure nozzle most suitable for the job.

⚠ CAUTION Follow the nozzle assembly and removal instructions and how to select the most adequate nozzle in page 10.

- Remove the detergent hose from the gas pressure washer.
- Start rinsing from the upper side of the work area. Use side-to side passes, overlapping each pass up and down.

- CAUTION** • Use only TRUPER original spare parts.
- CAUTION** • When servicing or repairing the Pressure Washer use eye protection complying with ANSI Z87.1.
- CAUTION** • Before servicing the Pressure Washer, shut off water supply, shut off the motor, press the trigger to release pressure, disconnect all the hoses, disconnect the spark plug cable and set it apart.
- Failure to comply with any of the previous points exposes the operator to severe injury or damage the Pressure Washer thus making the warranty void.

General Maintenance

- Use a clean cloth to remove dirt, dust, oil or grease from the unit. **CAUTION** Refrain from using detergent when cleaning the plastic parts. Use care not to make contact of the plastic parts with fluid like brake fluid, gasoline, other petroleum-based products, penetrating oils, etc. Otherwise the plastic could damage, it would alter the unit operation and expose the operator to severe injury.
- Periodically double-check the bolts, nuts and screws to be firmly tightened.
- Periodically check the filter to make sure is clean.
- Verify oil and fuel levels to fill up when necessary.
- Check the jack-line. If frayed, replace it immediately in a TRUPER Authorized Service Center.

Nozzle Cleaning

- Nozzles can get partially obstructed due to residues, thus increasing pressure in the high-pressure gun. This issue can be detected if there is constant pulsating when pressing the trigger.
- To solve this issue turn off the Pressure Washer and remove the nozzle as indicated in page 10.
- Using a paper clip, remove the obstruction from the nozzle.
- Set the nozzle in the front end of the garden hose. Open the faucet so that the water flow goes through the nozzle in an inverse sense and releases the rest of dirt.
- Connect back the nozzle into the metal spear.

Air Filter Cleaning

- Check the air filter monthly to make sure it is in good condition. Remember that a dirty filter can cause starting difficulties, loss of performance and shorten the life of the engine.
- Uncover the air cleaner cover by loosening and removing the thumb screw.
- With a damp cloth, clean the inside and outside of the air filter cover, do not allow dust to enter the carburetor.

- Remove the filter and separate the sponge element. Rinse it with clean water.
- Gently squeeze the sponge element until excess water is removed.
- Apply a thin coat of SAE 10W-30 oil to the sponge element, then wipe off the excess.
- Tap the air filter gently on a solid surface to remove coarse dust particles, or apply compressed air to avoid damaging the paper element.
- Assemble and place the filter in its place, making sure that it sits correctly in the compartment, otherwise dust can enter the engine, causing premature wear.
- Replace the filter cover by tightening the thumb screw.

Oil Change

- Set an approved oil container under the unit.
- Uncover the oil tank inlets and remove the hex screw in the lower side of the motor. Drain the oil into the container.
- Before filling up again, set and tighten the hex screw and follow instructions in page 8.

Spark Plug Maintenance

- Before removing the spark plug clean the area around the spark plug base to stop dust or debris enter into the motor. Remove the spark plug.
- Clean the carbon deposits from the spark plug electrodes. Use a spark plug cleaner or a wire brush.
- If you find the old one is worn or using it again is doubtful replace the spark plug using an identical LG F7RTC spare plug.
- Verify the gap between electrodes. It shall be 0,027" to 0,031". If necessary, adjust the gap by carefully bending the earth connection electrode.
- Verify the spark plug joint.
- Set the spark plug in place. Thread it and tighten by hand.
- Tighten with a wrench to compress the washer. If it is a new spark plug, give it a 1/2 turn to press the washer in an adequate manner. If using an old spark plug give it an 1/8 to 1/4 turn to compress the washer properly.
- CAUTION** Use care to adjust the spark plug correctly. Otherwise the motor can get too hot and get damaged.

Pump Maintenance

- Make a visual inspection of the pump every day. If noticing oil loss around the pump seals, take the Pressure Washer to a TRUPER Authorized Service Center to be repaired.
- Do not try to repair or alter the pump. Otherwise the Pump Washer could get damaged and the warranty will be void.

Long Term Storage

- Connect and open the water supply. Keep the unit running until running out of fuel. Remember, gasoline gets spoiled after 30 days even with the recommended stabilizer.
- After all the fuel is gone and the motor stops, turn off the switch and disconnect all the hoses, see they are empty and roll without twisting while the motor cools off (approximately 30 minutes).
- Empty the pump. Pull the manual start jack-line handle 6 times approximately.
- Replace oil as indicated in page 12.
- Disconnect the spark plug and remove it. Pour less than a spoonful of 4-stroke clean motor oil through the spark plug orifice, into the combustion chamber.
- Having the spark plug removed pull the manual start jack-line two or three times to cover the insides of the cylinder wall.
- Service the plug before installing it back as indicated in page 12. Leave the spark plug cable disconnected.
- Clean the air filter as indicated in page 12.

- Store the unit and accessories in an area under a roof, well ventilated and protected from freezing temperatures. Using an adequate cover is recommended if stored in low temperatures. Do not store it near furnaces or other heat sources because it makes the pump seals dry.

Using the Unit After Long Term Storage

- Pull the start jack-line three to four times to clean the oil from the combustion chamber.
- Remove the spark plug from the cylinder. Clean the oil in the spark plug and set it back into the cylinder.
- Connect the spark plug cable.
- Fill up as indicated in page 8.

Periodic Maintenance	Before each use	Every 20 h	Every 50 h	Every 100 h	Every 300 h
General Overview	✓				
Oil Inspection	✓				
Engine Oil Change		✓(1)		✓	
Water Filter Inspection	✓				
Pump Oil Change		✓			
Cleaning Spark Plug			✓		
Cleaning Air Filter	✓				
Replace air filter			✓		
Adjust spark Plug Electrodes			✓		
Replace Spark Plug				✓	
Verify and Adjust Valve*					✓

* Go to a TRUPER Authorized Service Center for this Service.

(1) Only applies for the first change.

Replacement	Code	Item	Description
	15769	MANG-4000	High Pressure Hose
	15766	BOQ-4000	Nozzles
	15768	PIST-4000	High Pressure Gun
	15767	LAN-4000	Metal Rod
	101819	CB-LG-4000	Carburetor

Troubleshooting

Problem	Cause	Solution
The motor will not start.	<ul style="list-style-type: none"> No fuel. Water Pressure in the hose. Defective or inadequate spark plug. Disconnected or damaged spark plug cable. Ignition system is not working. 	<ul style="list-style-type: none"> Fill up the fuel tank. Press the trigger to release water pressure before starting the motor. Replace spark plug. Connect the cable or replace if worn. Go to a TRUPER Authorized Service Center.
Trouble starting the motor.	<ul style="list-style-type: none"> There is water in the gasoline. Weak spark in the spark plug. 	<ul style="list-style-type: none"> Drain the whole system and refill with new fuel. Go to a TRUPER Authorized Service Center.
There will not power in the engine.	<ul style="list-style-type: none"> The air filter is dirty. 	<ul style="list-style-type: none"> Clean or replace the air filter.
Detergent is not mixing in the spray.	<ul style="list-style-type: none"> The detergent hose end is not submerged into the detergent. A high-pressure nozzle is installed. 	<ul style="list-style-type: none"> Submerge the whole detergent hose filter into the detergent container. Use the black nozzle to apply detergent.
The pump will not generate pressure.	<ul style="list-style-type: none"> The detergent nozzle is installed. Water supply is inadequate. Wrong hose and high-pressure gun connection . Clogged nozzle. Air in the hoses. Leaks in the hose. Twisted hose. Choke in the start position. Defective pump. 	<ul style="list-style-type: none"> Replace the nozzle with a high-pressure nozzle. Connect adequately the garden hose to the Pressure Washer and open the water supply all the way. Verify and correct all the connections. Unclog the nozzle as indicated in page 12. Press the trigger to purge the air from the system. Replace the hose. Stretch, untangle and untwist the hose. Set the choke in the Gear position. Go to a TRUPER Authorized Service Center.
The unit will not reach high pressure.	<ul style="list-style-type: none"> The garden hose diameter is too small. Water supply is restricted. There is not enough water inlet. The detergent nozzle is installed. 	<ul style="list-style-type: none"> Replace the hose. Use a 3/4" Double-check the garden hose to stretch bends, leaks or blockage. Open the water supply all the way. Replace the nozzle. Use a high-pressure nozzle.

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DETOTO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL: 735 352 8931
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #300, 18 MONTERREY PARKS, COLONIA PUERTA DE ANÁHUIAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #324, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL: 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL: 984 267 3140
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO. TEL: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL: 644 413 2392
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA. ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL: 782 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMAN, C.P. 97390, MÉRIDA, YUC. TEL: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL: 443 334 6858		

Code	Model	Brand
12910	LAGAS-4000	TRUPER®

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date: