

Manual

Hydro pneumatic pressure boosting system

Tank capacity

6.3 gal 13.2 gal

20183

20184

20183

20184

20183

20184

Applies for:

Codes


Models

20183

HIDR-1/2x24P

20184

HIDR-1/2x50P

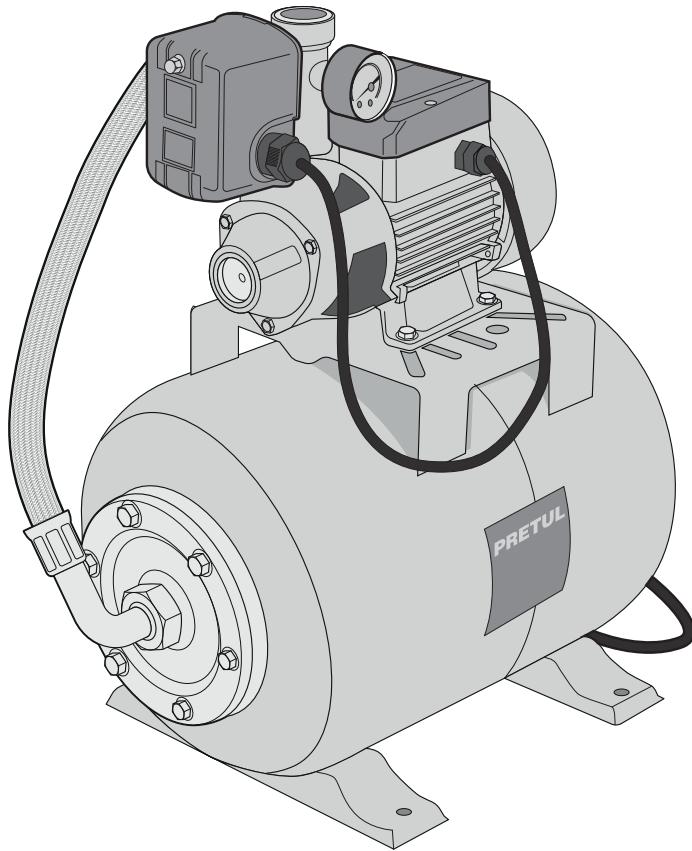

CAUTION



Read the user's manual thoroughly
before operating this tool.



| | |
|---|----|
| Technical specifications..... | 3 |
| Power requirements..... | 3 |
|  General power tools safety warnings..... | 4 |
|  Safety warnings for water pumps..... | 5 |
| Parts..... | 6 |
| Installation..... | 7 |
| Pressure switch..... | 8 |
| Start up..... | 8 |
| Maintenance..... | 9 |
| Troubleshooting..... | 9 |
| Notes..... | 10 |
| Authorized service centers..... | 11 |
| Warranty policy..... | 12 |

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations



RESPECT THE WORK CYCLES

30 min of work per 20 min of rest. Maximum 6 hours daily



ALWAYS ensure the pump has a constant water supply. Follow the installation instructions (page 7).



PURGE WITH WATER before turning on the equipment for the first time, when used occasionally or during maintenance (page 8).



Ensure the tank **PRESSURE** is between **18 PSI and 20 PSI (124 kPa and 138 kPa)** when installing the equipment.



If the equipment **STARTS CYCLING ON AND OFF** intermittently or after a slight water discharge, you may need to adjust the tank's air pressure. Please refer to (page 8).



Perform regular **MAINTENANCE** on your machine (page 9).

HIDR-1/2x24P

HIDR-1/2x50P

| | | |
|--|---|----------|
| Code • | 20183 | 20184 |
| Description • | Hydropneumatic pressure booster system | |
| Voltage • | 127 V ~ | |
| Frequency • | 60 Hz | |
| Current • | 3.5 A | |
| Speed • | 3450 RPM | |
| Inlet and Outlet diameter • | 1" x 1" | |
| Maximum suction depth • | 26.2 ft | |
| Maximum height (maximum value of total manometer height) • | 65.6 ft | |
| Maximum flow • | 11 gal/min | |
| Tank capacity • | 6.3 gal | 13.2 gal |
| Conductors • | 18 AWG | 18 AWG |
| Duty cycle • | 30 min of work per 20 min rest. Maximum 6 hours daily | |
| Insulation • | Class I | |

Power Cord Grips used in this product: Type "Y".

Tool Build Quality: Basic insulation

Thermal insulation on motor winding: Class F

WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

WARNING To prevent electric shock, the tool shall be grounded while in use. • Connect the plug into a correctly grounded outlet as shown in example A. Not all the outlets are properly grounded. If in doubt, verify with a qualified electrician. • If the outlet where you will connect the tool has two poles (2 orifices), UNDER ANY CIRCUMSTANCE, DO NOT REMOVE OR ALTER THE PLUG'S GROUND CONNECTOR. Use a temporary adaptor as shown in example B and always connect the ground conductor lug as shown.

CAUTION When using an extension cable, verify the gauge is enough for the power that the tool needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and the motor will overheat. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

| Ampere capacity | Number of conductors | Extension gauge | |
|--------------------------|----------------------|-----------------|-----------------|
| | | from 6' to 49' | higher than 49' |
| from 0 A and up to 10 A | | 18 AWG(*) | 16 AWG |
| from 10 A and up to 13 A | | 16 AWG | 14 AWG |
| from 13 A and up to 15 A | | 14 AWG | 12 AWG |
| from 15 A and up to 20 A | | 8 AWG | 6 AWG |
| 3 (one grounded) | | | |

WARNING When using power tools outdoors use a VOLTECK grounded extension cable labeled "Outdoors Use". These extension cables are specially manufactured for outdoors use and reduce the risk of electric shock.

WARNING All the cabling, power connections and the ground connection of the system shall comply with the OFFICIAL MEXICAN STANDARD NOM - 001 SEDE-2012, ELECTRICAL INSTALLATIONS (UTILIZATION) or with the local codes or regulations. Use the services of a qualified electrician.

⚠ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. Save all warnings and instructions for future references.

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause losing control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.



Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry or long hair may get caught in moving parts.



If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.



Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.

The correct tool delivers a better and safer job at the rate for which it was designed.



Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.



Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.



Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.



Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.



Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.



Service

Repair the tool in a TRUPER Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.



Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.

Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

Adequate uses

- The equipment is a stationary device designed to pump neutral, clean liquids with no abrasive solids suspended, with temperature not above 104 °F (104 °F for pumps with plastic drivers or diffusers). Any other type of use is inadequate.
- The device is in compliance with the security most updated requirements only if it is used the way it is designed. The device can only be used under the performance restrictions admitted.
- It shall not be used to pump explosives, fuels or aggressive materials or substances hazardous to health or sewage water.
- The device is not adequate for commercial or industrial use.
- The inadequate use or modifications to the device, the use of the components that are not approved or tested by the manufacturer may result in unforeseen damage to the device and the operator and relieves the manufacturer of legal liability.

CAUTION • Do not install the device outdoors or wet areas.

WARNING • Do not install the device in areas where there is danger of explosion or near combustible liquids or gases.

WARNING • Do not aim the water jet against the device or other electrical components. There is danger of death due to electric shock.



CAUTION • Double check the power cable is not making contact with the water running close to the device.

• Any repairs shall only be carried out in a TRUPER Authorized Service Center. Otherwise, there is danger of being exposed to an electric shock and voids the Warranty.

• The symbols adhered to the device shall not be removed nor be covered. All the information about the device that is not legible shall be replaced immediately.

• Read and obey the operations instructions before installing and starting the equipment. Any damage caused by omitting these instructive indications may damage the equipment and voids the Warranty.

• The pump shall be connected through a residual current switch designed with a short circuit current not higher than 30 mA

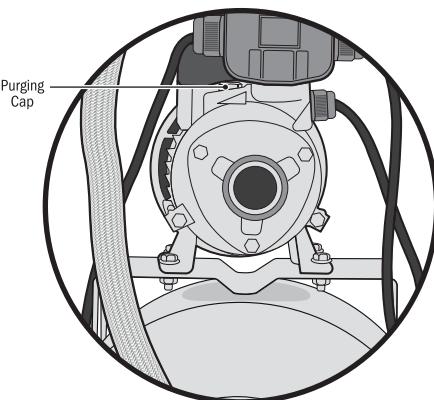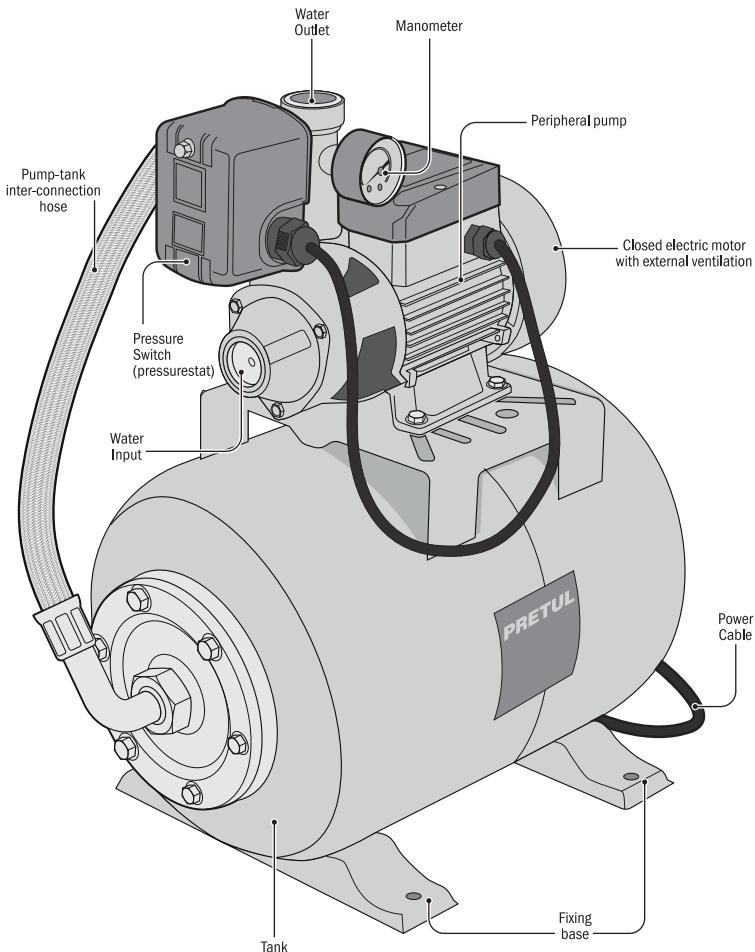


Set up

- The equipment shall be installed in a dry place, safeguarding from outdoors and allowing air flow for its correct ventilation (A). Environment temperature shall not exceed 104 °F.
- Use bolts to fix the equipment to a concrete base to prevent any vibration (B). The hydro pneumatic equipment shall be installed in horizontal position to assure good performance.
- The suction line pipes and pressure shall have supports to the wall or floor to prevent the tension transmission to the hydro pneumatic equipment (C).
- Use care not to damaging the hydro pneumatic equipment and / or pipes by tightening in excess the joints.
- Seal all the connections with thread sealing tape (Teflon). Leaks cause air flowing out and obstruct water output.

Suction line (input)

- The suction pipe diameter shall not be lower than the diameter or the water outlet of the hydro pneumatic equipment. If the suction height exceeds 13 ft, use a pipe with a smaller diameter.
- The suction pipe shall be totally hermetic. Its end shall be submerged into water at least half-a-meter. It is recommended to install a foot-valve (D). The elbow pipes shall be 90° towards the water intake of the hydro pneumatic equipment.
- The suction line shall be as short as possible, because the suction capacity lowers simultaneously with the increase of the line. The suction line shall go up regularly towards the equipment to prevent air pockets.

CAUTION • If these indications are not followed air and bubbles will close the flow and interfere with the good performance of the hydro pneumatic equipment.

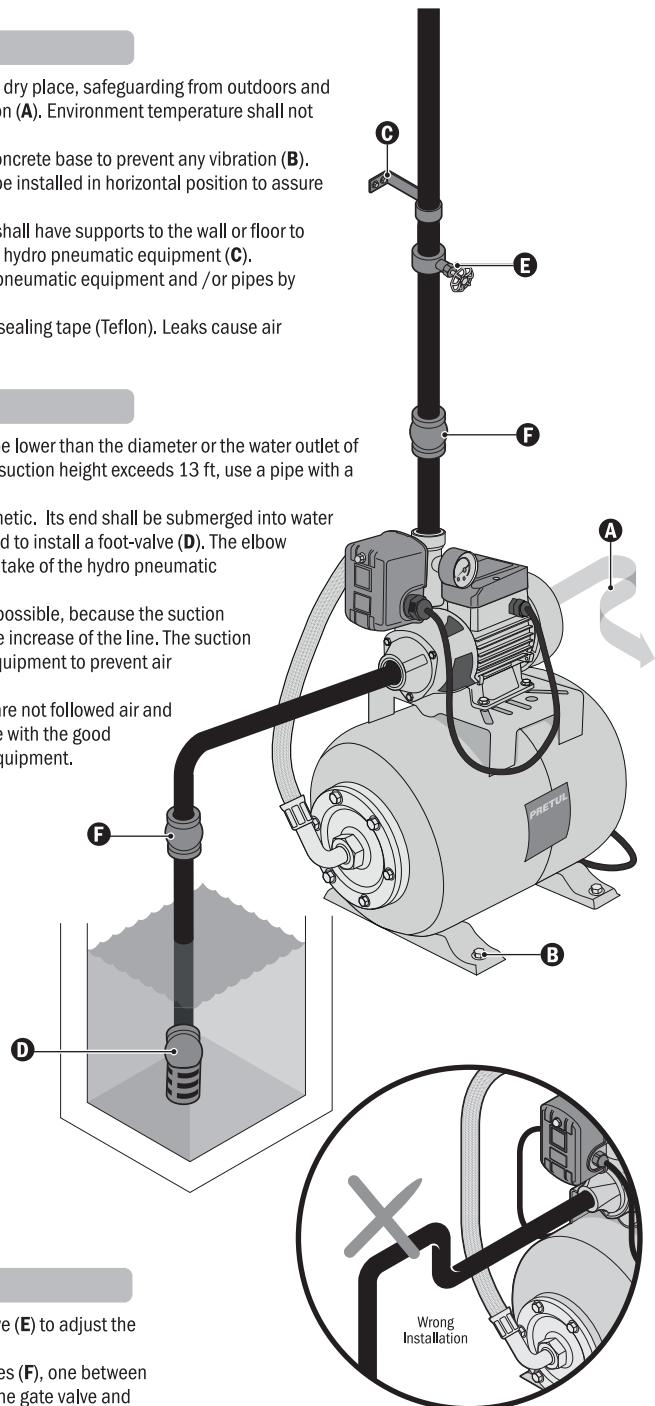

Pressure line (output)

- Adapt into the outlet pipe, a gate valve (E) to adjust the flow and pressure speed required.
- We recommend setting to check valves (F), one between the entry of the pressurized water and the gate valve and another one between the water depository or cistern and the water inlet.

Electric connection

- Ask a professional electrician to make the power connection to the power supply. Comply with the corresponding mandatory rules.
- The fixed installation shall incorporate a device to assure the omni-polar disconnection of the energy feed.
- Assure the electric requirements described in this Instructions and in the hydro equipment nameplate match with the power supply capacity values.
- The hydro pneumatic has one-phase motor protected against overload using a thermal device (over-current) set in the winding.

Pressure switch

- The hydro pneumatic machine is equipped with a pressure switch (pressurestat) that turns on the motor when the tank pressure is equal or lower than the starting pressure.
- The pressurestat turns off the motor when the pressure inside the tank increases up to the stopping pressure.

CAUTION • The pressurestat is programmed in the factory to correct the starting and closing pressure.


Preliminary Increase of the Filling Up Pressure

- If in the long term the equipment starts running after a slightly emptying water (approximately 0.5 L), the preliminary increase of the filling up pressure in the tank shall be reestablished:

1. Disconnect the feed.
2. Open the pressure line (open the male or nozzle) let the water flow out completely.
3. Unscrew and remove the drain cap to empty the tank. The air control valve is in the rear of the tank in the horizontal tank equipment and in the upper side in vertical tank equipment.
4. Connect the compressors' airline to the air control valve with a "pressure valve" and a pressure gauge.
5. Get to the filling up preliminary pressure: 18 PSI y 20 PSI (124 kPa y 138 kPa).
6. Connect the equipment again and check its functioning.

• To avoid issues, check regularly the pre-loading pressure in the tank. At this point, disconnect the equipment to the feeding source and open the feed key to eliminate the pressure from the system. Then, remove the cap (A) in the rear of the tank and measure the pre - charge pressure in the valve (B). Measure with an independent pressure gauge.

CAUTION • Only authorized staff shall open and install the pressurestat. Disconnect the equipment from the power source before opening the pressurestat.

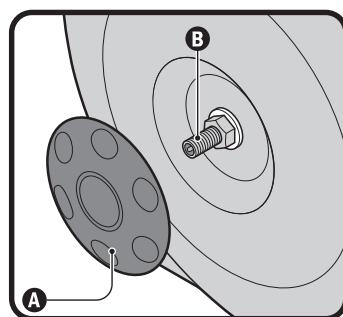


Start up

Purge


- The first time you start the hydro pneumatic equipment or after a long period of inactivity, or when air entered into the system, fill the pump with clean water before you start it.
- Remove the purge cap (A) and fill-up with water up to the orifice level.
- Screw the cap and start the hydro pneumatic equipment.

WARNING • Never start the hydro-pneumatic equipment when the pump is empty. If it happens accidentally, turn off the hydro-pneumatic, wait until it cools down and then fill the pump using water.

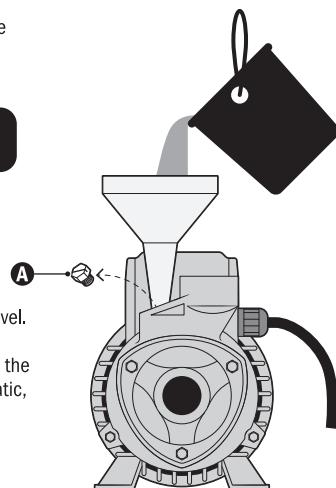


- The hydro-pneumatic equipment does not require maintenance only if the following caution measures are followed:
 - When there is risk of freezing, empty the pump completely removing the suction pipe (**B**). Remember to purge the pump before starting it again.
 - Check periodically the foot-valve (not included) and clean it if necessary.
 - If the hydro-pneumatic equipment will be inactive long periods of time is advisable to empty the pump completely and rinse with clean water.
 - If the pump shaft is not turning freely use a screwdriver to release it. Insert it in the orifice placed in the back of the pump (**C**).

⚠ WARNING • Disconnect the hydro pneumatic equipment from the energy supply before carrying out maintenance works.

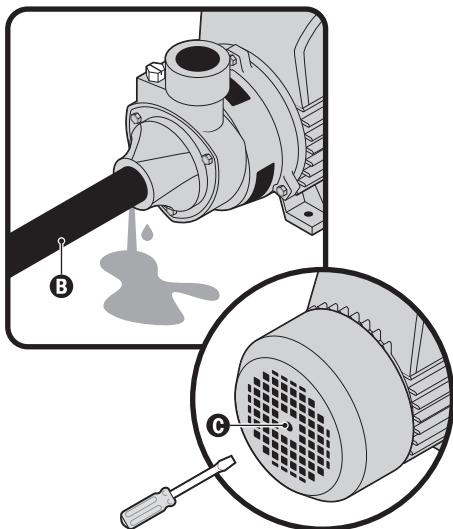

Troubleshooting

| Problem | Cause | Solution |
|--|---|--|
| The motor does not start. | <ul style="list-style-type: none">• There is no energy.• The driver is stuck. | <ul style="list-style-type: none">• Check the connections and voltage values.• Free it with a screwdriver (see page 8). |
| The motor turns without pumping water. | <ul style="list-style-type: none">• The foot-valve filter is clogged.• Excessive suction height.• Air in the admission. | <ul style="list-style-type: none">• Clean the filter.• Diminish the suction pipe length.• Check if the suction pipe is hermetic. Double-check the foot-valve is submerged at least 20". <p>It is necessary to purge the pump again (see page 8). Check the suction height.</p> |
| Insufficient flow speed. | <ul style="list-style-type: none">• The suction height is in the limit.• The foot-valve filter is partially clogged. | <ul style="list-style-type: none">• Diminish the suction pipe length.• Clean the foot-valve and the complete suction pipe if necessary. |
| The thermal overload protector in the motor was activated. | <ul style="list-style-type: none">• The motor is overheated.• The driver is stuck. | <ul style="list-style-type: none">• Check voltage and ventilation.• Free it with a screwdriver (see page 8). |

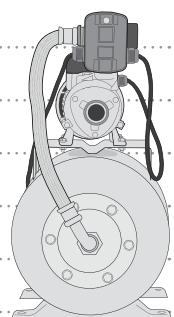

Authorized service centers

PRETUL

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers 800 690-6990 or 800 018-7873 to get information about the nearest Service Center.

| | |
|---------------------|--|
| AGUASCALIENTES | DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537 |
| BAJA CALIFORNIA | SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100 |
| BAJA CALIFORNIA SUR | FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115 |
| CAMPECHE | TORNILLERÍA Y FERRETERÍA AAA AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808 |
| CHIAPAS | FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083 |
| CHIHUAHUA | SUCURSAL CHIHUAHUA AV. SILVESTER TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052 |
| CIUDAD DE MÉXICO | FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861 |
| COAHUILA | SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23 |
| COLIMA | BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 1903 |
| DURANGO | TORNILLOS ÁGUILA, S.A. DE C.V. MAZURO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL: 618 817 1946 / 618 818 2844 |
| ESTADO DE MÉXICO | SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102 |
| GUANAJUATO | CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88 |
| GUERRERO | CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793 |
| HIDALGO | FERREPPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616 |
| JALISCO | SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90 |
| MICHOACÁN | FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858 |

| | |
|-----------------|--|
| MORELOS | FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931 |
| NAYARIT | HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540 |
| NUEVO LEÓN | SUCURSAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790 |
| OAXACA | FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092 |
| PUEBLA | SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86 |
| QUERÉTARO | ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544 |
| QUINTANA ROO | FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140 |
| SAN LUIS POTOSÍ | FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P.TEL.: 444 822 4341 |
| SINALOA | SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400 |
| SONORA | FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392 |
| TABASCO | SUCURSAL VILLAHERMOSA CALLE HELJO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244 |
| TAMAULIPAS | VM ORINGS Y REPARACIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552 |
| TLAXCALA | SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502 |
| VERACRUZ | LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484 |
| YUCATÁN | SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAH Y MULSAY, MPIO. UMAN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451 |

| Code | Model | Brand |
|-------|--------------|---------------|
| 20183 | HIDR-1/2X24P | PRETUL |
| 20184 | HIDR-1/2X50P | |

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China.
Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.

Stamp of the business. Delivery date:

